

[Manuals.plus](#) /

> [VCK](#) /

> VCK Cold Press Juicer (Model B0FX9G5D15) Instruction Manual

VCK B0FX9G5D15

VCK Cold Press Juicer Instruction Manual

Model: B0FX9G5D15

INTRODUCTION

Thank you for choosing the VCK Cold Press Juicer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

This juicer is designed for extracting juice from various fruits, vegetables, and leafy greens using slow masticating technology to preserve nutrients.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils away from moving parts during operation.
- Ensure the appliance is properly assembled before use.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use outdoors.

PARTS OVERVIEW

Familiarize yourself with the components of your VCK Cold Press Juicer:

- **Pusher:** Used to guide ingredients into the feed chute.

- **Feed Chute:** Large 5.12-inch opening for inserting fruits and vegetables.
- **Juicing Bowl:** Collects the extracted juice.
- **Auger (Masticating Screw):** Slowly crushes and presses ingredients.
- **Filter/Strainer:** Separates pulp from juice.
- **Pulp Outlet:** Discharges dry pulp.
- **Juice Outlet:** Dispenses fresh juice.
- **Motor Base:** Houses the quiet 250W motor and control panel.
- **Cleaning Brush:** For easy cleaning of components.

Note: A detailed parts diagram is not available in this manual.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash all detachable parts (juicing bowl, auger, filter, pulp/juice outlets, pusher) with warm soapy water. Rinse thoroughly and dry. The item is **not** dishwasher safe.
3. **Assemble:**
 - Place the juicing bowl onto the motor base, ensuring it locks securely.
 - Insert the filter into the juicing bowl.
 - Insert the auger into the center of the filter.
 - Attach the feed chute assembly, twisting until it locks into place.
 - Position the juice collection cup under the juice outlet and the pulp collection cup under the pulp outlet.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

1. **Prepare Ingredients:** Wash fruits and vegetables thoroughly. For the large 5.12-inch feed chute, most ingredients can be inserted whole or with minimal chopping. Remove large seeds, pits, and hard skins (e.g., pineapple skin, citrus peels).
2. **Start Juicer:** Press the "ON" button on the motor base. The juicer will begin operating at a slow speed.
3. **Feed Ingredients:** Slowly feed prepared ingredients into the feed chute. Use the pusher only if necessary to gently guide ingredients down. *Do not force ingredients into the chute.*
4. **Collect Juice and Pulp:** Fresh juice will flow from the juice outlet into the juice cup, and dry pulp will be expelled from the pulp outlet into the pulp cup.
5. **Continuous Operation:** The juicer is designed for continuous operation, but it is recommended to give it a short break after 20-30 minutes of continuous use to prolong motor life.
6. **Stop Juicer:** Once juicing is complete, press the "OFF" button.

Tips for Best Results:

- Alternate between soft and hard ingredients for optimal juice extraction.
- For leafy greens, roll them into a tight ball before feeding.
- Juice immediately after preparation for maximum nutrient retention.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your juicer.

1. **Unplug:** Always unplug the juicer from the power outlet before cleaning.
2. **Disassemble:** Disassemble the juicer in reverse order of assembly.
3. **Rinse:** Rinse all detachable parts under running water immediately after use to prevent pulp from drying and sticking.
4. **Wash:** Use the provided cleaning brush and warm soapy water to thoroughly clean the filter, auger, juicing bowl, and feed chute. Pay special attention to the mesh of the filter.
5. **Motor Base:** Wipe the motor base with a damp cloth. *Never immerse the motor base in water.*
6. **Dry:** Dry all parts completely before reassembling or storing.
7. **Storage:** Store the assembled juicer in a clean, dry place.

Note: The VCK Cold Press Juicer parts are **not** dishwasher safe. Hand washing is required.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--------------------------------|--|---|
| Juicer does not turn on. | Not plugged in. Parts not assembled correctly. Power outage. | Ensure the power cord is securely plugged into a working outlet. Check that all parts are correctly assembled and locked into place. Verify power supply. |
| Juicer stops during operation. | Overload protection activated. Ingredients jammed. | Turn off, unplug, and let the motor cool down for 30 minutes. Turn off, unplug, disassemble, clear any blockages, and reassemble. |
| Low juice yield or wet pulp. | Ingredients fed too quickly. Filter clogged. | Feed ingredients slowly and allow the auger to process them fully. Clean the filter thoroughly. |
| Loud noise or vibration. | Improper assembly. Hard object in juicer. | Disassemble and reassemble all parts correctly. Turn off, unplug, and check for any foreign objects. |

SPECIFICATIONS

| | |
|-------------------------|----------------------------------|
| Model: | B0FX9G5D15 |
| Brand: | VCK |
| Motor Power: | 250W (Quiet Motor) |
| Feed Chute Size: | 5.12 inches |
| Technology: | Slow Masticating |
| Material: | Stainless Steel (Blade Material) |

| | |
|-------------------------|--------------------|
| Power Source: | Battery Powered |
| Dishwasher Safe: | No |
| Recommended Use: | Fruits, Vegetables |

WARRANTY AND SUPPORT

Specific warranty information is not provided in this manual. For warranty details, product support, or to purchase replacement parts, please contact VCK customer service through their official website or the retailer where the product was purchased.

Keep your purchase receipt as proof of purchase for any warranty claims.

