

[Manuals.plus](#) /

> [moov](#) /

> Mooov 477365 HiFi Micro System with Turntable User Manual

mooov 477365

Mooov 477365 HiFi Micro System with Turntable User Manual

Model: 477365

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Mooov 477365 HiFi Micro System. Please read this manual thoroughly before using the device and retain it for future reference. The Mooov 477365 is a versatile audio system featuring a turntable, CD player, Bluetooth connectivity, FM radio, USB playback, and AUX-IN capabilities, designed to provide a comprehensive audio experience.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following precautions:

- **Power Source:** Connect the unit only to an AC outlet of the specified voltage (230 Volts).
- **Ventilation:** Do not block ventilation openings. Ensure adequate space around the unit for proper airflow.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids, such as vases, on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Cleaning:** Unplug the unit from the wall outlet before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Turntable Stylus:** Handle the turntable stylus with care to avoid damage and ensure optimal sound quality.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Mooov 477365 HiFi Micro System Unit
- Power Supply Cable
- Remote Control

- User Manual (this document)

4. PRODUCT OVERVIEW

Front Panel



Image Description: This image displays the front panel of the Mooov 477365 HiFi Micro System. Visible components include the CD tray on the left, a central digital display showing 'FM 105.5 MHz', a volume knob below the display, and an array of control buttons (MODE, PROG, REPEAT, Skip/Scan) to the right. On the far left, a USB port and an AUX-IN jack are present. A power/tuning knob is on the far right.

Rear Panel



Image Description: This image shows the rear panel of the Mooov 477365 HiFi Micro System. It features two RCA output jacks, labeled 'R' and 'L' for right and left audio channels, and a DC IN 9V 2A power input port. A power cable is also visible extending from the unit.

Remote Control



Image Description: This image displays the compact black remote control for the Moov 477365 system. It features buttons for power, clock, various playback controls (skip, play/pause, stop), memory functions (MEM-, MEM+), and direct source selection buttons for AUX, FM, VINYL, CD, and USB.

5. SETUP

5.1 Unpacking

- Carefully remove the unit and all accessories from the packaging.
- Retain the packaging for future transport or storage.

5.2 Placement

- Place the micro system on a stable, flat surface.
- Ensure there is sufficient space around the unit for ventilation.
- Avoid placing the unit near strong magnetic fields or direct sunlight.

5.3 Power Connection

- Connect the power supply cable to the DC IN port on the rear of the unit.
- Plug the other end of the power cable into a standard 230V AC wall outlet.

5.4 Connecting External Devices (Optional)

- **RCA Output:** To connect to an external amplifier or powered speakers, use RCA cables (not included) to connect the R and L RCA output jacks on the rear of the micro system to the corresponding input jacks on your external audio equipment.
- **AUX-IN:** To connect an external audio player (e.g., MP3 player, smartphone) via a 3.5mm audio cable (not included), plug it into the AUX-IN jack on the front panel.

6. OPERATING INSTRUCTIONS

6.1 General Controls

- **Power On/Off:** Press the Power button on the unit or remote control.
- **Volume Control:** Rotate the VOLUME knob on the front panel or use the volume buttons on the remote control.
- **Mode Selection:** Press the MODE button on the unit or remote to cycle through available sources: Turntable (VINYL), CD, Bluetooth (BLUE), FM Radio, USB, AUX-IN.

6.2 Turntable Operation



Image Description: This image provides a close-up view of the turntable section of the micro system. A black vinyl record is placed on the platter, and the tonearm with its stylus is positioned over the record, ready for playback. The clear dust cover is open.

1. Lift the dust cover.
2. Place a vinyl record on the turntable platter.
3. Select the appropriate speed (33, 45, or 78 RPM) using the speed selector switch, usually located near the platter.
4. Release the tonearm lock.
5. Gently lift the tonearm using the cueing lever and position the stylus over the desired track of the record.
6. Lower the tonearm slowly onto the record using the cueing lever. Playback will begin.
7. The turntable features an Auto-Stop function which stops the platter rotation at the end of the record. The tonearm must be returned manually to its rest.
8. When finished, lift the tonearm, return it to its rest, and engage the tonearm lock.

6.3 CD Player Operation

1. Press the MODE button until 'CD' is displayed.
2. Press the EJECT button to open the CD tray.
3. Place a CD with the label side facing up into the tray.
4. Press the EJECT button again to close the tray. The CD will load and begin playing automatically or display the total number of tracks.
5. Use the Play/Pause, Stop, Skip Forward/Backward buttons for playback control.

6.4 Bluetooth Connectivity

1. Press the MODE button until 'BLUE' (Bluetooth) is displayed. The unit will enter pairing mode, indicated by a flashing Bluetooth icon or text on the display.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for available devices and select 'Mooov 477365' (or similar name) from the list.
4. Once paired, the display will show a steady Bluetooth icon or text, and you can play audio from your device through the micro system.

6.5 FM Radio Operation

1. Press the MODE button until 'FM' is displayed.
2. To automatically scan and save stations, press and hold the SCAN button. The unit will scan for available FM stations and store them in memory.
3. To manually tune, use the TUNING knob or the Skip Forward/Backward buttons to find your desired frequency.
4. Use the MEM- and MEM+ buttons on the remote to navigate through saved stations.

6.6 USB Playback

1. Insert a USB flash drive into the USB port on the front panel.
2. Press the MODE button until 'USB' is displayed.
3. The unit will automatically detect and begin playing compatible audio files from the USB drive.
4. Use the Play/Pause, Stop, Skip Forward/Backward buttons for playback control.

6.7 AUX-IN Usage

1. Connect your external audio device to the AUX-IN jack on the front panel using a 3.5mm audio cable.
2. Press the MODE button until 'AUX' is displayed.
3. Start playback on your external device. The audio will be routed through the micro system's speakers.

7. MAINTENANCE

7.1 Cleaning

- Always unplug the unit before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- For the dust cover, use a soft, slightly damp cloth, then dry thoroughly. Avoid harsh chemicals.

7.2 Turntable Stylus Care

- Regularly inspect the stylus for dirt or damage.

- Clean the stylus gently with a soft brush, moving from back to front.
- Replace the stylus if it is bent or worn to prevent damage to your records.

8. TROUBLESHOOTING

If you encounter issues, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active	Ensure power cable is securely connected; Test the outlet with another device
No sound	Volume too low; Incorrect source selected; External device not playing	Increase volume; Select correct input mode; Ensure external device is playing
Turntable not spinning	Power off; Belt dislodged; Auto-stop engaged	Ensure unit is powered on; Check turntable belt; Place tonearm on record to start platter
Bluetooth not pairing	Unit not in pairing mode; Device too far; Bluetooth off on mobile device	Ensure unit is in 'BLUE' mode; Move device closer; Enable Bluetooth on your mobile device
CD not playing	CD inserted incorrectly; CD scratched/dirty; Incorrect mode selected	Insert CD label-side up; Clean or replace CD; Select 'CD' mode

9. SPECIFICATIONS



Image Description: This diagram illustrates the physical dimensions of the Mooov 477365 HiFi Micro System. The width is 427 mm, the depth is 370 mm. The height is shown as 135 mm when the dust cover is closed and 330 mm when the dust cover is fully open.

Feature	Specification
Model Number	477365
Power Output	50 Watts
Power Supply	230 Volts AC (Cable electrical)
Dimensions (L x W x H)	43 x 37 x 18 cm (17 x 14.6 x 7.1 inches)
Weight	4.7 kg (10.4 lbs)
Material	Wood
Connectivity	Bluetooth, USB, AUX-IN, RCA Output
Turntable Speeds	33, 45, 78 RPM
Compatible Devices	MP3 Player, Smartphone, Tablet
Number of Speakers	2 (Stereo)

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0FX9X5BNJ>

More documents and user manuals: <https://manuals.plus/>