



Manuals.plus /

› Midea /

› Midea 60cm 12-Place Setting Dishwasher (Model MFD60S090W.1-ES) - User Manual

Midea MFD60S090W.1-ES

Midea 60cm 12-Place Setting Dishwasher (Model MFD60S090W.1-ES) - User Manual

This manual provides essential information for the installation, operation, maintenance, and troubleshooting of your Midea dishwasher.

1. SAFETY INFORMATION

Please read this manual carefully before using your appliance. Keep it for future reference. Always follow basic safety precautions to reduce the risk of fire, electric shock, and injury. Ensure the appliance is properly grounded and installed by a qualified professional.

2. PRODUCT OVERVIEW

The Midea 60cm dishwasher is designed for efficient and convenient dishwashing. It features a 12-place setting capacity, multiple wash programs, and a quiet operation.



Image: Front view of the Midea 60cm 12-place setting dishwasher.

Key Features:

- **Capacity:** 12 place settings, suitable for families and daily use.
- **Installation Type:** Free-standing, allowing flexible placement in your kitchen.
- **Noise Level:** 49 dB, ensuring quiet operation.
- **Special Functions:** Hygiene Care, Rapid Wash, Half Load, ECO Mode, Delay Timer.
- **Antibacterial Filter:** For enhanced hygiene.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove the dishwasher from its packaging. Inspect for any damage during transit. Keep packaging materials away from children.

3.2 Placement

This is a free-standing dishwasher. Ensure it is placed on a stable, level surface. Adjustable feet are included to fine-tune the height and ensure stability.



Image: The dishwasher installed in a modern kitchen, highlighting its free-standing design.

3.3 Dimensions

Ensure adequate space for installation. The product dimensions are:

Depth: 60 cm

Width: 59.8 cm

Height: 84.5 cm

DIMENSIONES DEL PRODUCTO

Conoce las medidas de nuestro lavavajillas



Image: Diagram showing the dimensions of the Midea dishwasher (Depth: 60cm, Width: 59.8cm, Height: 84.5cm).

3.4 Water and Electrical Connections

Connect the water inlet and outlet hoses according to local plumbing regulations. Ensure the electrical connection meets the appliance's requirements (220 Volts). It is recommended to have a qualified technician perform these connections.

4. OPERATING INSTRUCTIONS

4.1 Loading the Dishwasher

Arrange dishes to allow water to reach all surfaces. Avoid overcrowding. The dishwasher has a capacity for 12 place settings.



Image: Interior view of the Midea dishwasher showing the upper and lower racks, and cutlery basket, loaded with dishes.

Your browser does not support the video tag.

Video: A user demonstrates loading dirty dishes into the dishwasher and the clean results. This video is provided by PACERIN EU (Seller).

4.2 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. If using rinse aid, ensure the dispenser is filled to improve drying performance and prevent water spots.

4.3 Selecting a Wash Program

The dishwasher offers 4 wash programs:

- **ECO Program:** For daily use, optimizing water and energy consumption.
- **Sanitization+ Program:** For a deeper, more hygienic clean, effective against viruses (99.9% effective at 72°C).
- **90-Minute Program:** For good results in less time.
- **Rapid Program:** For lightly soiled dishes, offering effective cleaning in a shorter cycle (e.g., 30 minutes).



Image: Control panel of the Midea dishwasher showing the selection options for the 4 wash programs: Intensivo, Higiene, ECO, and 90 min.

4.4 Special Functions

- **Half Load Function:** Use when the dishwasher is not full to save water and energy while maintaining effective cleaning.
- **Delayed Start (up to 9 hours):** Program the dishwasher to start at a later time, useful for off-peak electricity hours or having dishes ready when needed.

DESCRIPCIÓN DEL PRODUCTO

Perfecto para lavar toda la vajilla

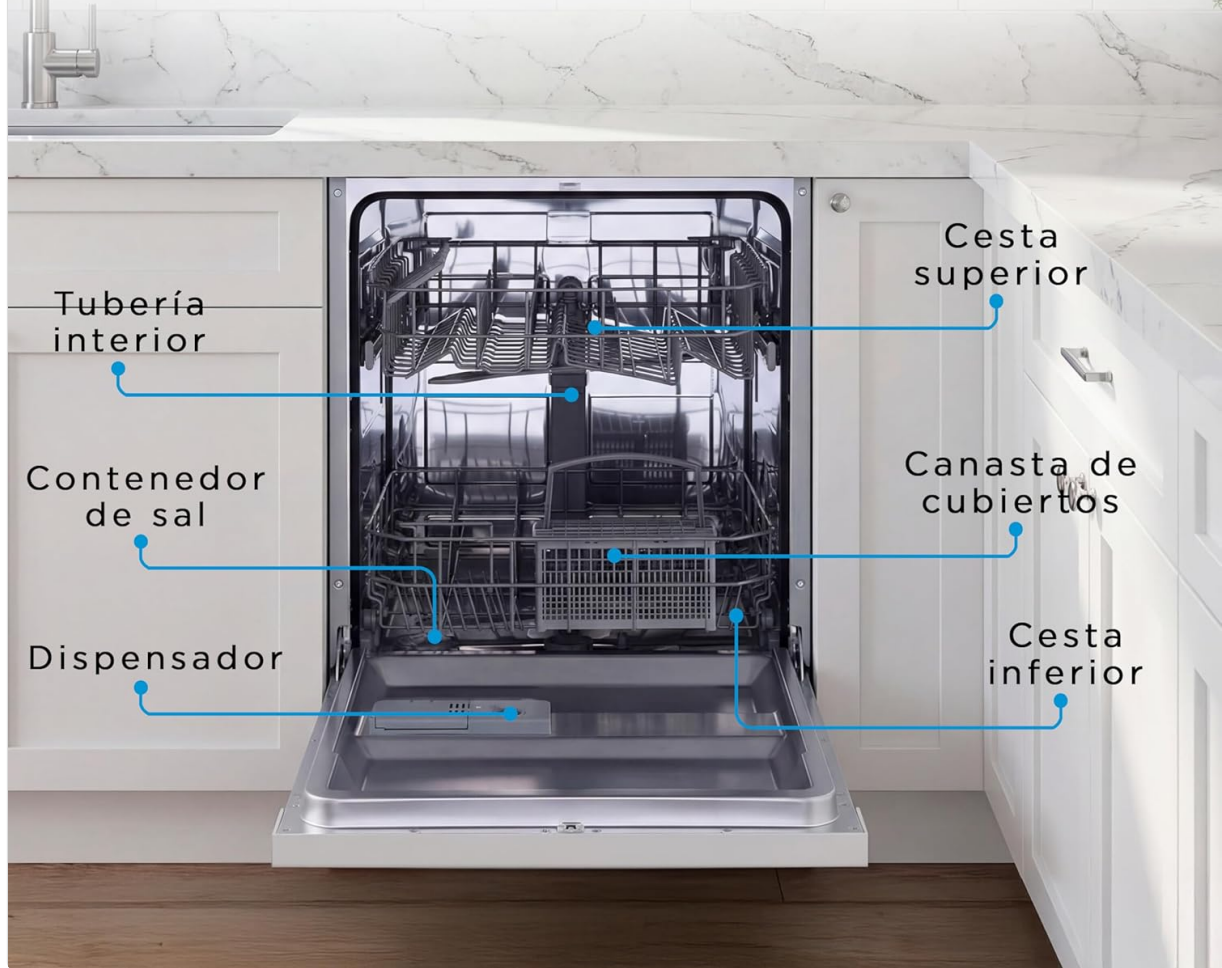


Image: Visual representation of the half-load function, indicating water and energy savings.

VERSATILIDAD DE INSTALACIÓN

Perfecto para usar libre o empotrado



Image: Visual representation of the delayed start function, showing a 9-hour delay option.

4.5 Starting a Wash Cycle

Close the dishwasher door firmly. Select your desired program and any special functions. Press the Start button to begin the cycle.

5. MAINTENANCE AND CARE

5.1 Cleaning the Filters

Regularly clean the dishwasher filters to ensure optimal performance and prevent blockages. Refer to the detailed instructions in the full user manual for filter removal and cleaning procedures.

Galardonado con el Sello Dorado de Higiene contra Virus nivel 3 para una seguridad garantizada



Image: Close-up of the dishwasher interior, highlighting the antibacterial filter and its hygiene benefits.

5.2 Exterior and Interior Cleaning

Wipe the exterior with a soft, damp cloth. For the interior, periodically run a dishwasher cleaning cycle with a specialized cleaner to remove grease and limescale buildup.

5.3 Salt Refill

The dishwasher requires special salt to soften water and prevent limescale. Refill the salt dispenser when the indicator light on the control panel illuminates.

6. TROUBLESHOOTING

If your dishwasher is not functioning correctly, consult the following common issues before contacting support:

- **Dishwasher not starting:** Check power supply, ensure the door is fully closed, and the delayed start function is not active.
- **Dishes not clean:** Verify correct loading, sufficient detergent, and clean filters. Ensure spray arms are not blocked.
- **Water remaining in the bottom:** Check for clogged filters or drain hose obstruction.

- **Unusual noises:** Ensure dishes are not obstructing spray arms or other moving parts.

For more detailed troubleshooting, refer to the complete user manual.

7. SPECIFICATIONS

Feature	Detail
Model Number	MFD60S090W.1-ES
Brand	Midea
Dimensions (D x W x H)	60 cm x 59.8 cm x 84.5 cm
Weight	38.5 kg
Capacity	12 Place Settings
Installation Type	Free-standing
Noise Level	49 Decibels
Voltage	220 Volts
Control Type	Push Button
Special Features	Hygiene Care, Rapid Wash, Half Load, ECO Mode, Delay Timer
Included Components	User Manual

Ficha de información del producto

REGLAMENTO DELEGADO (UE) 2019/2017 DE LA COMISIÓN en lo relativo al etiquetado energético de los aparatos de refrigeración domésticos

Nombre o marca comercial del proveedor: MIDEA

Dirección del proveedor: Midea Italia S.r.l. a socio unico, Viale Luigi Bodio 29/37, 20158 Milan, IT

Identificador del modelo: MFD60S090W.1-ES

Parámetros generales del producto:

Parámetro	Valor	Parámetro	Valor	
Capacidad asignada ^(a) (ps)	12	Dimensiones en cm	Altura	85
			Anchura	60
			Profundidad	60
IEE ^(a)	59,9	Clase de eficiencia energética ^(a)	E	
Índice de eficiencia del lavado ^(a)	1,125	Índice de eficiencia del secado ^(a)	1,065	
Consumo de energía en kWh [por ciclo], sobre la base del programa eco utilizando una carga con agua fría. El consumo real de energía dependerá de cómo se utilice el aparato.	0,923	Consumo de agua en litros [por ciclo], sobre la base del programa eco. El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza del agua.	11,0	
Duración del programa ^(a) (h:min)	3:50	Tipo	de libre instalación	
Ruido acústico aéreo emitido ^(a) (dB(A) re 1 pW)	52	Clase de ruido acústico aéreo emitido ^(a)	D	
Modo apagado (W) (si procede)	0,49	Modo preparado (W) (si procede)	-	
Inicio aplazado (W) (si procede)	-	Modo preparado en red (W) (si procede)	-	

Duración mínima de la garantía ofrecida por el proveedor: 24 meses

Información adicional: libretto istruzioni

Enlace al sitio web del proveedor, en el que se encuentra la información contemplada en el punto 6 del anexo II del Reglamento (UE) 2019/2022 de la Comisión: www.midea.com

^(a) para el programa «eco».

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

This product comes with a **3-year manufacturer's warranty**.

8.2 Customer Support

For any questions, assistance, or technical support, please contact Midea customer service:

Phone: +34 614 230 356

Email: support@pacerin.com

You can also use the Amazon messaging service for support.

¿TIENES DUDAS O NECESITAS AYUDA?

Mensajería de Amazon

+34 614 230 356

support@pacerin.com

Midea

MANCHESTER CITY

Image: Contact information for Midea customer support, including phone, email, and Amazon messaging.