

Gudsunal I3616-2

Gudsunal I3616-2 2-Burner Built-in Induction Cooktop User Manual

Model: **I3616-2** | Brand: **Gudsunal**

1. IMPORTANT SAFETY INSTRUCTIONS


Please read all instructions carefully before using your new induction cooktop. Keep this manual for future reference. Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual for assistance.

- **Electrical Safety:** Ensure the cooktop is connected to a properly grounded electrical outlet with the correct voltage (220-240V) and current capacity. Do not use extension cords or adapters.
- **Child Safety:** Keep children away from the cooktop during operation and when it is cooling down. Utilize the child lock feature to prevent accidental activation.
- **Hot Surface Warning:** The cooktop surface will remain hot after use. Do not touch the surface until the residual heat indicator ('H') has turned off.
- **Proper Cookware:** Only use induction-compatible cookware with a flat bottom. Non-compatible cookware will not heat up.
- **Ventilation:** Ensure adequate ventilation around the cooktop during installation and operation to prevent overheating.
- **Cleaning:** Always disconnect the power supply before cleaning. Allow the cooktop to cool completely before cleaning.


2. WHAT'S IN THE BOX

Verify that all components are present in your package before proceeding with installation.

Qu'y a-t-il dans la boîte

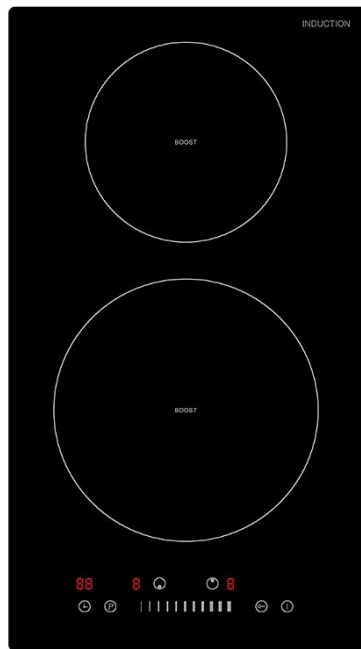

Plaque de cuisson

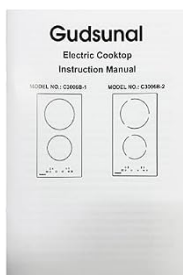

Manuel d'utilisation



Ruban d'étanchéité



Kits d'installation

This image displays the items included in your package: the Gudsunal induction cooktop, a user manual, sealing tape, and installation brackets with screws.

- Gudsunal 2-Burner Induction Cooktop
- User Manual
- Sealing Tape
- Installation Kits (brackets and screws)

3. INSTALLATION AND SETUP

The Gudsunal I3616-2 induction cooktop is designed for built-in installation. Professional installation is recommended.

3.1 Dimensions and Cutout

Ensure your countertop has the correct cutout dimensions for a proper fit.

Gudsunal

Votre cuisine, réinventée!

Depuis 2009



This diagram illustrates the product dimensions (290mm x 520mm x 58mm) and the required cutout dimensions for built-in installation (270mm x 490mm).

- **Product Dimensions (L x W x H):** 52 cm x 29 cm x 5.8 cm
- **Cutout Dimensions (L x W):** 49 cm x 27 cm

3.2 Electrical Connection

The cooktop requires a 220-240V electrical supply. Consult a qualified electrician for proper wiring and connection to ensure safety and compliance with local regulations.

3.3 Mounting the Cooktop

1. Place the sealing tape around the edges of the cooktop opening to create a seal against moisture.
2. Carefully lower the cooktop into the cutout opening.
3. Secure the cooktop from underneath using the provided installation brackets and screws. Ensure it is firmly seated and level.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the touch controls for efficient and safe cooking.

4.1 Control Panel Overview

Précision avec contrôle tactile

Réglage de la chaleur facile du bout des doigts



The touch control panel allows for precise temperature adjustment. Slide your finger along the control bar to set the desired power level from 1 to 9.

4.2 Turning On/Off

- To turn on: Press and hold the Power button (P) for a few seconds. The display will show '0'.
- To turn off: Press and hold the Power button (P) again.

4.3 Selecting a Cooking Zone and Power Level

1. Place suitable cookware on the desired cooking zone.
2. Press the corresponding cooking zone selection button.
3. Adjust the power level from 1 to 9 using the sliding touch control.

4.4 Boost Function

Capteur de poêle intégré

Il est utilisé pour détecter la présence d'une casserole dans la zone de chauffage. Lorsqu'une casserole est détectée, la table de cuisson à induction commencera à chauffer, assurant ainsi la sécurité et l'efficacité énergétique.

Activate the Boost function for a rapid increase in heating power for up to 5 minutes, ideal for quickly boiling water or searing.

The Boost function provides maximum power for rapid heating. Press the 'Boost' button **B**) after selecting a cooking zone. This function operates for up to 5 minutes and then automatically reverts to a lower power setting.

4.5 Timer Function

Fonction de minuterie

99 minutes, rappel de cuisson et arrêt précis.

Simplifie et sécurise votre cuisine.

The cooktop features a timer function, allowing you to set cooking durations up to 99 minutes for precise control and automatic shut-off.

To set the timer, press the Timer button **P**) and use the '+' and '-' controls to adjust the desired cooking time (up to 99 minutes). The cooktop will automatically turn off the selected cooking zone when the timer expires.

5. SAFETY FEATURES

Your Gudsunal induction cooktop is equipped with several safety features to ensure a secure cooking environment.

Protection de sécurité multiple



Verrouillage enfant



Indication de
chaleur résiduelle



Coupe de sécurité
automatique



Capteur de
casserole

This image highlights the integrated safety features of the cooktop, such as child lock, residual heat indicator, automatic safety cut-off, and pan detection.

5.1 Child Lock

Fonction de verrouillage pour enfants

Verrouille les boutons tactiles pendant l'utilisation ou lorsqu'ils ne sont pas utilisés, empêchant ainsi les enfants ou les animaux de compagnie de les toucher accidentellement et assurant leur sécurité.



The child lock feature prevents accidental operation by locking the touch controls, ensuring safety in the kitchen. Activate the child lock by pressing the lock button. This will disable all touch controls, preventing accidental changes to settings or activation by children.

5.2 Residual Heat Indicator



After cooking, an 'H' will appear on the display if the cooking zone is still hot, warning against touching the surface. After a cooking zone is turned off, an 'H' will appear on the display to indicate that the surface is still hot. Do not touch the surface until the 'H' disappears.

5.3 Automatic Safety Shut-off



The cooktop is equipped with an automatic safety shut-off that activates after a preset time if a cooking zone is left unattended, preventing overheating.

If a cooking zone is left operating for an extended period without any adjustments, the cooktop will automatically shut off as a safety measure.

5.4 Pan Detection System



Ce panneau de verre a une excellente résistance aux hautes températures et est fabriqué en matériau incassable.

The integrated pan detection system ensures that heating only occurs when a suitable ferromagnetic pot or pan is placed on the cooking zone, enhancing safety and energy efficiency.

The cooktop will only generate heat when an induction-compatible pot or pan is placed on the cooking zone. If no pan is detected or an unsuitable pan is used, the cooktop will not activate heating.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life and appearance of your induction cooktop.

- **Daily Cleaning:** Wipe the ceramic glass surface with a soft cloth and mild detergent after each use, once the cooktop has cooled down.
- **Stubborn Stains:** For burnt-on food or stubborn stains, use a ceramic hob scraper or a specialized ceramic hob cleaner. Follow the product instructions carefully.
- **Avoid Abrasives:** Do not use abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the glass surface.
- **Control Panel:** Wipe the touch control panel with a soft, damp cloth. Ensure it is dry before operating the cooktop.
- **Ventilation Openings:** Keep the ventilation openings underneath and around the cooktop clear of obstructions to ensure proper airflow.

7. TROUBLESHOOTING

If you encounter any issues with your cooktop, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Child lock activated.	Check power connection and circuit breaker. Deactivate child lock by pressing and holding the lock button.
Cooking zone not heating.	Non-compatible cookware; No cookware detected.	Use induction-compatible cookware. Ensure the pan is centered on the cooking zone.
Display shows 'H'.	Residual heat.	This is normal. The surface is still hot. Do not touch. It will disappear when cooled.

Problem	Possible Cause	Solution
Unusual noise during operation.	Normal fan noise; Cookware vibration.	A low humming or buzzing sound is normal for induction cooktops due to the cooling fan and electromagnetic fields. Some cookware may vibrate slightly.
Cooktop shuts off unexpectedly.	Automatic safety shut-off; Overheating.	Ensure cooking zone was not left unattended for too long. Check for proper ventilation. Allow to cool before restarting.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Brand	Gudsunal
Model Number	I3616-2
Number of Heating Elements	2
Color	Glossy Black
Power Source	Electric Cable
Fuel Type	Electric
Special Features	Automatic shut-off, Timer, Adjustable temperature, Safety lock, Hot surface indicator
Heating Surface Material	Ceramic Glass
Material	Metal
Product Dimensions (D x W x H)	52 cm x 29 cm x 5.8 cm
Burner Type	Induction
Control Type	Touch
Installation Type	Drop-in
Voltage	220 Volts
Wattage	3600 Watts
Weight	5 Kilograms
Country of Origin	China

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Gudsunal induction cooktop comes with a **2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Gudsunal customer support through your retailer or the official Gudsunal website. Have your model number (I3616-2) and purchase date ready when contacting support.