



[Manuals.plus](#) /

› [Trueque](#) /

› Trueque Wireless Mouse M01\_19 User Manual

## Trueque M01\_19

# Trueque Wireless Mouse M01\_19 User Manual

Comprehensive instructions for your Trueque 2.4GHz Ergonomic Wireless Mouse.

## INTRODUCTION

---

Thank you for choosing the Trueque Wireless Mouse. This manual provides detailed instructions to help you set up, operate, and maintain your new ergonomic wireless mouse. Designed for comfort and efficiency, this mouse features a stable 2.4GHz wireless connection, adjustable DPI levels, and six responsive buttons for enhanced productivity.



**Figure 1: Trueque Wireless Mouse.** A general view of the Trueque Wireless Mouse in Space Gray.

## PRODUCT OVERVIEW

---

Familiarize yourself with the components and design features of your Trueque Wireless Mouse.

### Mouse Components




**Figure 2: Mouse Components.** This image shows the top and bottom views of the Trueque Wireless Mouse, highlighting key components such as the DPI Switch Button, Forward Button, Back Button, Anti-slip Pad, AA Battery compartment, Optical Sensor, Power Switch, and the USB Receiver storage slot.

1. **DPI Switch Button:** Adjusts cursor sensitivity.
2. **Forward Button:** Navigates forward in web browsers or file explorers.
3. **Back Button:** Navigates backward in web browsers or file explorers.
4. **Anti-slip Pad:** Provides stability during use.
5. **1 AA Battery (Not Included):** Power source for the mouse.
6. **Optical Sensor:** Tracks mouse movement.
7. **Power Switch:** Turns the mouse on or off.

8. **USB Receiver (Stored In The Mouse):** Connects the mouse wirelessly to your computer.

### Ergonomic Design

The mouse features a natural curved shape and a skin-friendly silicone grip to minimize thumb and wrist strain, ensuring comfort during extended use.

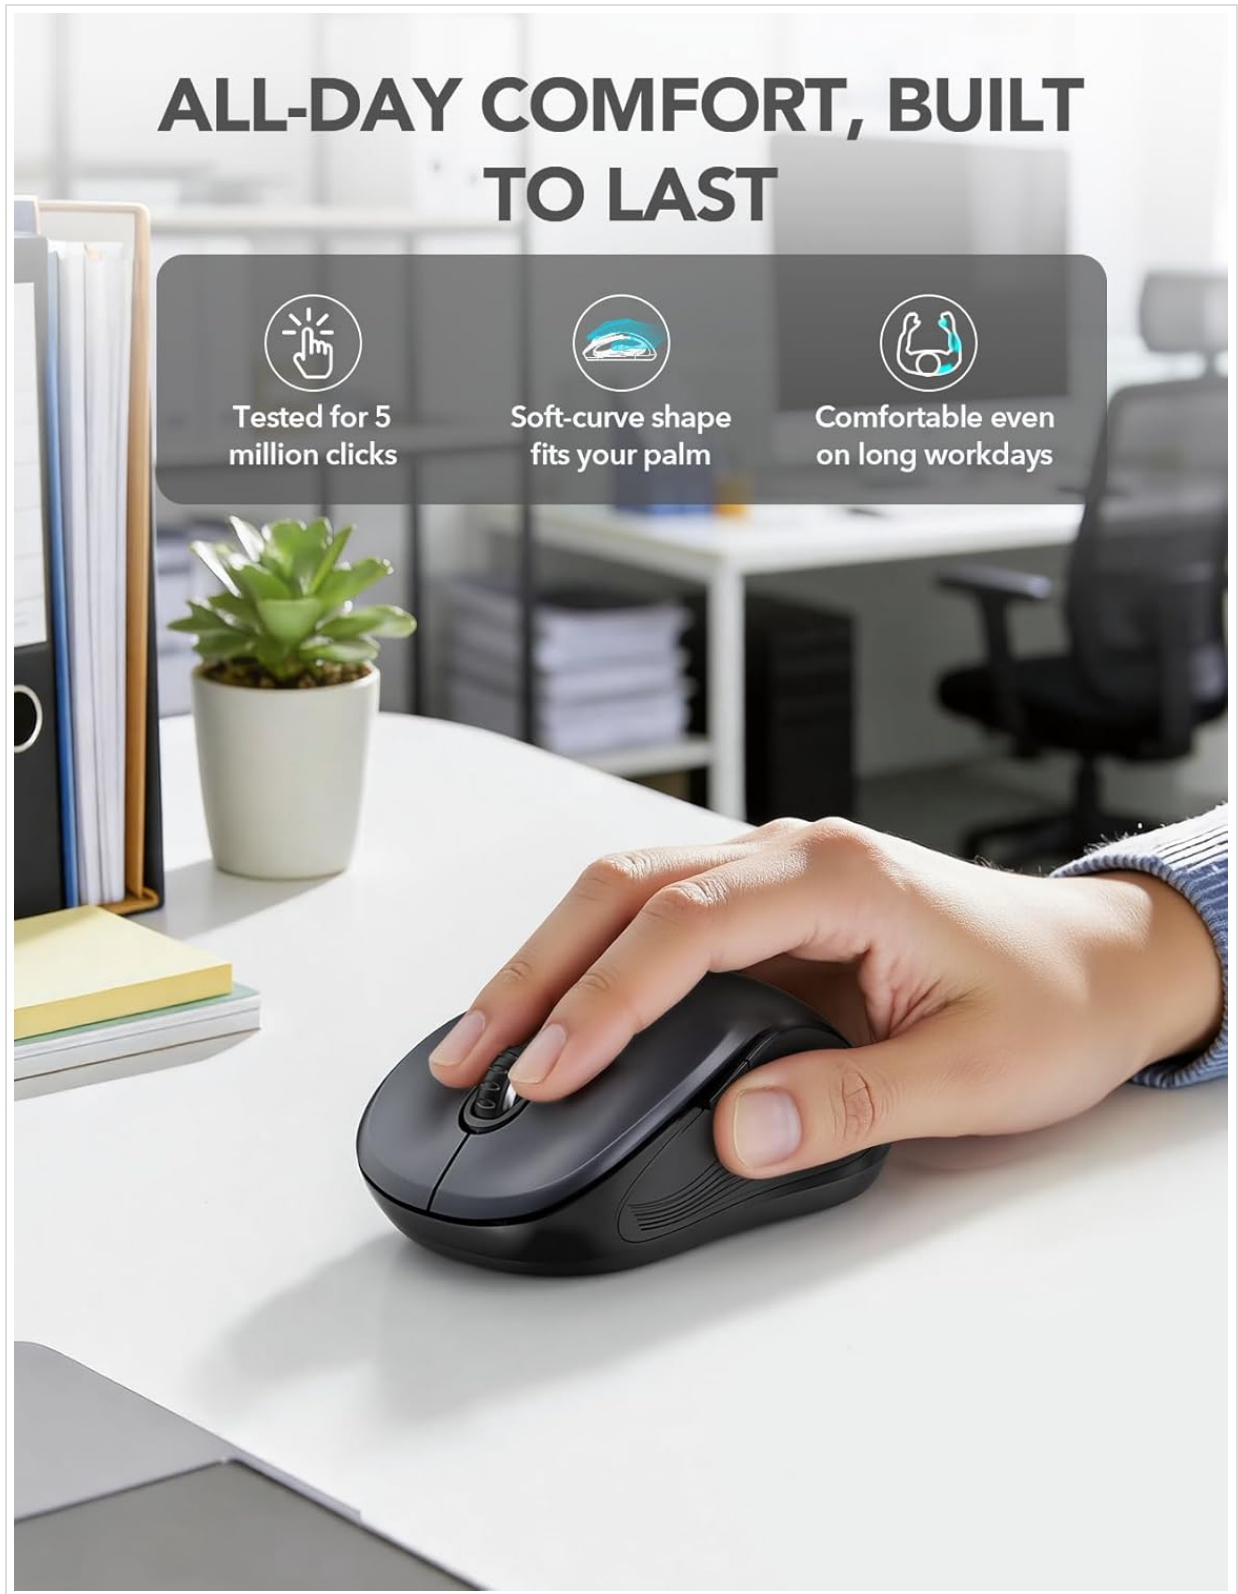

**Figure 3: Ergonomic Comfort.** This image shows a hand comfortably resting on the Trueque Wireless Mouse, highlighting its ergonomic design for all-day use.

The mouse is designed to fit small to medium hands. Refer to the hand size guide below to determine if this mouse is suitable for your palm length and width.

# IDEA FOR SMALL TO MEDIUM HANDS

If your palm is under 7.5 in, this mouse will feel just right.



	A(Palm Length)	B(Palm Width)
S	<17cm/6.7in	<8cm/3.2in
M	17-19cm/6.7-7.5in	8-10cm/3.2-3.9in

Figure 4: Hand Size Guide. This image provides a guide for palm length and width to determine the ideal fit for the mouse, suggesting it's suitable for palms under 7.5 inches.

## Lightweight Design

Weighing less than 60 grams, the mouse is lightweight and portable, ideal for everyday carry and travel.

# LIGHTWEIGHT FOR EVERYDAY CARRY <60 GRAMS



**Figure 5: Lightweight and Portable.** This image shows the mouse being easily stored in a bag, emphasizing its lightweight design for portability.

## SETUP INSTRUCTIONS

Follow these steps to set up your Trueque Wireless Mouse for first-time use.

### 1. Install Battery

The mouse requires one AA battery (not included).

1. Open the battery compartment cover located on the underside of the mouse.

2. Insert one AA battery, ensuring correct polarity (+/-).
3. Close the battery compartment cover.



**Figure 6: Battery and USB Receiver Location.** This image illustrates the battery compartment and the storage slot for the USB receiver on the underside of the mouse.

## 2. Connect USB Receiver

The USB receiver is stored within the mouse for convenience.

1. Gently remove the USB receiver from its storage slot on the bottom of the mouse.
2. Plug the USB receiver into an available USB-A port on your computer.

3. If your device only has USB-C ports, use the included USB-A to USB-C adapter. Connect the USB receiver to the adapter, then plug the adapter into your device's USB-C port.



**Figure 7: USB Receiver Connection.** This image demonstrates how to connect the 2.4GHz USB receiver to both a standard USB-A port and a USB-C port using the provided adapter.

### 3. Power On

Slide the power switch on the underside of the mouse to the "ON" position. The mouse will automatically connect to the receiver.

### 4. Compatibility

The Trueque Wireless Mouse is compatible with various operating systems, including Windows, Mac OS, Linux, and Chrome OS.

# LONG-LASTING & RELIABLE

One AA battery lasts up to 6-12 months

 **30 SECONDS**  
Power Saving Mode

 **15 MINUTES**  
Auto Sleep Mode

**Note:** Double Click Any Button To Wake Up The Mouse



**Still going**

**Figure 8: Operating System Compatibility.** This image shows the Trueque Wireless Mouse is compatible with Windows, Chrome OS, Mac OS, and Linux.

## OPERATING INSTRUCTIONS

### Power On/Off

Use the power switch on the bottom of the mouse to turn it on or off. Turning the mouse off when not in use

helps conserve battery life.

## DPI Adjustment

The mouse features 3 adjustable DPI (Dots Per Inch) levels to control cursor sensitivity.

- Press the DPI Switch Button (located behind the scroll wheel) to cycle through the available DPI settings: 800, 1200, and 1600 DPI.
- Select the DPI level that best suits your preference for speed and precision.

# LONG-LASTING & RELIABLE

One AA battery lasts up to 6-12 months

 **30 SECONDS**  
Power Saving Mode

 **15 MINUTES**  
Auto Sleep Mode



**Note:** Double Click Any Button To Wake Up The Mouse



 **Still going**

Figure 9: DPI Levels. This image illustrates the three adjustable DPI settings (800, 1200, 1600) available on the mouse.

## Back and Forward Buttons

The side buttons provide quick navigation:

- The **Forward Button** (top side button) allows you to navigate forward in web browsers or file explorers.
- The **Back Button** (bottom side button) allows you to navigate backward in web browsers or file explorers.

### Auto-Sleep Mode

To conserve battery, the mouse enters an auto-sleep mode after 1 minute of inactivity.

- To wake the mouse, double-click any button.
- A single AA battery can last up to 16 months thanks to this smart feature.

## 3 DPI LEVELS, FROM SLOW TO FAST



## WORKS WITH MAJOR OPERATING SYSTEMS



Windows



Chrome Os



Mac Os




Linux

**Figure 10: Battery Life and Auto-Sleep.** This image highlights the mouse's long battery life (up to 16 months) and its power-saving auto-sleep mode.

## Silent Click Feature

The mouse is designed with silent click buttons to minimize noise, making it suitable for quiet environments.

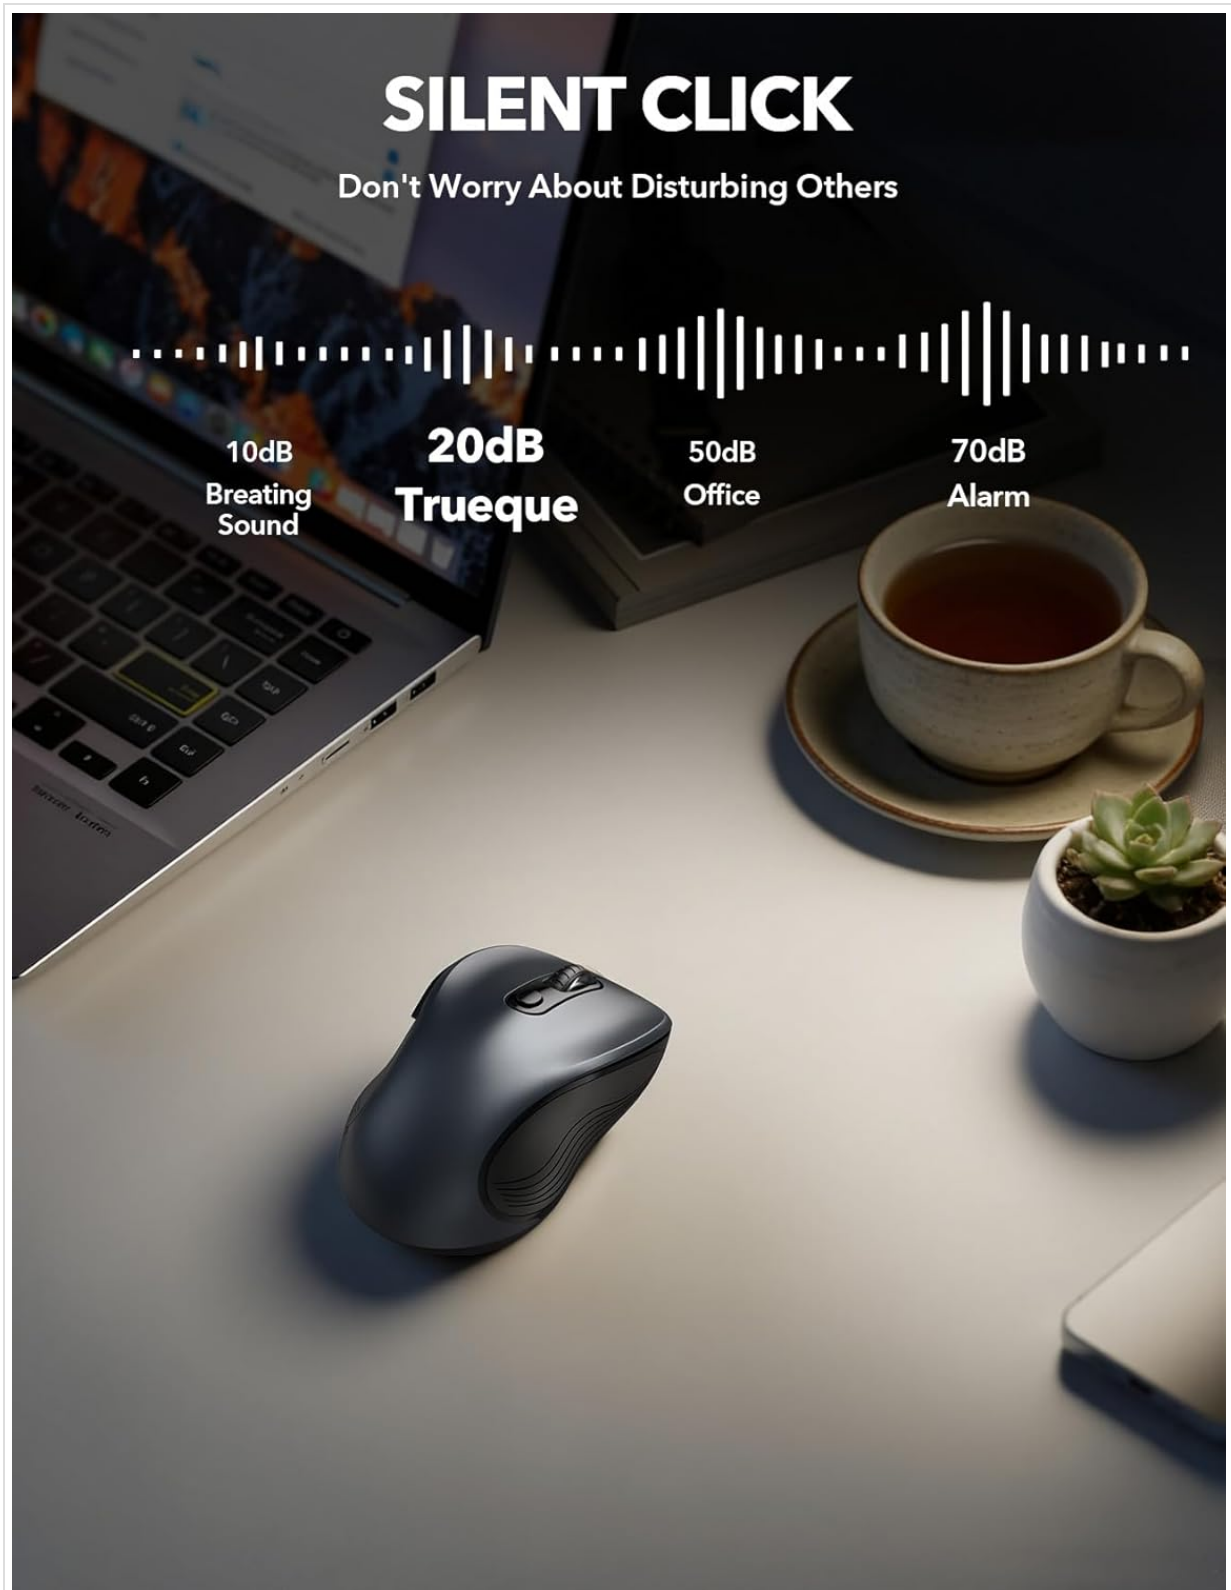

**Figure 11: Silent Click Comparison.** This image visually compares the low sound level of the Trueque mouse (20dB) to other common sounds like breathing (10dB), office noise (50dB), and an alarm (70dB).

## MAINTENANCE

## Battery Replacement

When the mouse performance degrades or it stops responding, it's time to replace the AA battery.

1. Turn off the mouse using the power switch.
2. Open the battery compartment cover.
3. Remove the old AA battery.
4. Insert a new AA battery, observing correct polarity.
5. Close the battery compartment cover and turn the mouse on.

## Cleaning

To maintain optimal performance and hygiene:

- Disconnect the mouse from your computer and turn it off.
- Use a soft, lint-free cloth lightly dampened with water or a mild cleaning solution to wipe the exterior of the mouse.
- Avoid getting moisture into any openings.
- Do not use harsh chemicals or abrasive cleaners.

## TROUBLESHOOTING

Problem	Solution
Mouse not responding	<ul style="list-style-type: none"><li>• Ensure the mouse is turned on.</li><li>• Check if the battery is correctly installed and has sufficient charge. Replace if necessary.</li><li>• Ensure the USB receiver is securely plugged into a working USB port. Try a different port.</li><li>• Move the mouse closer to the USB receiver to rule out range issues.</li><li>• Re-pair the mouse by turning it off, unplugging the receiver, plugging the receiver back in, and then turning the mouse on.</li></ul>
Cursor movement is erratic or jumpy	<ul style="list-style-type: none"><li>• Clean the optical sensor on the bottom of the mouse.</li><li>• Use the mouse on a clean, non-reflective surface. A mouse pad is recommended.</li><li>• Adjust the DPI setting to a lower level if the cursor is too sensitive.</li></ul>
Back/Forward buttons not working	<ul style="list-style-type: none"><li>• Ensure you are using an application that supports these functions (e.g., web browser, file explorer).</li><li>• Check for any software conflicts or custom button assignments in your operating system settings.</li></ul>

## SPECIFICATIONS

Feature	Detail
Brand	Trueque

Feature	Detail
Model	M01_19
Connectivity Technology	2.4GHz Wireless (USB Receiver)
Movement Detection	Optical
DPI Levels	800 / 1200 / 1600
Number of Buttons	6 (Left, Right, Scroll Wheel, DPI, Forward, Back)
Hand Orientation	Ambidextrous
Power Source	1 x AA Battery (Not Included)
Battery Life	Up to 16 months (with auto-sleep)
Wireless Range	Up to 33 feet (10 meters)
Product Dimensions	10.41 x 6.1 x 0.25 cm
Item Weight	68.04 g
Special Features	Ergonomic Design, Silent Click, Auto-Sleep Mode, USB-A to USB-C Adapter Included

## WARRANTY AND SUPPORT

---

The Trueque Wireless Mouse is backed by a 12-month warranty from the date of purchase. This warranty covers manufacturing defects under normal use.

For technical support, warranty claims, or any questions regarding your product, please contact Trueque customer service. Please have your purchase information ready when contacting support.

**Note:** The warranty does not cover damage caused by misuse, accident, unauthorized modification, or improper installation.