

Armocity Console Table 32 inch

Armocity 32-inch Cracked Oak Console Table User Manual

Model: 32-inch Console Table (Cracked Oak)

1. SAFETY INSTRUCTIONS

Please read and understand all instructions before assembling and using this product. Failure to follow these instructions may result in injury or damage to the product.

- **Keep children and pets away:** Small parts and packaging materials can be choking hazards.
- **Assemble on a soft, clean surface:** This prevents scratches and damage to the table and your floor.
- **Do not overtighten screws:** Overtightening can strip threads or crack wood components.
- **Ensure all connections are secure:** Before placing items on the table, verify that all screws and fasteners are properly tightened.
- **Distribute weight evenly:** Avoid placing heavy items on one side to prevent tipping.
- **Use on a level surface:** An uneven surface can cause instability.

2. PACKAGE CONTENTS

Carefully unpack all components and check against the parts list. If any parts are missing or damaged, please contact customer support.



Image: The Armocity 32-inch Cracked Oak Console Table, showcasing its rustic design and compact form factor.

The package includes all necessary hardware and an assembly guide for convenient setup.

- Tabletop
- Legs (2)
- Connecting hardware (screws, dowels, Allen key, screwdriver)
- Assembly Guide

3. ASSEMBLY INSTRUCTIONS

Follow these step-by-step instructions for a smooth assembly process. An Allen key and screwdriver are included.

1. **Prepare the Area:** Clear a spacious, soft, and clean area for assembly to prevent damage to the table components or your flooring.
2. **Identify Components:** Refer to the included assembly guide to identify all parts and hardware.
3. **Attach Legs to Tabletop:** Carefully align the table legs with the pre-drilled holes on the underside of the tabletop. Insert the connecting hardware (e.g., cam bolts and cam locks) as per the assembly

guide. Ensure a snug fit without overtightening.

4. **Secure Connections:** Use the provided Allen key and screwdriver to tighten all screws and fasteners. Periodically check for stability during this process.
5. **Final Check:** Once assembled, gently lift and move the table to its desired location. Verify that all connections are firm and the table is stable on a level surface.



Image: Diagram showing the dimensions of the console table, including length, width, and height.



Image: Detailed view highlighting the thickened tabletop, sturdy wood construction, and vintage wood texture of the console table.

4. OPERATING INSTRUCTIONS / USAGE

The Armocity Console Table is designed for versatile use in various indoor settings. Its narrow profile makes it ideal for spaces where traditional furniture might be too bulky.

- **Entryway Table:** Place in your foyer or hallway to hold keys, mail, or decorative items.
- **Sofa Table:** Position behind a couch to provide a surface for lamps, drinks, or books.
- **Display Surface:** Utilize the tabletop to showcase plants, photos, or other decorative accents.
- **Sideboard:** Can serve as a compact sideboard in dining areas for serving dishes or holding dinnerware.



Image: The console table positioned in an entryway, adorned with seasonal decorations, demonstrating its use as a welcoming focal point.



Image: The console table placed behind a sofa, providing a convenient surface for a lamp and framed photos, illustrating its function as a sofa table.

5. MAINTENANCE

Proper care will ensure the longevity and appearance of your Armocity Console Table.

- **Cleaning:** Wipe the surface with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean spills immediately to prevent staining, especially with liquids.
- **Heat Protection:** Use coasters or placemats under hot items to protect the tabletop from heat damage.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading or discoloration of the wood finish.
- **Periodic Tightening:** Periodically check and retighten all screws and fasteners to maintain stability.

6. TROUBLESHOOTING

If you encounter any issues with your console table, refer to the following common solutions:

Problem	Possible Cause	Solution
Table is wobbly	Loose screws or uneven floor	Ensure all screws are tightened. Place the table on a level surface or use furniture pads to stabilize.
Parts do not align during assembly	Incorrect orientation of parts	Review the assembly guide to ensure all parts are oriented correctly before tightening.
Scratches on surface	Sharp objects or abrasive cleaning	Use furniture polish or repair kits for minor scratches. Avoid dragging objects across the surface.

If the problem persists, please contact Armocity customer support for further assistance.

7. SPECIFICATIONS

Detailed product specifications for the Armocity 32-inch Cracked Oak Console Table.

Brand: Armocity

Model: 32-inch Console Table

Color: Cracked Oak

Product Dimensions: 4"D x 33"W x 16"H (Note: Item Depth is 13.8 inches, Width 31.5 inches, Height 31.5 inches based on image)

Item Weight: 25 Pounds

Frame Material: Wood

Top Material Type: Engineered Wood

Tabletop Thickness: 0.95 Inches

Style Name: Country Rustic

Required Assembly: Yes

Indoor/Outdoor Usage: Indoor

8. WARRANTY AND SUPPORT

Armocity stands behind the quality of its products. For warranty information, product support, or to report missing/damaged parts, please contact our customer service team.

Customer Service: Refer to the contact information provided on your purchase receipt or visit the official Armocity website for support options.

Please retain your proof of purchase for any warranty claims.