

YOSUN MJFM3LL

YOSUN Replacement Remote Control for Apple TV 4K/HD (Model MJFM3LL) Instruction Manual

Model: MJFM3LL

INTRODUCTION

This manual provides instructions for the YOSUN Replacement Remote Control, designed for use with Apple TV 4K and HD models. This remote offers essential control functions without requiring complex setup. Please read this manual thoroughly before use.

Important Note: This remote control does NOT support Siri or voice control functions. It also does not feature Bluetooth or touchpad functionality. Power, Volume, and Mute buttons are compatible with specific TV brands only (Samsung, LG, Vizio, Hisense, Sony, Amazon Fire TV, Toshiba, Insignia Fire TV).

DEVICE COMPATIBILITY

The YOSUN Replacement Remote Control is compatible with the following Apple TV models:

- Apple TV Remote (white) A1156 MA128LL/A
- Apple TV Remote (aluminum) MM4T2AM/A
- Siri Remote (1st Gen) / Apple TV Remote (1st Gen) MQGD2LL/A
- Siri Remote (2nd Gen) / Apple TV Remote (2nd Gen) MJFM3LL/A
- Siri Remote (3rd Gen) / Apple TV Remote (3rd Gen) MNC73AM/A

This remote is designed to work with Apple TV (1st/2nd/3rd Gen), Apple TV HD (4th/5th Gen), and Apple TV 4K (1st/2nd/3rd Gen).

Multi-device Compatibility



Figure 1: Multi-device compatibility overview for the YOSUN remote.

Compatible Remote Types



Figure 2: Compatible remote types that the YOSUN remote can replace.

SETUP INSTRUCTIONS

1. **Insert Batteries:** Open the battery compartment on the back of the remote control. Insert two (2) AAA batteries, ensuring correct polarity (+/-). (Batteries are not included).



Figure 3: Battery installation diagram.

2. **No Pairing Required:** This remote control operates using infrared (IR) technology and does not require any programming or pairing with your Apple TV device. It is ready to use immediately after battery installation.
3. **Unlock Previous Device (if applicable):** If you are replacing an older Apple TV remote (1st, 2nd, or 3rd Gen), you might need to "unlock" the old device using its original remote control first. This ensures the new remote can connect properly.
 - Click the **TV Power** button on the YOSUN remote.
 - Wait for the "unlocked" icon (two interlocking circles, one purple, one orange) to appear on your screen.
 - Click the **TV Power** button once more to "unlock" your old device.
 - Once unlocked, the YOSUN remote should function as usual.

Note: The "Unlock / Locked" function only supports Apple TV (1st / 2nd / 3rd Gen).

OPERATING INSTRUCTIONS

The YOSUN Replacement Remote Control provides intuitive access to your Apple TV functions. Refer to the button layout below for specific controls.



Figure 4: Remote Control Button Layout and Functions.

Key Functions:

- **TV Power Button:** Controls the power of your television.
- **Navigation Pad (Up, Down, Left, Right):** Navigates through menus and content.
- **OK / Enter Button:** Confirms selections.
- **Menu Button:** Returns to the previous menu or home screen.
- **Return Button:** Goes back to the previous screen.
- **Play/Pause Button:** Controls media playback.
- **Mute Button:** Mutes or unmutes TV audio.
- **Volume (+) / Volume (-) Buttons:** Adjusts TV volume.
- **Rewind / Fast Forward Buttons:** Controls media playback speed.
- **Channel (+) / Channel (-) Buttons:** Changes channels (if supported by your TV setup).

Note on TV Control Buttons: The Power, Volume, and Mute buttons are designed to control your television directly.

These buttons are compatible with Samsung, LG, Vizio, Hisense, Sony, Amazon Fire TV, Toshiba, and Insignia Fire TV brands only. For other TV brands, these buttons may not function.

No voice function, making the remote control more convenient to use.




 **NOTICE** 

-  **NOT** Siri Remote!
-  **NOT** Voice Remote!
-  **NOT** Bluetooth Function!
-  **NOT** Touchpad Function!

Figure 5: Important functional limitations of the remote.

Remote control has **5 additional** function buttons, providing more convenience.

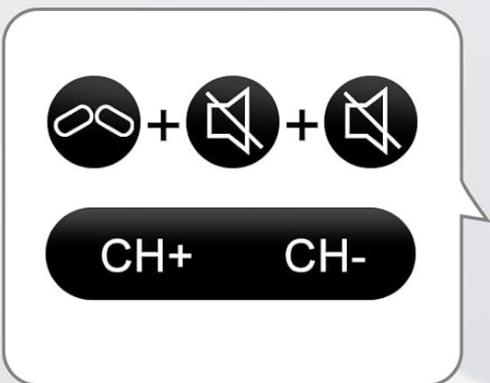

These **4 buttons** are only compatible with TVs of the following brands:

A diagram showing two button combinations and a list of TV brands. The first combination is (TV Power) + (Mute). The second combination is (Volume +) + (Volume -). Below these are seven TV brands listed with numbered callouts: 1 for Samsung TV, 2 for LG TV, 3 for Vizio TV, 4 for Hisense TV, 5 for Sony TV, 6 for AMZ Fiire TV, and 7 for Toshiba / Insignia Fiire TV.

Figure 6: TV control button compatibility.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries at the same time.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem: Remote is not responding.

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity and are not depleted. Replace with fresh AAA batteries if necessary.
- **Line of Sight:** Ensure there is a clear line of sight between the remote and your Apple TV. Infrared remotes require

direct line of sight.

- **"Unlock" Procedure:** If you are using an older Apple TV (1st, 2nd, or 3rd Gen), ensure you have performed the "unlock" procedure as described in the Setup Instructions.

Problem: Power, Volume, or Mute buttons are not working on my TV.

- **Compatibility:** These buttons are only compatible with specific TV brands: Samsung, LG, Vizio, Hisense, Sony, Amazon Fire TV, Toshiba, and Insignia Fire TV. If your TV is not one of these brands, these functions may not work.

Problem: No Siri, voice control, Bluetooth, or touchpad functionality.

- **Intended Design:** This remote is an infrared replacement and is specifically designed without these advanced features to offer a simpler, direct control experience. These are not malfunctions.



Troubleshooting:

- 1 Our remote is a Infrared Remote without any programming, just insert **2x AAA** batteries to get it work
- 2 If you could not connect our remote to your Aple TV, please **"UNLOCK"** your old device firstly!

*Click  button to wait these this icons appears, click  once to **"Unlock"** your old device. Then you could use our remote as usual!

 → **Unlocked**
 → **Locked**

Unlocked / Locked function ONLY supports for Aple TV (1st / 2nd / 3rd Gen) !!!

Figure 7: Troubleshooting guide for common issues.

Outstanding Performance of IR Remote



True **0.5s** response



Solid **39ft+** range



Figure 8: Visual comparison of unlocked vs. locked device states.

SPECIFICATIONS

| | |
|--|---------------------------|
| Brand | YOSUN |
| Model Number | MJFM3LL |
| Product Dimensions | 6.29 x 1.57 x 0.66 inches |
| Item Weight | 1.44 ounces |
| Color | Black |
| Special Feature | No Programming Required |
| Max Number of Supported Devices | 1 |

| | |
|---------------------------|---------------------------------------|
| Compatible Devices | Apple TV (various generations) |
| Response Time | True 0.5s response |
| Operating Range | Solid 39ft+ range (approx. 10 meters) |



Figure 9: Performance features of the IR remote.

WARRANTY AND SUPPORT

This YOSUN Replacement Remote Control comes with a 1-Year Warranty. For warranty claims or technical support, please contact YOSUN customer service through the retailer where the product was purchased. Please retain your proof of purchase for warranty purposes.

PRODUCT VIDEO DEMONSTRATION

Your browser does not support the video tag.

Video 1: A brief overview of the YOSUN Replacement Remote Control for Apple TV, highlighting its features and compatibility.



© 2026 YOSUN. All rights reserved.