

**Manuals+**

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [KOTEK](#) /
- › [KOTEK Wooden Play Kitchen Instruction Manual \(Model PI-TP10126\)](#)

**KOTEK PI-TP10126**

# KOTEK Wooden Play Kitchen Instruction Manual

Model: PI-TP10126

## 1. INTRODUCTION

---

This manual provides essential information for the assembly, safe operation, and maintenance of your KOTEK Wooden Play Kitchen, Model PI-TP10126. Please read these instructions carefully before assembly and use to ensure proper function and safety.



Image: The KOTEK Wooden Play Kitchen, fully assembled, showcasing its various features.

## 2. SAFETY INFORMATION

---

Your KOTEK Play Kitchen is designed with safety in mind. Adhere to the following guidelines to ensure a safe play environment:

- **Age Recommendation:** This product is recommended for children aged 3 years and up.
- **Adult Supervision:** Adult supervision is recommended during play, especially for younger children.
- **Assembly:** Ensure all parts are correctly assembled and tightened before use. Refer to the detailed assembly instructions provided in the package.
- **Anti-Tip Device:** Install the included anti-tip device to securely fix the kitchen to a wall, preventing accidental falling. This is a critical safety measure.
- **Materials:** The kitchen is constructed from high-strength MDF board and is ASTM F963 and CPSIA certified, ensuring material safety.
- **Edges and Handles:** The product features smooth edges and curved handles designed to be child-friendly. Regularly inspect for any damage or sharp edges.

- **Small Parts:** Keep small accessories away from children under 3 years old to prevent choking hazards.
- **Placement:** Place the play kitchen on a flat, stable surface. Avoid placing it near stairs, windows, or heat sources.

### 3. WHAT'S IN THE BOX

---

Carefully unpack the box and verify that all components are present. If any parts are missing or damaged, please contact customer support.

- 1 x Pretend Play Kitchen
- 1 x Skillet
- 1 x Stockpot
- 2 x Spoons
- 1 x Spatula
- 1 x Cup
- 4 x Ice Cubes
- 1 x Instruction Manual (this document)

## Kitchen Accessories Included



4 Ice Cubes



Cup



Spoons & Spatula



Pot



Pan

*Image: A visual representation of the included kitchen accessories: a skillet, a stockpot, two spoons, a spatula, a cup, and four ice cubes.*

## 4. SETUP AND ASSEMBLY

---

The KOTEK Wooden Play Kitchen requires assembly. A detailed, step-by-step instruction guide is included in your package to facilitate this process. Please follow these instructions carefully.

- 1. Unpack Components:** Lay out all parts and hardware on a clean, soft surface to prevent scratches. Compare with the "What's in the Box" section to ensure all pieces are present.
- 2. Follow Included Instructions:** Refer to the separate assembly instruction booklet for specific diagrams and steps. Each step is clearly illustrated.
- 3. Secure All Fasteners:** Ensure all screws, bolts, and connectors are securely tightened. Do not overtighten.
- 4. Install Anti-Tip Device:** It is crucial to install the anti-tip device as instructed. This device prevents the kitchen from tipping over, enhancing safety. Attach one end to the back of the play kitchen and the other to a wall stud using appropriate hardware.
- 5. Final Check:** Once assembled, gently shake the kitchen to confirm stability. Ensure all doors open and close smoothly and all interactive elements function correctly.

# Product Dimension

Recommended Age: 3-6 Years Old

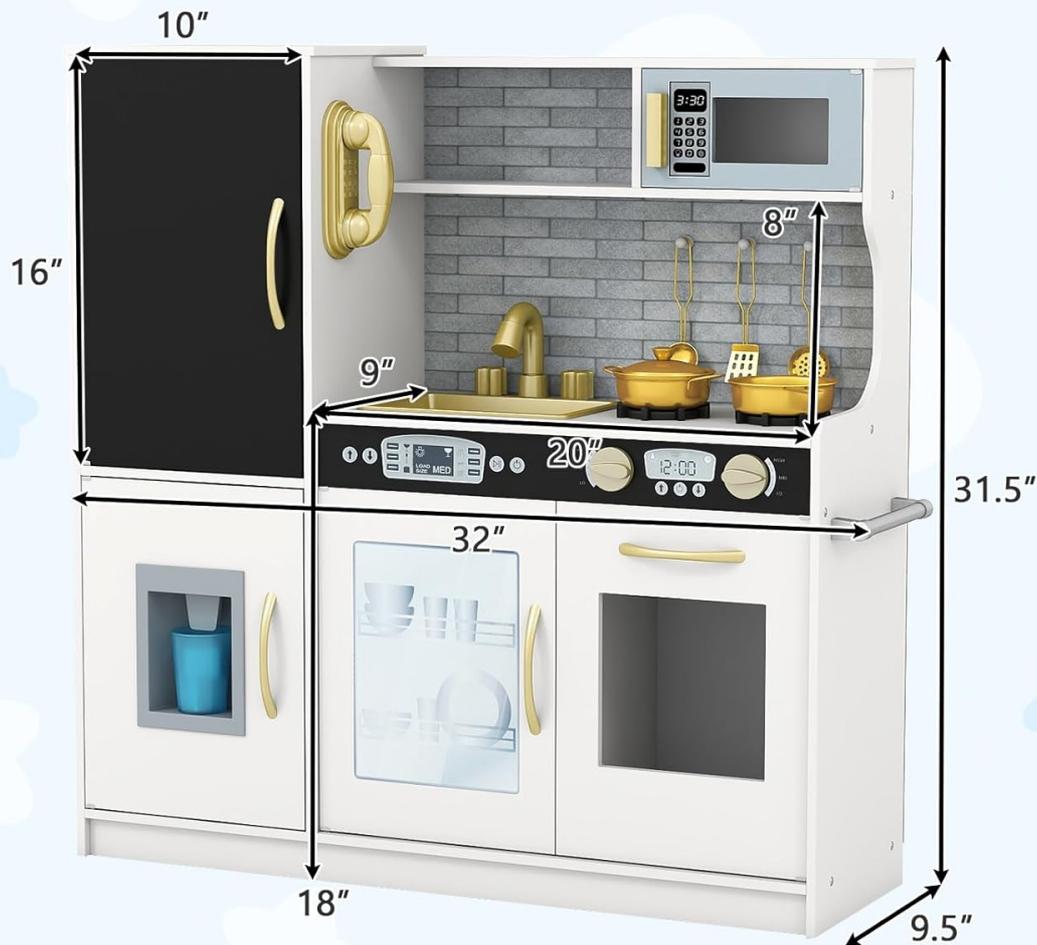


Image: A diagram illustrating the product dimensions of the KOTEK Play Kitchen, useful for planning placement and understanding scale during assembly.

## 5. OPERATING INSTRUCTIONS

The KOTEK Wooden Play Kitchen features several interactive elements designed to enhance imaginative play:

- **Stovetop:** Turn the knobs on the stovetop. They produce clicking sounds for a realistic cooking experience.
- **Oven:** Open the oven door to place play food inside.
- **Microwave:** Open the microwave door and use the pretend keypad.
- **Dishwasher:** Open the dishwasher door to place play dishes.
- **Sink and Faucet:** The sink is removable for easy cleaning. The faucet and its handles can be rotated.
- **Ice Maker:** Place the included ice cubes into the dispenser. Press the lever to dispense them into the cup.
- **Chalkboard:** Use chalk (not included) to write or draw on the integrated chalkboard.

- **Telephone:** Use the pretend telephone for imaginative conversations.
- **Storage:** Utilize the utensil hooks, towel rack, and various cabinet spaces for organizing play accessories.

## Multifunctional Kitchen Playset



Telephone



Microwave



2 Gas Stoves



Dishwasher



Oven

*Image: Close-up views of the KOTEK Play Kitchen's interactive components, including the telephone, microwave, gas stoves, dishwasher, and oven.*

# Ice Maker



Put in ice cubes



Press



Get ice cubes

*Image: A step-by-step guide demonstrating how to use the ice maker feature, showing how to put in ice cubes, press the dispenser, and retrieve them.*

## 6. MAINTENANCE

Regular maintenance will help prolong the life of your KOTEK Wooden Play Kitchen:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, which can damage the finish.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Damage:** Inspect the wooden components for any signs of wear, splintering, or damage. Discontinue use if significant damage is found and contact customer support.
- **Storage:** Store the play kitchen in a dry environment, away from direct sunlight or extreme temperature changes, to prevent warping or fading.

# Perfect Storage Solution

Holds kids' belongings for easy access



*Image: The KOTEK Play Kitchen with its doors open, highlighting the various storage compartments for accessories and toys, emphasizing organization.*

## 7. TROUBLESHOOTING

---

If you encounter any issues with your KOTEK Wooden Play Kitchen, consider the following:

- **Stability Issues:** Ensure all assembly screws are tightened. Verify that the anti-tip device is correctly installed and secured to a wall stud.
- **Parts Not Fitting:** Double-check the assembly instructions to ensure you are using the correct parts for each step and that they are oriented correctly.
- **Missing or Damaged Parts:** If you find any parts missing or damaged upon unboxing, do not proceed with assembly. Contact KOTEK customer support immediately for assistance.
- **Interactive Features Not Working:** For features like clicking knobs or the ice maker, ensure no obstructions are present and that components are correctly aligned as per assembly instructions.

## 8. SPECIFICATIONS

---

<b>Model Number</b>	PI-TP10126
<b>Product Dimensions (L x W x H)</b>	32" x 9.5" x 31.5" (81.3 cm x 24.1 cm x 80 cm)
<b>Counter Height</b>	18" (45.7 cm)
<b>Item Weight</b>	27 lbs (12.2 kg)
<b>Recommended Age</b>	3-6 Years Old
<b>Material</b>	MDF Board
<b>Certifications</b>	ASTM F963, CPSIA

## 9. CUSTOMER SUPPORT

---

For any questions, concerns, or assistance with assembly or product issues, please contact KOTEK customer support. We are committed to providing a satisfactory resolution.

Please refer to the contact information provided on the product packaging or the KOTEK official website for the most up-to-date support details.