

795.51733.811

# Generic Replacement Door Bin Instruction Manual

For Kenmore Model 795.51733.811 and various LG Refrigerator Models

## INTRODUCTION

---

This manual provides detailed instructions for the installation, maintenance, and troubleshooting of your new replacement refrigerator door bin. This part is designed to restore the functionality and organization of your refrigerator door. Please read these instructions carefully before proceeding with installation or use.

## PRODUCT OVERVIEW

---

The replacement door bin is a clear, durable plastic component designed to fit securely into the refrigerator door, providing storage for various items. It is engineered to match the specifications of original equipment for a seamless fit.



Image: A clear plastic replacement door bin, designed for refrigerator doors. The bin features a transparent construction with a textured bottom for stability.

## COMPATIBILITY

---

This replacement door bin is compatible with a wide range of Kenmore and LG refrigerator models. Please verify your refrigerator's model number against the list below to ensure proper fit.

### **Compatible Kenmore Refrigerator Models:**

- 795.51733.811, 795.51733.812, 795.51733813
- 795.51737.810, 795.51737811, 795.51737812
- 795.51832.410, 795.51832.411, 795.51832.412, 795.51832.413, 795.51832415
- 795.51833.410, 795.51833.411, 795.51833.412, 795.51833.413, 795.51833.415
- 795.51839.410, 795.51839.411, 795.51839.412, 795.51839.413, 795.51839414, 795.51839415
- 795.51853.610, 795.51853.611
- 795.51857.610, 795.51857.611
- 795.51862.610, 795.51862.611
- 795.51863.610, 795.51863.611, 795.51863613
- 795.51867.610, 795.51867.611, 795.51867612, 795.51867613
- 795.51869.610, 795.51869.611, 795.51869612
- 795.73105712

## Compatible LG Refrigerator Models:

- LRSES2706V, LRSES2706V/00, LRSES2706V/01, LRSES2706V/02
- LRSPS2706V
- LSXC22396D, LSXC22396S, LSXC22396S/00
- LSXC22426S, LSXC22426S/00
- LSXC22436S, LSXC22436S/00
- LSXC22486D, LSXC22486D/00, LSXC22486S, LSXC22486S-ASTCNA0, LSXC22486S-ASTCNA1, LSXC22486S/00
- LSXS26326B, LSXS26326S, LSXS26326S/00, LSXS26326S/01, LSXS26326S/02, LSXS26326S/04, LSXS26326S/05, LSXS26326S/09, LSXS26326S/11, LSXS26326W/01
- LSXS26336, LSXS26336S, LSXS26336S/00, LSXS26336V, LSXS26336V/00
- LSXS26366D, LSXS26366D/00, LSXS26366D/01, LSXS26366D/02, LSXS26366D/03, LSXS26366D/04, LSXS26366S, LSXS26366S/00, LSXS26366S/01, LSXS26366S/02, LSXS26366S/04, LSXS26366S/07, LSXS26366S/08, LSXS26366S/11
- LSXS26386D, LSXS26386D/00, LSXS26386D/01, LSXS26386D/02, LSXS26386S, LSXS26386S/00, LSXS26386S/01, LSXS26386S/02
- LSXS26396S, LSXS26396S/00
- LSXS26466S, LSXS26466S/00

*If you are unsure about compatibility, please contact the seller with your appliance's full model number.*

## SAFETY INFORMATION

---

Always prioritize safety when working with appliances. Follow these guidelines:

- **Unplug the refrigerator:** Before attempting any installation or removal of parts, always unplug the refrigerator from the power outlet to prevent electrical shock.
- **Wear protective gloves:** Edges of plastic parts can sometimes be sharp. Consider wearing gloves to protect your hands.
- **Handle with care:** Plastic components can crack or break if dropped or mishandled.

## INSTALLATION

---

Follow these steps to install your new refrigerator door bin:

1. **Prepare the refrigerator:** Ensure the refrigerator is unplugged. Remove any items from the old or broken door bin.
2. **Remove the old door bin (if applicable):**
  - Gently lift the old door bin upwards from its mounting slots.
  - Pull the bin straight out towards you to detach it from the door.
  - If the bin is stuck, check for any clips or tabs that might need to be pressed or released. Refer to your refrigerator's original manual if necessary.
3. **Install the new door bin:**
  - Align the hooks or tabs on the back of the new door bin with the corresponding slots on the refrigerator door.
  - Slide the bin downwards until it clicks securely into place. Ensure it is level and firmly seated.
  - Gently tug on the bin to confirm it is stable and will not easily dislodge.
4. **Restore power:** Once the new bin is securely installed, plug the refrigerator back into the power outlet.

## OPERATING INSTRUCTIONS

---

The door bin is designed for storing various food and beverage items. Place items securely within the bin, ensuring not to overload it beyond its capacity. Avoid placing excessively heavy or sharp objects that could damage the plastic.

## MAINTENANCE AND CLEANING

---

Regular cleaning will help maintain the appearance and hygiene of your door bin.

- **Removal for cleaning:** For thorough cleaning, the door bin can be removed by gently lifting it upwards and pulling it out, similar to the installation process.
- **Cleaning procedure:** Wash the bin with warm water and a mild dish soap. Use a soft cloth or sponge. Avoid abrasive cleaners or scouring pads, as these can scratch the plastic surface.
- **Drying:** Rinse thoroughly with clean water and dry completely with a soft cloth before re-installing.
- **Avoid harsh chemicals:** Do not use harsh chemical cleaners, ammonia-based cleaners, or solvents, as these can damage the plastic.

## TROUBLESHOOTING

---

### **Bin does not fit:**

Ensure you have the correct replacement part for your specific refrigerator model. Double-check the model numbers listed in the compatibility section. If the model number matches and it still doesn't fit, contact the seller for assistance.

### **Bin is loose or wobbly:**

Verify that the bin is fully seated in its mounting slots. It should click firmly into place. If it remains loose, inspect the mounting slots on the refrigerator door for any obstructions or damage.

### **Bin cracks or breaks easily:**

Avoid overloading the bin with excessive weight. Distribute items evenly. If the bin breaks under normal use within the warranty period, refer to the warranty information.

## SPECIFICATIONS

---

- **Part Type:** Refrigerator Door Bin Replacement
- **Material:** Durable Plastic (typically clear acrylic or similar)
- **Dimensions:** Approximately 1 x 1 x 1 inches

*Note: The provided product dimensions (1 x 1 x 1 inches) may refer to packaging or internal component size. Actual bin dimensions will vary to fit specific refrigerator models.*

- **Manufacturer:** Generic
- **Part Number:** 795.51733.811

*Note: This part number is also a Kenmore refrigerator model number. Please ensure compatibility with your specific appliance model.*

## WARRANTY AND SUPPORT

---

This product comes with a **60-day warranty** from the date of purchase, covering manufacturing defects. For warranty claims, returns, or technical support, please contact the seller directly.

**Return Policy:** The seller offers a 30-day return/replacement policy. Refer to your purchase details for specific return instructions.

**Seller:** CONG TERESA



© 2025 Generic. All rights reserved.

This manual is for informational purposes only. Always refer to your appliance's original manufacturer manual for specific safety and operational instructions.