

Blulu DIB-Blulu-2720

Blulu Aluminum Exterior Door Threshold

MODEL: DIB-BLULU-2720 (36-INCH, 5 5/8-INCH WIDE, SILVER)

1. INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of the Blulu Aluminum Exterior Door Threshold, model DIB-Blulu-2720. This heavy-duty threshold is designed to provide a weatherproof seal for residential and commercial exterior doors, enhancing insulation and preventing drafts.


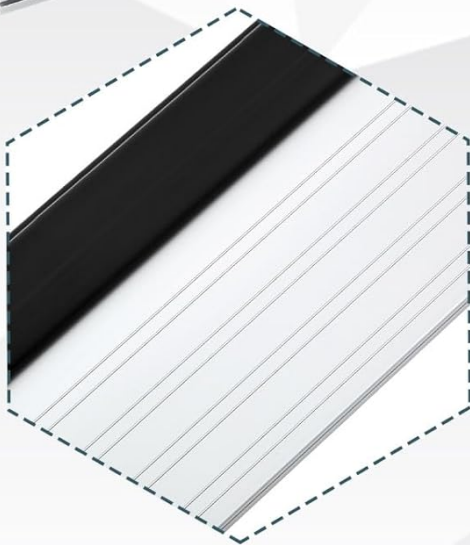


Image 1.1: Overview of the Blulu Aluminum Exterior Door Threshold.


2. PRODUCT FEATURES

- **Dimensions:** 36 inches long, 5 5/8 inches wide.
- **Material:** Constructed from durable aluminum for longevity.
- **Insulation:** Includes a wooden insert designed to seal gaps, improve insulation, and prevent drafts.
- **Durability:** Engineered to withstand frequent use and various weather conditions.
- **Versatility:** Suitable for most exterior door applications in both residential and commercial settings.

PRODUCT DETAILS

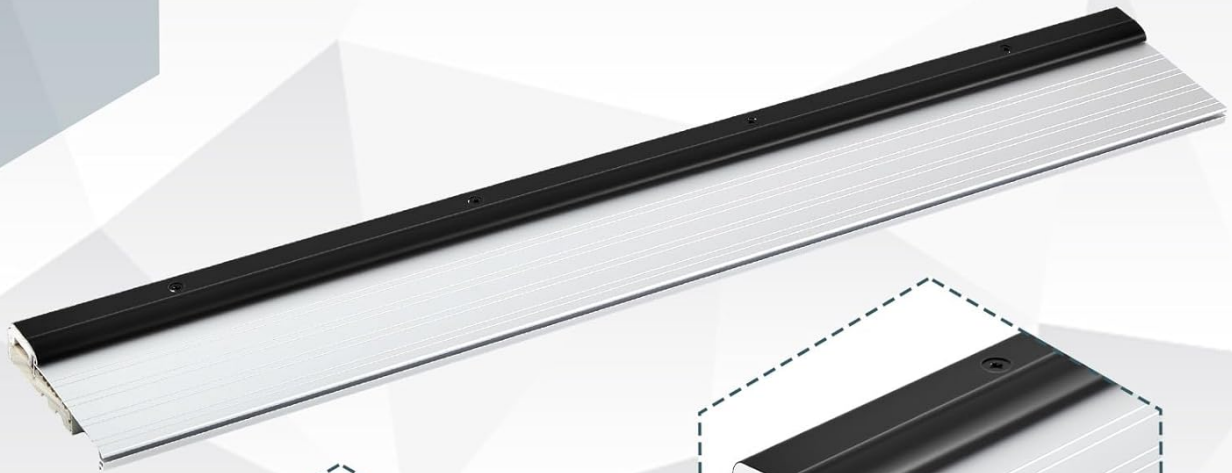

ALUMINUM

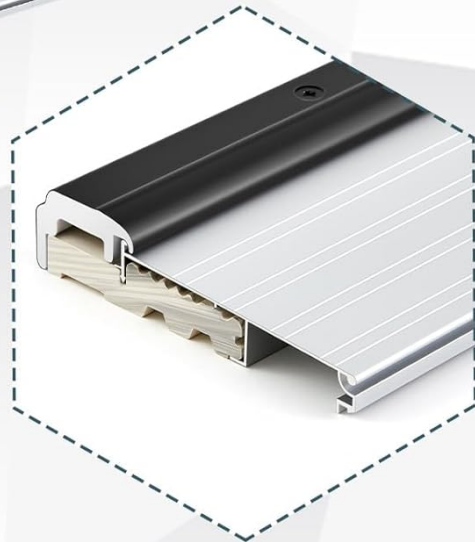

CUTTABLE

Image 2.1: Product details highlighting the aluminum material and cuttable design.

SUITABLE FOR OUTDOOR USE



Image 2.2: Threshold installed, demonstrating suitability for outdoor use.

3. SETUP AND INSTALLATION

Proper installation is crucial for the effective performance of your door threshold. Follow these steps carefully:

1. **Measure and Mark:** Accurately measure the width of your door opening. Mark the precise position where the threshold will be installed at the bottom of the door frame.
2. **Align Threshold:** Carefully place the threshold in the marked position, ensuring it is properly aligned with the door frame and the door's swing path.
3. **Drill and Secure:** Drill pilot holes through the designated points on the threshold into the subfloor. Insert and tighten the provided screws to securely fasten the threshold in place.
4. **Snap and Seal:** Once secured, ensure all components are properly snapped into place. Verify that the threshold creates a tight seal with the bottom of the door when closed, preventing drafts and water intrusion.

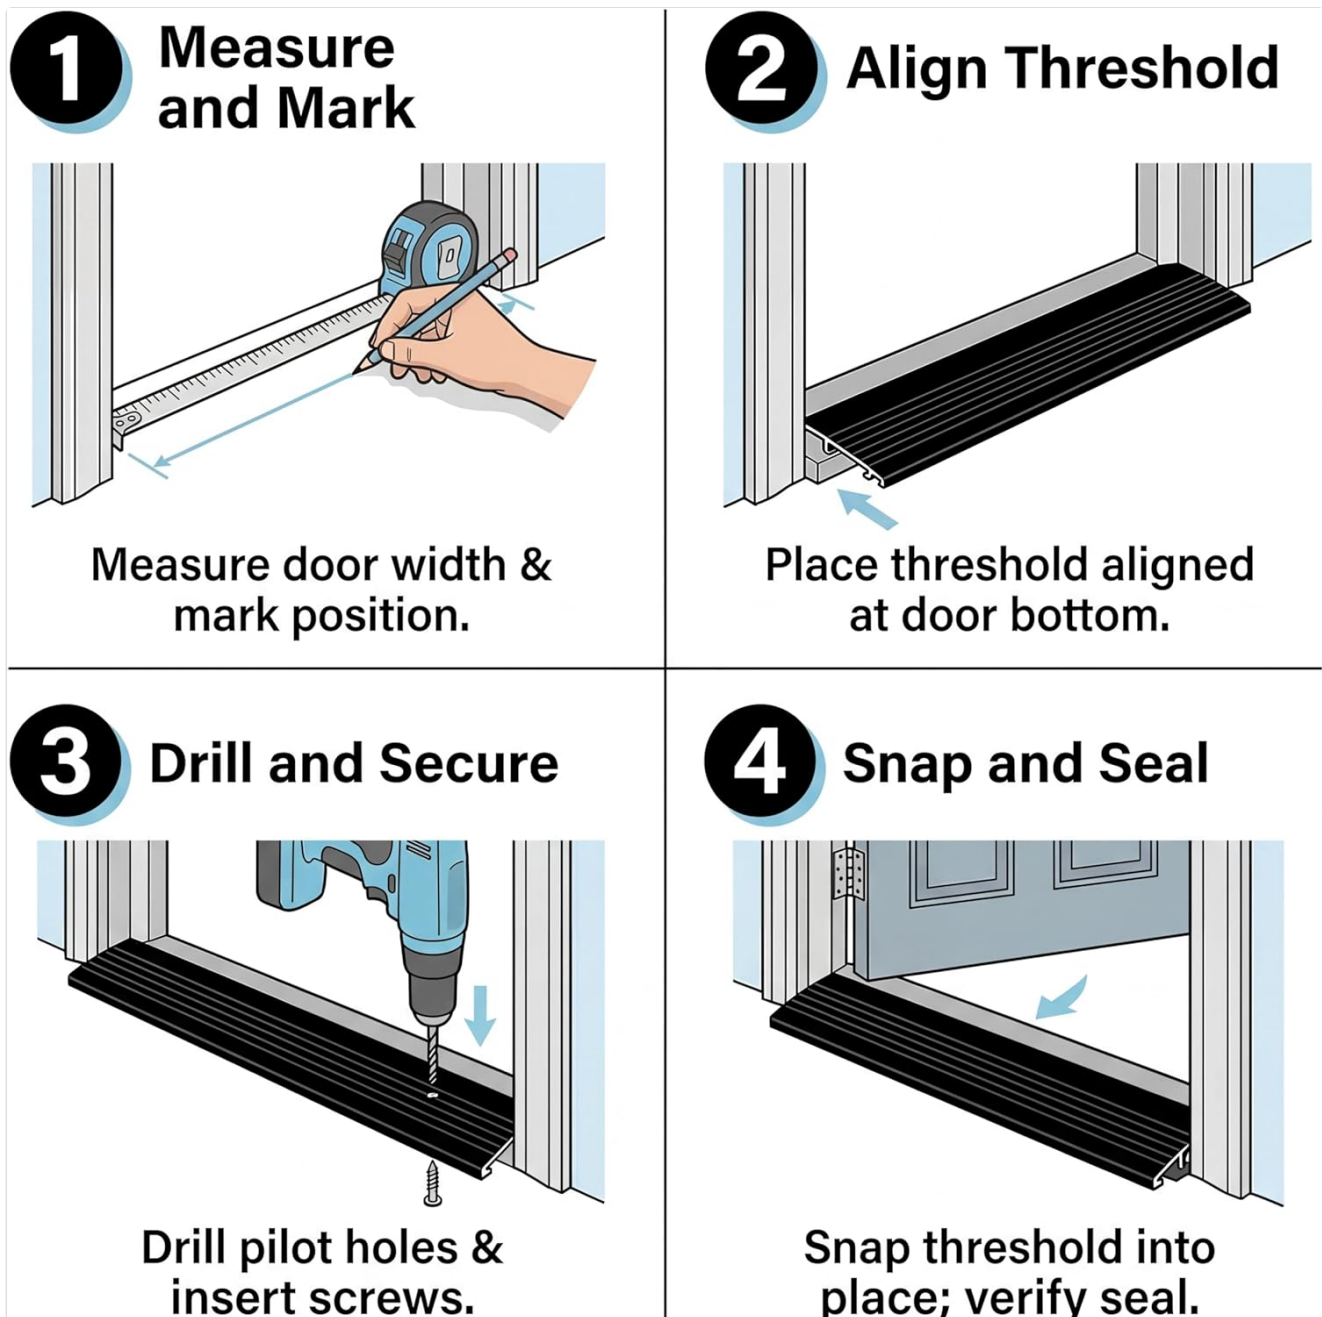


Image 3.1: Visual guide for the four-step installation process.

Installation Video Guide

Your browser does not support the video tag.

Video 3.1: Official installation guide for the Blulu Aluminum Exterior Door Threshold.

4. OPERATING INSTRUCTIONS

Once installed, the Blulu Aluminum Exterior Door Threshold functions passively to create a barrier against external elements. Its design, including the integrated wooden insert, helps to seal the gap beneath the door, reducing air infiltration, preventing water entry, and improving thermal efficiency. No active operation is required from the user.

5. MAINTENANCE

To ensure optimal performance and longevity of your Blulu Aluminum Exterior Door Threshold, follow these simple maintenance guidelines:

- **Regular Cleaning:** Periodically clean the aluminum surface with a mild soap and water solution. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspect Seal:** Annually inspect the wooden insert and the overall seal for any signs of wear, damage, or compression. If the seal appears compromised, consider replacement to maintain weatherproofing and insulation properties.
- **Check Fasteners:** Ensure all screws and fasteners remain tight. Re-tighten if necessary to keep the threshold securely in place.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your door threshold.

- **Drafts or Water Leaks:**
 - *Possible Cause:* Improper installation or worn seal.
 - *Solution:* Verify the threshold is correctly aligned and securely fastened. Inspect the wooden insert for damage or compression; replace if necessary. Ensure the door sweep (if applicable) makes proper contact with the threshold.
- **Threshold Not Level:**
 - *Possible Cause:* Uneven subfloor or improper shimming during installation.
 - *Solution:* If possible, remove the threshold and re-level the area beneath it using appropriate shims before re-installation.
- **Difficulty Closing Door:**
 - *Possible Cause:* Threshold is too high or improperly positioned.
 - *Solution:* Check for interference between the door bottom and the threshold. Adjust the door height or threshold position if feasible. Ensure the door sweep is not excessively thick.

7. SPECIFICATIONS

Attribute	Detail
Manufacturer	Blulu
Part Number	DIB-Blulu-2720
Item Weight	5.07 pounds
Product Dimensions	37.2 x 6.3 x 2.28 inches
Size	5 5/8" Wide x 36"
Color	Silver
Item Package Quantity	1
ASIN	B0FXGBTYDH
Date First Available	October 23, 2025

8. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Blulu Aluminum Exterior Door Threshold, please contact Blulu customer service directly. Refer to your purchase documentation for specific warranty terms and contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question