

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [MAXSHOT](#) /

› [MAXSHOT Electric Scooter V1L-Bag Included User Manual](#)

MAXSHOT V1L

MAXSHOT Electric Scooter V1L-Bag Included User Manual

Model: V1L

[Safety](#)

[Overview](#)

[Setup](#)

[Operating](#)

[Maintenance
& Support](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

INTRODUCTION

This manual provides essential instructions for the safe operation, assembly, maintenance, and troubleshooting of your MAXSHOT Electric Scooter V1L-Bag Included. Please read this manual thoroughly before your first ride to ensure optimal performance and safety. Retain this manual for future reference.

SAFETY GUIDELINES

WARNING: Riding an electric scooter carries inherent risks. Always wear a helmet and appropriate protective gear. Adhere to all local laws and regulations regarding electric scooter use.

- **Helmet Use:** Always wear a certified helmet and other protective gear such as knee and elbow pads.
- **Age and Weight Limits:** This scooter is designed for youth and adults. The maximum weight limit is 264 pounds. Do not exceed this limit.
- **Pre-Ride Check:** Before each ride, ensure all components are secure, brakes are functional, and the battery is sufficiently charged.
- **Riding Conditions:** Avoid riding in heavy rain, on slippery surfaces, or in low visibility conditions. Exercise caution on uneven terrain.
- **Traffic Laws:** Obey all local traffic laws, including speed limits and pedestrian right-of-way.
- **Charging Safety:** Charge the scooter in a well-ventilated area, away from flammable materials. Use only the provided charger.

PRODUCT OVERVIEW

The MAXSHOT Electric Scooter V1L is a compact and portable electric scooter designed for urban commuting and

short trips. It features an 8.5-inch solid tire, a 350W motor, dual braking, and app control.



Image: The MAXSHOT Electric Scooter V1L-Bag Included, showcasing its sleek design and the accompanying smartphone app interface.

Key Components

- **Handlebar:** Features grips, brake levers, throttle, display, and power button.
- **Stem:** Connects the handlebar to the deck, includes the folding mechanism.
- **Headlight & Taillight:** For visibility and safety.
- **Deck:** Foot platform for riding.
- **Wheels:** 8.5-inch solid rubber tires.
- **Motor:** Integrated into the rear wheel.
- **Braking System:** Dual braking (drum brake and EABS regenerative anti-lock braking).
- **Kickstand:** For parking the scooter.

- **Charging Port:** Located on the deck or stem.

SETUP

1. Unfolding the Scooter

The MAXSHOT V1L features an upgraded one-step folding mechanism for quick deployment.

1. Place the scooter on a flat surface.
2. Locate the folding latch near the base of the stem.
3. Release the latch and carefully lift the handlebar stem until it locks into the upright position. Ensure the locking mechanism is fully engaged.



Image: A person demonstrating the portable folding design of the scooter, easily fitting it into a car trunk.

2. Initial Charging

Before first use, fully charge the scooter's battery.

1. Ensure the scooter is powered off.
2. Open the charging port cover.
3. Connect the charger to the charging port, then plug the charger into a power outlet.
4. The charging indicator on the charger will typically turn red while charging and green when fully charged.
5. Charging time is approximately 3-4 hours.
6. Once fully charged, unplug the charger from the outlet first, then from the scooter.

3. App Installation and Pairing (Vicont App)

The Vicont App enhances your riding experience with additional features.

1. Download the 'Vicont' app from your smartphone's app store (iOS or Android).
2. Ensure your scooter is powered on and Bluetooth is enabled on your smartphone.
3. Open the Vicont app and follow the on-screen instructions to search for and pair with your MAXSHOT scooter.
4. Once paired, you can access features like locking/unlocking, setting max speed, cruise control, and monitoring battery/time.

SMART APP CONTROL



Bluetooth Pairing



Lock&Unlock Your Scooter



Headlight Control



Cruise Control



Customized Speed Limit



Switch Riding Modes

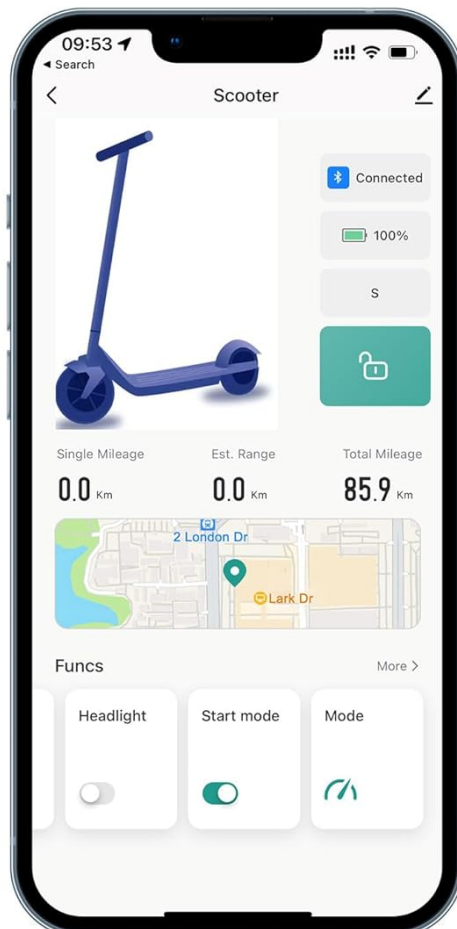


Image: A smartphone displaying the 'Smart App Control' interface, highlighting features such as Bluetooth pairing, scooter lock/unlock, headlight control, cruise control, customized speed limits, and riding mode selection.

1. Power On/Off

- **Power On:** Press and hold the power button on the display for a few seconds until the screen illuminates.
- **Power Off:** Press and hold the power button again until the display turns off.

2. Riding

1. Place one foot firmly on the deck.
2. Push off with your other foot to gain initial momentum.
3. Gently press the throttle lever to engage the motor.
4. Adjust speed using the throttle. The scooter has a maximum speed of 16 mph.
5. To change riding modes (if available), use the mode button on the display or via the app.

3. Braking

The scooter is equipped with a dual braking system for effective stopping.

- To brake, gently squeeze the brake levers on the handlebar.
- The dual system combines a drum brake and EABS (Electronic Anti-lock Braking System) for responsive and safe deceleration.
- Apply brakes smoothly to avoid sudden stops.



Keep You Safe



Lighting System



Dual Braking
System

Image: A rider on the MAXSHOT scooter, highlighting the integrated lighting system (headlight and taillight) and the dual braking system for enhanced safety.

4. Display and Controls

The handlebar display provides real-time information and control.

- **Speed Display:** Shows current riding speed.
- **Battery Life:** Indicates remaining battery charge.
- **Headlight Control:** Toggle the headlight on/off.
- **Cruise Control:** Activate to maintain a constant speed.



Image: A detailed view of the scooter's handlebar display, illustrating the speed readout, battery life indicator, headlight status, and cruise control function.

5. Folding for Storage/Transport

To fold the scooter for compact storage or transport:

1. Ensure the scooter is powered off.
2. Locate and release the folding latch mechanism on the stem.
3. Carefully fold the handlebar stem downwards until it clicks into place, securing it to the rear fender.
4. The scooter is now in its compact, folded state.

MAINTENANCE

1. Battery Care

- Regularly check the battery and charging device for any damage.
- Always use the matching battery and correct charging method.
- Avoid charging in unventilated or flammable environments.
- Do not allow the battery to fully discharge for extended periods. Charge it periodically even when not in use.

2. Tires

The MAXSHOT V1L uses 8.5-inch solid rubber tires, which do not require air pressure checks. However, regularly inspect tires for wear, cuts, or embedded debris.

3. Cleaning

- Wipe the scooter with a damp cloth. Do not use high-pressure water jets or harsh cleaning agents.
- Ensure the charging port cover is securely closed during cleaning.

4. Storage

- Store the scooter in a cool, dry place, away from direct sunlight and extreme temperatures.
- If storing for an extended period, ensure the battery is charged to approximately 50-70% and recharge it every 30-60 days.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scooter does not power on	Low battery; Loose connections; Power button malfunction	Charge the battery fully; Check all visible connections; Contact customer support if issue persists.
Motor not engaging	Throttle issue; Brake engaged; Low battery; App lock activated	Ensure throttle is pressed correctly; Release brake levers; Charge battery; Check Vicont app for lock status.
App not connecting	Bluetooth off; Scooter off; App error	Ensure scooter is on and Bluetooth is enabled on phone; Restart app and phone; Re-pair device.
Reduced range/speed	Low battery; Overload; Uphill riding; Extreme temperatures	Fully charge battery; Ensure rider weight is within limits; Performance naturally decreases uphill or in cold weather.

SPECIFICATIONS

Feature	Detail
Brand	MAXSHOT
Model Name	MAXSHOT V1L
Motor Power	350W
Max Speed	16 mph
Max Range	12 miles (V7 model, V1L may vary slightly but similar)
Battery	36V/5.2Ah (V7 model, V1L may vary slightly but similar)
Charging Time	3-4 Hours
Tire Size	8.5 Inches
Tire Type	Solid Rubber
Brake Style	Dual Braking (Drum Brake + EABS)

Feature	Detail
Suspension Type	Dual Suspension
Frame Material	Aluminum
Item Weight	26 Pounds
Weight Limit	264 Pounds
Special Feature	Foldable, App Control

Note: Specifications may vary slightly between specific V1L variants. The provided data is based on the general MAXSHOT V7 model, which shares many characteristics with the V1L.

WARRANTY & SUPPORT

Warranty Information

MAXSHOT offers a 12-month or 180-day warranty on various parts of the electric scooter. Please refer to your purchase documentation for specific warranty terms applicable to your model.

Customer Support

For any inquiries, technical assistance, or warranty claims, please contact MAXSHOT customer support. Refer to your product packaging or the MAXSHOT official website for contact details.

