

Rowenta X-pert 7.60 Floor Brush

Rowenta X-pert 7.60 Floor Brush Instruction Manual

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your Rowenta X-pert 7.60 compatible floor brush. Please read these instructions carefully before installation and use to ensure optimal performance and longevity of the accessory.

The Rowenta X-pert 7.60 floor brush is an original accessory designed to enhance the cleaning capabilities of your X-pert 7.60 cordless vacuum cleaner. It features optimized bristles and a versatile design for effective cleaning across various floor types.

2. COMPATIBILITY

This floor brush is specifically designed for and compatible with all Rowenta X-pert 7.60 series cordless vacuum cleaner models. This includes:

- X-pert 7.60 Essential
- X-pert 7.60 Animal Care
- X-pert 7.60 Allergy

Specific compatible model numbers include: **RH6A73WO, RH6A31WO, RH6A33WO, RH6A21WO, RH6A71WO, RH6A75WO, RH6A35WO.**

3. SAFETY INSTRUCTIONS

Please observe the following safety guidelines to prevent damage to the accessory or your vacuum cleaner, and to ensure safe operation:

- Ensure the vacuum cleaner is turned off and unplugged (if applicable) before attaching or detaching the floor brush.
- Do not use the brush on wet surfaces or to pick up liquids.
- Regularly check the brush for any damage or blockages. Do not use if damaged.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.

- This accessory is intended for household use only.

4. PACKAGE CONTENTS

The package should contain the following item:

- 1 x Rowenta X-pert 7.60 Compatible Floor Brush

Note: The vacuum cleaner itself is sold separately.

5. SETUP AND INSTALLATION

Follow these steps to attach the floor brush to your Rowenta X-pert 7.60 vacuum cleaner:

1. **Preparation:** Ensure your Rowenta X-pert 7.60 vacuum cleaner is turned off and disconnected from its power source.
2. **Align the Brush:** Locate the attachment point on the main body or extension tube of your vacuum cleaner. Align the connector of the floor brush with this point.
3. **Attach Securely:** Push the floor brush firmly onto the vacuum cleaner's attachment point until you hear a click, indicating that the secure locking mechanism has engaged. Gently pull on the brush to ensure it is securely fastened.



Figure 1: The Rowenta X-pert 7.60 Floor Brush. This image shows the brush head with its red and black bristles, designed for

effective dust and debris collection on various floor types. The attachment point is visible, ready for connection to the vacuum cleaner.

To detach the brush, press the release button (if present on your vacuum model) and pull the brush away from the vacuum cleaner.

6. OPERATION

Once the floor brush is securely attached, you can begin cleaning:

1. **Power On:** Turn on your Rowenta X-pert 7.60 vacuum cleaner according to its operating instructions.
2. **Cleaning:** Guide the floor brush across the desired surfaces. The optimized bristles and swivel head allow for effective cleaning on hard floors and carpets, reaching difficult corners with ease.
3. **Maneuverability:** The ergonomic design and swivel head facilitate smooth movement and control during cleaning.
4. **Storage:** After use, turn off the vacuum cleaner and store it in a suitable location.

7. MAINTENANCE AND CLEANING

Regular maintenance ensures the longevity and optimal performance of your floor brush:

- **Brush Roll Cleaning:** Periodically check the brush roll for tangled hair, threads, or debris. Use scissors or a brush cleaning tool to carefully cut and remove any obstructions.
- **Exterior Cleaning:** Wipe the exterior of the brush head with a damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Inspection:** Inspect the bristles for wear or damage. While the bristles are designed for durability, replacement may be necessary over time.
- **Drying:** Ensure the brush is completely dry before reattaching it to the vacuum cleaner or storing it.

8. TROUBLESHOOTING

If you encounter issues with your floor brush, consider the following common solutions:

- **Reduced Suction:**
 - Check for blockages in the brush head or the vacuum cleaner's hose/tube.
 - Ensure the brush is securely attached to the vacuum cleaner.
 - Verify that the vacuum cleaner's dustbin is not full and its filters are clean.
- **Brush Not Rotating (if applicable):**
 - Remove any tangled hair or debris from the brush roll.
 - Ensure the brush roll is correctly seated.
- **Difficulty Attaching/Detaching:**
 - Ensure proper alignment of the connectors.
 - Check for any debris obstructing the locking mechanism.

If problems persist, refer to your main vacuum cleaner manual or contact Rowenta customer support.

9. SPECIFICATIONS

Brand	Rowenta
Model Compatibility	Rowenta X-pert 7.60 series (Essential, Animal Care, Allergy)
Specific Model Numbers	RH6A73WO, RH6A31WO, RH6A33WO, RH6A21WO, RH6A71WO, RH6A75WO, RH6A35WO
Material	Plastic
Item Weight	500 g
Package Dimensions	35 x 30 x 10 cm
ASIN	B0FXM1B4H1

10. WARRANTY AND SUPPORT

For information regarding the warranty of your Rowenta product, please refer to the documentation provided with your main Rowenta X-pert 7.60 vacuum cleaner or visit the official Rowenta website. For technical support or inquiries, please contact Rowenta customer service through their official channels.

You can find more information and support on the official Rowenta website:www.rowenta.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question