

Gevi DCMB0-BK0A1

Gevi 10-Cup Drip Coffee Maker with Built-in Grinder Instruction Manual

Model: DCMB0-BK0A1

INTRODUCTION

Thank you for choosing the Gevi 10-Cup Drip Coffee Maker with Built-in Grinder. This appliance is designed to provide fresh, delicious coffee with convenience and versatility. Please read this manual thoroughly before operating the coffee maker to ensure safe and optimal performance. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any

control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.

PACKAGE CONTENTS

Please check the box for the following items:

- 1 x Drip Coffee Maker
- 1 x Glass Coffee Pot (Carafe)
- 1 x Scoop
- 1 x Permanent Filter
- 1 x Manual (this document)

Note: The Filter Insert with Drip Stop and Filter Ring are typically pre-assembled within the coffee maker.



Image: Included accessories for the Gevi coffee maker, showing the permanent filter, filter insert with drip stop, glass coffee pot, scoop, and filter ring.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Gevi coffee maker.





Image: Front view of the Gevi 10-Cup Drip Coffee Maker, showing the control panel, bean hopper, and glass carafe.

Key Components:

- **Bean Hopper:** For whole coffee beans.
- **Grinder:** Integrated burr grinder for fresh grinding.
- **Water Tank:** 1.5L capacity for water.
- **Control Panel:** Digital display, program buttons, grind off, strength control, hour, min, on/off.
- **Filter Basket:** Holds the permanent filter or paper filter.
- **Glass Carafe:** 10-cup capacity for brewed coffee.

- **Warming Plate:** Keeps coffee warm after brewing.

SETUP AND FIRST USE

1. Unpacking and Initial Cleaning:

1. Remove all packaging materials and labels from the coffee maker.
2. Wash the glass carafe, permanent filter, and scoop in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the exterior of the coffee maker with a damp cloth.
4. Before first use, run two full cycles with only water to clean the internal components. Fill the water tank to the MAX level, place the empty carafe on the warming plate, and press the ON/OFF button to start. Discard the water after each cycle.

2. Placement:

Place the coffee maker on a flat, stable, heat-resistant surface, away from the edge of the counter. Ensure there is adequate clearance above the unit for opening the lid and accessing the bean hopper and water tank.



Image: Gevi coffee maker on a kitchen counter, illustrating its dimensions (12.36"D x 8.38"W x 16.93"H).

OPERATING INSTRUCTIONS

1. Adding Water:

Open the water tank lid and fill the water tank with fresh, cold water up to the desired cup marking (2-10 cups). Do not exceed the MAX fill line.



Image: Hand pouring water into the coffee maker's water reservoir.

2. Adding Coffee Beans (Grind & Brew):

1. Open the bean hopper lid and add whole coffee beans. Do not overfill.
2. Select your desired grind fineness using the grind setting knob. There are 8 grind settings available.
3. Ensure the permanent filter is correctly placed in the filter basket.

Brew Whole Beans or Pre-Ground

2-in-1 Grind & Brew Coffee Machine



Image: Gevi coffee maker showing coffee beans being added to the grinder and ground coffee in the filter basket.

Able to Achieve Ideal Fineness

8 Grind Settings



Image: Hand adjusting the grind fineness knob on the Gevi coffee maker, indicating 8 grind settings.

3. Adding Pre-Ground Coffee:

1. Press the "GRIND OFF" button to disable the grinder.
2. Add the desired amount of pre-ground coffee directly into the permanent filter. Use the provided scoop for accurate measurement.

4. Selecting Coffee Strength:

Press the "STRENGTH CONTROL" button to cycle through the available strength options: Mild, Medium, and Strong. The selected strength will be indicated on the display.

3 Different Coffee Strengths for Choice



Image: Control panel of the Gevi coffee maker showing the "STRENGTH CONTROL" button and indicators for Mild, Medium, and Strong coffee.

5. Setting the Timer (Programmable Brew):

The coffee maker features a 24-hour programmable timer for delayed brewing.

1. Press the "PROGRAM" button. The display will flash.
2. Use the "HOUR" and "MIN" buttons to set the desired brew time.
3. Press "PROGRAM" again to confirm the setting. The program indicator light will illuminate.



Image: Close-up of the Gevi coffee maker's control panel, highlighting the digital display and timer setting buttons.

6. Starting the Brew Cycle:

Place the glass carafe with its lid on the warming plate. Press the "ON/OFF" button to start brewing. The indicator light will illuminate, and the brewing process will begin.

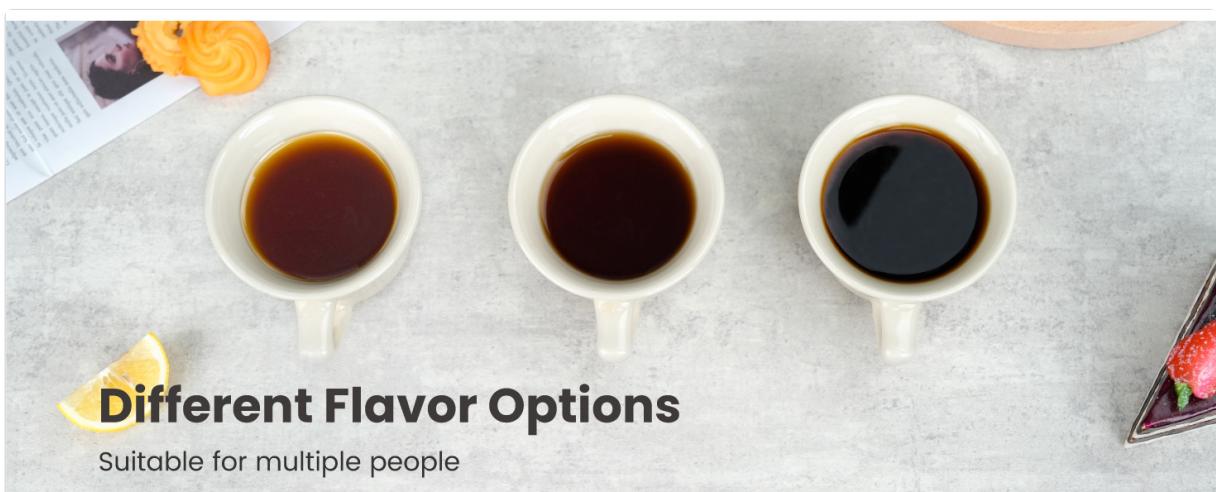


Image: A sequence of images showing adding water, adding coffee (powder or beans), personalizing settings, and one-touch brewing with the Gevi coffee maker.

7. Keep Warm Function:

After brewing, the warming plate will automatically activate to keep the coffee warm for 15 to 120 minutes. The duration can be adjusted (refer to the full manual for specific adjustment steps if not on control panel).



Image: Coffee being poured from the carafe, with the warming plate glowing, indicating the keep warm function is active for 15-120 minutes.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

1. Daily Cleaning:

- Always unplug the coffee maker before cleaning.
- Wash the glass carafe, permanent filter, and scoop in warm, soapy water after each use. These parts are also dishwasher safe (top rack only).
- Wipe the exterior of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Empty and clean the bean hopper regularly to prevent oil buildup.

2. Cleaning the Grinder:

The integrated burr grinder should be cleaned periodically to prevent clogging and ensure consistent grinding. Refer to the full manual for detailed instructions on disassembling and cleaning the burr components.

3. Descaling:

Mineral deposits (limescale) can build up in your coffee maker over time, affecting performance. Descale your coffee maker every 2-3 months, or more frequently if you have hard water.

1. Fill the water tank with a mixture of white vinegar and water (1:2 ratio).
2. Place the empty carafe on the warming plate.
3. Run a full brew cycle.
4. After the cycle, let the solution sit in the carafe for 15-20 minutes.
5. Discard the solution and rinse the carafe thoroughly.
6. Run 2-3 cycles with fresh, clean water to remove any residual vinegar taste.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No water in tank; power not connected; program timer set.	Fill water tank; ensure plug is in outlet; check program settings.
Coffee tastes weak.	Not enough coffee; coarse grind setting; strength setting too low.	Add more coffee; adjust grind to finer setting; select a stronger brew strength.
Grinder is noisy or not grinding.	Beans jammed; grinder needs cleaning.	Clear any jammed beans; clean the burr grinder components.
Coffee overflows from filter.	Too much coffee; filter clogged; carafe not properly placed.	Reduce coffee amount; clean filter; ensure carafe is centered on warming plate.
Water leaks from unit.	Water tank overfilled; components not assembled correctly.	Do not exceed MAX fill line; ensure all parts are securely in place.

SPECIFICATIONS

Brand	Gevi
Model Name	Drip Coffee Machine (DCMB0-BK0A1)
Capacity	10 Cups / 1.5 Liters
Product Dimensions	12.36"D x 8.38"W x 16.93"H
Item Weight	9.92 pounds
Voltage	120 Volts

Special Features	Auto Shut-Off, Integrated Coffee Grinder, Keep Warm, Permanent Filter, Programmable
Exterior Finish	Stainless Steel

WARRANTY AND SUPPORT

Gevi products are manufactured to the highest quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Gevi website. Please have your model number (DCMB0-BK0A1) and purchase date available when contacting support. For further assistance, you may also contact the seller directly through your purchase platform.

PRODUCT VIDEOS

Your browser does not support the video tag.

Video: Overview of the Gevi 10-Cup Drip Coffee Maker's features and operation. (Duration: 1:34)

Your browser does not support the video tag.

Video: Demonstration of the Gevi coffee maker's functionality. (Duration: 1:29)

Your browser does not support the video tag.

Video: Detailed guide on using the Gevi coffee maker. (Duration: 3:21)

Your browser does not support the video tag.

Video: Quick demonstration of the Gevi coffee maker. (Duration: 1:03)

Your browser does not support the video tag.

Video: User guide for the Gevi coffee maker. (Duration: 1:25)

Your browser does not support the video tag.

Video: Short clip demonstrating a feature of the Gevi coffee maker. (Duration: 0:49)

Your browser does not support the video tag.

Video: Comprehensive demonstration of the Gevi coffee maker's functions. (Duration: 1:51)