

[Manuals.plus](#) /

› [MZK](#) /

› MZK 40V Cordless Leaf Blower Vacuum Mulcher User Manual (Model ET1713)

MZK ET1713

MZK 40V Cordless Leaf Blower Vacuum Mulcher User Manual

Model: ET1713

1. INTRODUCTION

Thank you for choosing the MZK 40V Cordless Leaf Blower Vacuum Mulcher. This 3-in-1 tool is designed to provide efficient and convenient yard cleanup, combining the functions of a blower, vacuum, and mulcher. Please read this manual carefully before operating the tool to ensure safe and effective use. Keep these instructions for future reference.

2. SAFETY INSTRUCTIONS

WARNING: Always wear eye protection, hearing protection, and heavy-duty gloves when operating this tool. Do not operate in wet conditions or near flammable liquids.

General Safety

- Read all instructions before use.
- Keep children and bystanders away while operating.
- Inspect the tool for damage before each use. Do not use if damaged.
- Ensure all guards and safety features are in place and functioning correctly.
- Do not point the blower nozzle at people or animals.

Battery Safety

- Use only MZK 40V batteries and chargers.
- Do not charge batteries in damp or wet locations.
- Do not incinerate batteries, even if severely damaged. They can explode in a fire.
- Store batteries away from metal objects that could short the terminals.
- If battery fluid comes into contact with skin or eyes, flush with water immediately and seek medical attention.

3. PACKAGE CONTENTS

Verify that all items are present upon unpacking:

- MZK 40V Cordless Leaf Blower Vacuum Mulcher Unit
- Blower Tube
- Vacuum Tube
- 40L Collection Bag
- 2 x 4.0Ah Lithium-Ion Batteries
- Battery Charger
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your MZK 40V Leaf Blower Vacuum Mulcher.




Ergonomic Handle: Designed for comfortable grip and reduced hand fatigue during operation.



WHEELED TUBE, BETTER CONTROL

Wheeled Tube: Provides support and easier maneuverability, reducing strain during use.

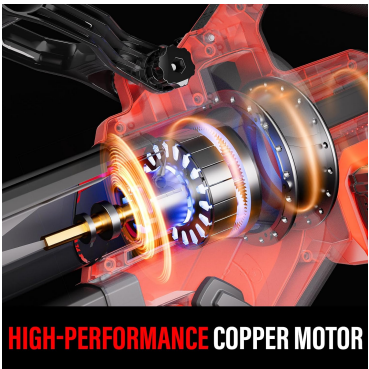

High-Performance Copper Motor: Durable and efficient motor for powerful operation.

Key Components:

1. **Main Unit:** Houses the motor, battery compartment, and control panel.

2. **Handle:** Ergonomic grip for comfortable operation.
3. **Trigger/Power Switch:** Activates the tool.
4. **Mode Switch:** Allows quick transition between blower and vacuum modes.
5. **Speed Control Dial/Buttons:** Adjusts airflow speed.
6. **Turbo Boost Button:** Provides a temporary surge of maximum power.
7. **Blower Tube:** For directing airflow in blower mode.
8. **Vacuum Tube:** For collecting debris in vacuum mode, often with integrated wheels.
9. **Collection Bag:** Attaches to the unit to collect mulched debris.
10. **Battery Compartment:** Holds the 40V battery.

5. SETUP

5.1 Charging the Batteries

Before first use, fully charge both 4.0Ah batteries.

1. Connect the charger to a standard power outlet.
2. Slide a battery onto the charger until it clicks into place.
3. The charger indicator light will show charging status (refer to charger manual for specific light patterns).
4. Once fully charged, remove the battery and repeat for the second battery.



Dual Batteries: The unit comes with two 4.0Ah batteries for extended runtime.

5.2 Attaching Tubes and Collection Bag

The MZK 40V unit features a quick mode switch for easy conversion.



Quick Mode Switch: Easily switch between blower and vacuum modes.



Switching Modes: Rotate the lever

to select Blower or Vacuum mode.

1. **For Blower Mode:** Ensure the mode switch is set to 'Blower'. Attach the blower tube to the outlet until it locks securely.
2. **For Vacuum/Mulcher Mode:** Ensure the mode switch is set to 'Vacuum'. Attach the vacuum tube to the inlet. Attach the 40L collection bag to the discharge port, ensuring it is securely fastened to prevent debris leakage.

6. OPERATING INSTRUCTIONS

Always ensure batteries are fully charged and securely installed before operation.



POWERFUL PERFORMANCE
UP TO 160MPH BLOWER SPEED UP TO 600 CFM

Blower Mode: Directs powerful airflow to clear leaves and debris.



3-IN-1 LEAF BLOWER/VACUUM/MULCHER



3-in-1 Functionality: Easily switch between blowing, vacuuming, and mulching.

6.1 Starting and Stopping

1. Insert a charged 40V battery into the battery compartment until it clicks.
2. To start, press and hold the safety lock-off button (if present), then squeeze the trigger.
3. To stop, release the trigger.

6.2 Speed Control and Turbo Boost

The unit features 6 variable speed settings and a Turbo Boost function.

TURBO BOOST FOR POWERFUL LEAF CLEANUP



Speed Control: Adjust from 1 to 6 for varying tasks. Press the 'Turbo' button for maximum power.

- Use the speed control buttons (+/-) to select the desired airflow speed (1-6). Lower speeds are suitable for light debris, while higher speeds are for heavier tasks.
- For stubborn leaves or wet debris, press the **Turbo Boost** button for a 10-second surge of maximum power.

6.3 Blower Operation

With the blower tube attached and mode switch set to 'Blower':

- Hold the tool firmly with both hands.
- Sweep the nozzle from side to side, moving debris into piles.
- Use lower speeds for delicate areas and higher speeds for open spaces.

6.4 Vacuum and Mulcher Operation

With the vacuum tube and collection bag attached, and mode switch set to 'Vacuum':



Mulching Function: Reduces up to 15 bags of leaves into one, collected in the 40L bag.

- Ensure the collection bag is properly attached and zipped.
- Lower the vacuum tube to the ground, using the integrated wheels for support and control.
- Slowly move the vacuum tube over the debris. The mulcher blades will shred leaves as they are drawn into the bag.
- Empty the collection bag when it is full to maintain optimal performance.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your tool.

7.1 Cleaning

- Always remove the battery before cleaning.
- Wipe the exterior of the tool with a damp cloth. Do not use strong detergents or solvents.

- Clear any debris from the air vents to prevent overheating.
- Empty and clean the collection bag regularly. Wash with water and mild soap if necessary, ensuring it is completely dry before reattaching.
- Inspect the vacuum tube and mulcher blades for any blockages or damage. Remove any lodged debris.

7.2 Storage

- Store the tool in a dry, secure location out of reach of children.
- Remove batteries from the tool before storing for extended periods.
- Store batteries in a cool, dry place, partially charged (around 50%) for best longevity.

8. TROUBLESHOOTING

If you encounter issues, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Tool does not start	Battery not inserted correctly Battery discharged Safety lock-off not engaged	Re-insert battery firmly Charge battery Ensure safety lock-off is pressed before trigger
Low blowing/suction power	Battery low Tube/inlet/outlet blocked Collection bag full/clogged Incorrect mode selected	Charge battery Clear any blockages Empty and clean collection bag Verify mode switch position
Excessive vibration/noise	Debris lodged in impeller/mulcher blades Loose components	Remove battery, clear debris from impeller/blades Check all connections and tighten if necessary
Short runtime	Battery not fully charged Operating at high speed/Turbo mode continuously Battery aging	Ensure battery is fully charged Use appropriate speed for the task Consider replacing old batteries

If the problem persists after trying these solutions, please contact MZK customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	MZK
Model Number	ET1713
Power Source	Battery Powered
Battery Voltage	40V (2 x 4.0Ah batteries included)
Max Airflow	600 CFM

Feature	Specification
Max Air Speed	160 MPH
Functions	3-in-1 Blower, Vacuum, Mulcher
Mulching Ratio	15:1
Collection Bag Capacity	40 Liters
Speed Settings	6 Variable Speeds + Turbo Boost
Product Dimensions (L x W x H)	10" x 5" x 15"
Special Features	Ergonomic Handle, Wheeled Vacuum Tube, Quick Mode Switch

10. WARRANTY AND SUPPORT

MZK is committed to providing quality products. For warranty information, technical support, or replacement parts, please contact MZK customer service through the retailer where the product was purchased or visit the official MZK website. Please have your model number (ET1713) and purchase date available when contacting support.

© 2026 MZK. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FXM6RZDL>

More documents and user manuals: <https://manuals.plus/>