

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KEF](#) /

› [KEF Coda W Wireless HiFi Speakers Instruction Manual](#)

## KEF CodaW

# KEF Coda W Wireless HiFi Speakers Instruction Manual

Model: CodaW

## INTRODUCTION

The KEF Coda W Wireless HiFi Speaker system offers high-fidelity audio in an accessible, all-in-one package. Designed to deliver detailed and immersive sound, it provides versatile connectivity options for various audio sources. The Coda W combines classic design principles with advanced acoustic technology.



Image: Front view of the KEF Coda W Wireless HiFi Speakers in Moss Green.

## PACKAGE CONTENTS

---

Please ensure all items listed below are present in your package:

- KEF Coda W Primary Speaker
- KEF Coda W Secondary Speaker
- Power Cable
- Quick Start Guide
- Remote Control
- USB-C Inter-speaker Cable

## SETUP GUIDE

---

1. **Placement:** Position your KEF Coda W speakers in your desired listening area. For optimal stereo imaging, place them equidistant from your listening position and at ear level. Ensure adequate space around the speakers for proper ventilation and sound dispersion.



Image: KEF Coda W speakers positioned on a desk, demonstrating typical placement.

2. **Connect Primary and Secondary Speakers:** Use the provided USB-C inter-speaker cable to connect the Primary speaker to the Secondary speaker. Locate the "TO P/S" port on the Secondary speaker and the corresponding port on the Primary speaker.



Image: Rear panel of the KEF Coda W Primary speaker, highlighting the connectivity options including the USB-C inter-speaker port.

3. **Power Connection:** Connect the power cable to the AC input on the Primary speaker, then plug the other end into a wall outlet.
4. **Initial Power On:** Press the power button on the Primary speaker or use the remote control to turn on the system. The indicator light will illuminate.
5. **App Setup (Recommended):** Download the KEF Connect app from your device's app store. Follow the in-app instructions to connect your Coda W speakers to your Wi-Fi network and configure settings. This enables advanced features and streaming options.

## OPERATING INSTRUCTIONS

---

### Connectivity Options:

- **Bluetooth 5.4 with aptX:** For wireless streaming from compatible devices. Activate Bluetooth pairing mode on the speakers and select "KEF Coda W" from your device's Bluetooth settings.
- **HDMI ARC:** Connect your TV using an HDMI cable to the HDMI ARC port on the Primary speaker for high-fidelity TV audio.
- **USB-C Audio:** For high-resolution audio playback from computers or other USB-C enabled devices. Supports up to 24-bit/192kHz.
- **RCA (LINE) Input:** Connect analog sources such as CD players or turntables with a built-in phono preamp.
- **Phono Input:** Directly connect turntables without a built-in phono preamp.
- **Optical Input:** For digital audio sources like game consoles or older TVs.

### Remote Control:

Use the included remote control to adjust volume, switch input sources, and power the speakers on/off. Ensure batteries are correctly inserted.

## MAINTENANCE

---

- Keep the speakers clean by gently wiping them with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Ensure proper ventilation around the speakers to prevent overheating.
- Protect the speakers from direct sunlight, excessive heat, moisture, and dust.
- Do not attempt to open the speaker enclosures, as this may void your warranty and expose you to electrical hazards.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No sound	Power cable disconnected, incorrect input selected, volume too low.	Check power connection, verify input source, increase volume.
Bluetooth pairing issues	Speakers not in pairing mode, device too far, interference.	Ensure speakers are in BT pairing mode, move device closer, restart speakers and device.
Distorted audio	Source audio quality, cable issues, volume too high.	Check audio source, replace cables, reduce volume.

Problem	Possible Cause	Solution
Remote control not working	Dead batteries, obstruction, remote out of range.	Replace batteries, remove obstructions, ensure line of sight to speakers.

## SPECIFICATIONS

---

**Model Name:** Coda W

**Speaker Type:** Bookshelf

**Connectivity Technology:** Bluetooth, HDMI, Optical, RCA, USB

**Speaker Maximum Output Power:** 100 Watts

**Brand:** KEF

**Product Dimensions:** 10.55"D x 13.2"W x 11.2"H

**Item Weight:** 33.5 pounds

**Color:** Moss Green

**Special Features:** Bass Boost, Hi Res Audio, USB Port

**Included Components:** Power Cable, Quick Start Guide, Remote

**UPC:** 637203051777

**Manufacturer:** KEF

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the Quick Start Guide included in your package or visit the official KEF website. Keep your proof of purchase for warranty claims.

Online resources and FAQs may also be available on the KEF support pages.