

JGUG T24 Wireless Earbuds User Manual

Model: T24 | Brand: JGUG

INTRODUCTION

The JGUG T24 Wireless Earbuds offer an advanced audio experience with active noise cancellation, clear call technology, and a unique touchscreen charging case. Designed for comfort and durability, these earbuds are suitable for various activities, from daily commutes to intense workouts.

PACKAGE CONTENTS

- 1 x T24 Wireless Earbuds
- 3 x Silicone Ear Tips (S / M / L)
- 1 x LED Charging Case
- 1 x USB-C Charging Cable
- 1 x User Manual

PRODUCT FEATURES

Touchscreen Charging Case



The innovative touchscreen on the charging case provides direct control over various functions without

needing your phone. Manage music playback, locate misplaced earbuds, skip tracks, control your phone's camera, adjust light levels, switch languages, and customize screen wallpapers.

Active Noise Cancellation (ANC) & Transparency Mode




Experience immersive audio with Hybrid Active Noise Cancellation, reducing ambient noise by up to 45dB. For awareness of your surroundings, activate Transparency Mode to hear important sounds without removing your earbuds.

Crystal-Clear Calls (ENC)

Dual-ENC microphones ensure your voice is transmitted clearly, even in noisy environments, making calls crisp and understandable.

High-Fidelity Stereo Sound

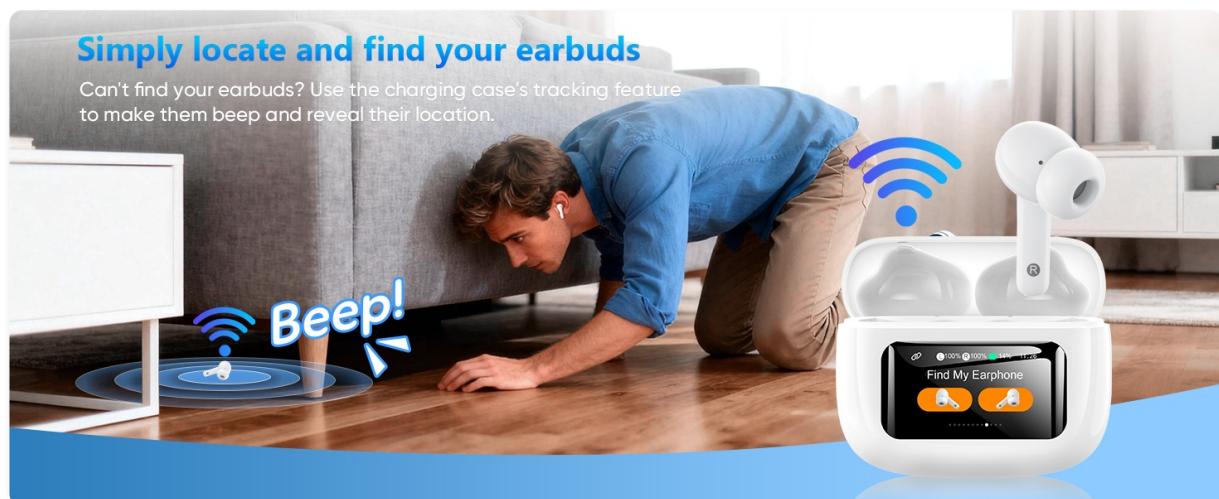

Equipped with 14.2mm dynamic drivers, the earbuds deliver rich, powerful sound. Customize your listening experience with 5 EQ presets: Standard, Rock, Jazz, Pop, and Classic.

Extended Battery Life & Quick Charge

Ready, Pose, Snap

Simply tap the screen when your phone camera is ready to capture a moment. No awkward arm twisting, just a quick selfie in seconds.



Enjoy up to 8 hours of playtime from the earbuds on a single charge. The compact charging case extends total listening time to 48 hours. A quick 15-minute charge provides 2 hours of playback.

Comfortable & Secure Fit

Music switch/pause

After connecting to Bluetooth to play music, you can freely switch songs anytime and anywhere without taking out your phone



Lightweight and ergonomically designed, the earbuds come with three sizes of soft silicone ear tips (S/M/L) to ensure a personalized and secure fit for all-day comfort during various activities.

Bluetooth 6.0 Connectivity

Advanced Bluetooth 6.0 technology provides a stable and seamless connection up to 15 meters (33 feet), ensuring uninterrupted audio.

IPX7 Waterproof Rating


The earbuds are IPX7 waterproof, making them resistant to sweat, rain, and splashes, ideal for workouts and outdoor use.

SETUP

Charging

Before first use, fully charge the earbuds and charging case using the provided USB-C cable. Connect the USB-C cable to the charging port on the bottom of the case and a compatible power source. The LED display will indicate charging status.

Pairing

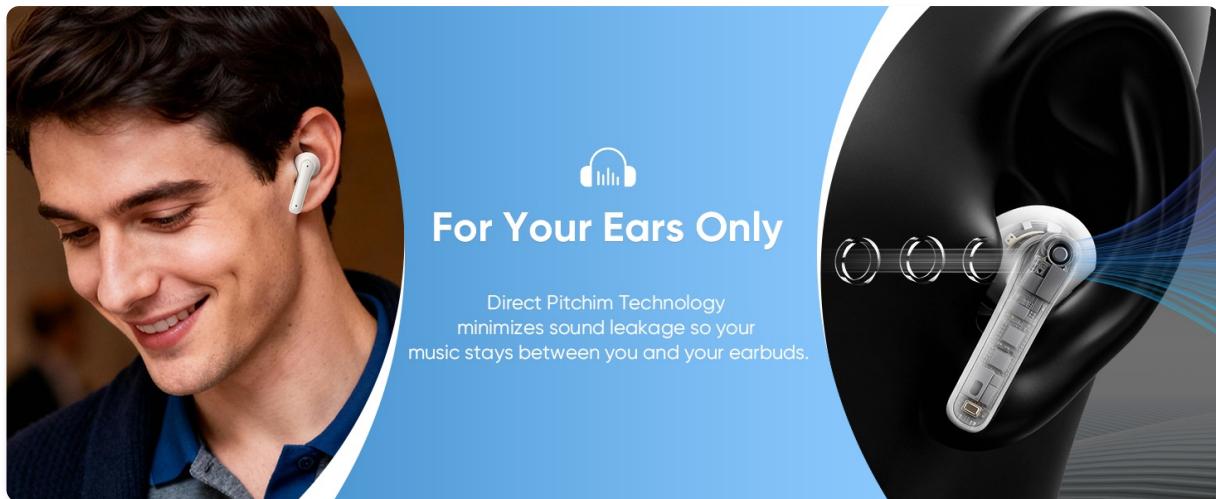


1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for 'JGUG T24'.
3. Select 'JGUG T24' to connect. A voice prompt will confirm successful pairing.

Wearing

Select the appropriate silicone ear tips (S/M/L) for a comfortable and secure fit. Insert the earbuds into your ears and gently twist until they feel snug.

OPERATING INSTRUCTIONS

Earbud Touch Controls

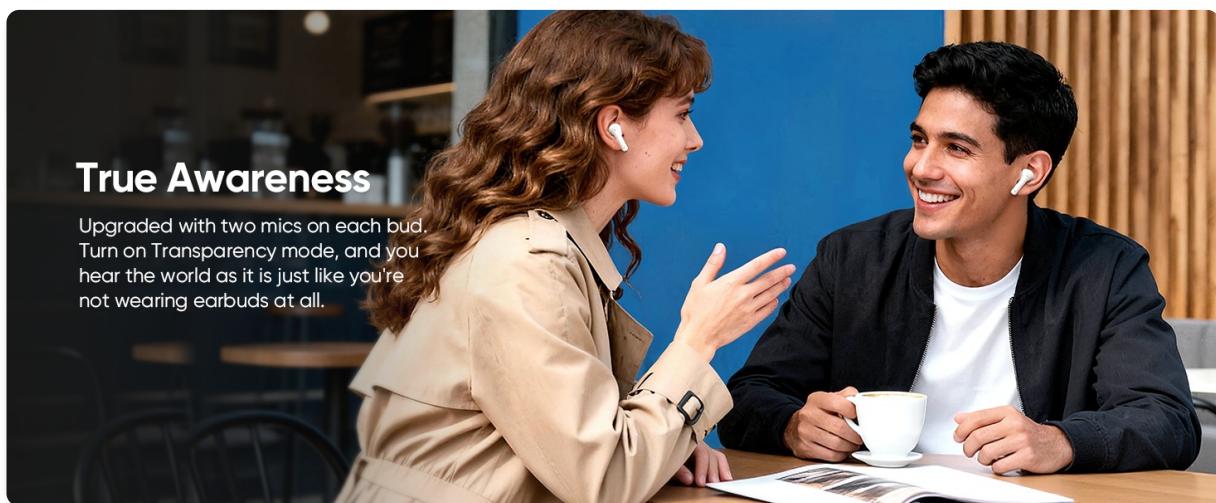

- **Play/Pause:** Tap L/R once.
- **Previous Track:** Tap L twice.
- **Next Track:** Tap R twice.
- **Answer/End Calls:** Tap L/R twice.
- **Reject Calls:** Hold L/R for 3 seconds.
- **Volume Up:** Hold R (click in rapid succession).
- **Volume Down:** Hold L (click in rapid succession).
- **Activate Voice Assistant (Siri):** Tap L/R four times.

Touchscreen Case Functions

- **Noise Reduction Modes:** Swipe on the case screen to select ANC On, ANC Off, or Transparency Mode.
- **Find My Earphone:** Tap the "Find My Earphone" icon on the case screen. Select the earbud (L or R) to make it emit a sound, helping you locate it.
- **Photography Assistant:** When connected to your phone, tap the camera icon on the case screen to remotely trigger your phone's camera shutter.
- **Music Control:** Use the case screen to manage music playback (play/pause, skip tracks).
- **Screen Wallpaper Switching:** Customize the case display by selecting from various pre-loaded wallpapers.
- **Language Switch:** Change the display language on the case.
- **Light Level:** Adjust the brightness of the case display.
- **Screen Lock:** Lock the touchscreen to prevent accidental touches.

Your browser does not support the video tag. Please update your browser to view this content.

Video: Demonstration of the T24 wireless earbuds with touchscreen features, including navigation and various functions.

Maintenance

Cleaning

Regularly clean the earbuds and charging case. Use a soft, dry, lint-free cloth. For ear tips, remove them and wash with mild soap and water, then dry thoroughly before reattaching. Do not use harsh chemicals or abrasive materials.

Storage

Store the earbuds in their charging case when not in use to protect them and ensure they remain charged. Avoid extreme temperatures and direct sunlight.

Troubleshooting

- **Earbuds not pairing:** Ensure both earbuds are in the charging case and fully charged. Open the case to activate pairing mode. Check your device's Bluetooth settings and forget previous connections if necessary, then try pairing again.
- **No sound/Low volume:** Check the volume levels on both your device and the earbuds. Ensure earbuds are properly seated in your ears. Confirm successful Bluetooth connection.
- **ANC not working:** Verify ANC is enabled via the touchscreen case. Ensure earbuds are properly sealed in your ear canal.
- **Charging case not charging:** Check the USB-C cable and power adapter. Ensure the cable is securely connected to both the case and the power source.
- **Earbuds lost:** Use the 'Find My Earphone' feature on the touchscreen case to make the lost earbud emit a sound.

Specifications

Feature	Detail
---------	--------

Model Name	T24
Connectivity	Bluetooth 6.0 (Wireless)
Bluetooth Range	15 Meters
Noise Control	Adaptive Noise Cancellation, Transparency Mode
Audio Driver	14.2mm Dynamic Driver
Battery Life (Earbuds)	8 Hours
Battery Life (with Case)	48 Hours
Charging Time	1.5 Hours
Water Resistance	IPX7
Control Type	Touch Control (Earbuds), Touchscreen (Case)
Material	Acrylonitrile Butadiene Styrene (ABS)
Item Weight	3.2 ounces

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official JGUG website or contact your retailer. Keep your purchase receipt for warranty claims.