

[Manuals.plus](#) /

› [TOBUSA](#) /

› TOBUSA 28-inch Touch Control Table Lamps (Set of 2) User Manual

TOBUSA T0344L-BN+AP-27

TOBUSA 28-inch Touch Control Table Lamps (Set of 2) User Manual

Model: T0344L-BN+AP-27

1. INTRODUCTION

Thank you for choosing the TOBUSA 28-inch Touch Control Table Lamps. This set of two modern lamps is designed to enhance your living space with convenient lighting and charging solutions. Featuring 3-way dimmable touch control, dual USB charging ports, and an AC outlet, these lamps are perfect for bedrooms, living rooms, or home offices. Please read this manual carefully to ensure proper assembly, operation, and maintenance.

2. WHAT'S IN THE BOX

Each TOBUSA lamp set includes the following components:

- 2 x Lamp Bases (Beige & Brown)
- 2 x Fabric Lampshades (Cream)
- 2 x Harps (for lampshade support)
- 2 x Finials
- 2 x A19 LED Edison Bulbs (Warm White, 2700K, 800 lumen, 7W)
- User Manual

3. PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	T0344L-BN+AP-27
Dimensions (D x W x H)	7.87"D x 15.75"W x 28"H
Color	Beige&Brown
Material Type	Metal, Fabric

Finish Type	Polished
Shade Material	Linen
Light Source Type	LED
Bulb Base	E26
Wattage	Max 100 watts (7W LED bulbs included)
Switch Type	Touch Control
Dimmable	3-Way (Low-Medium-High)
Charging Ports	2 x 5V/2.1A USB Ports, 1 x US Standard 2-prong AC Outlet
Indoor/Outdoor Usage	Indoor Only
Manufacturer	Sharp Lighting Technology Co.,Ltd

4. SETUP AND INSTALLATION

Assembling your TOBUSA table lamp is a simple 4-step process:

1. **Place the harp onto the saddle:** Carefully attach the harp (the metal frame that holds the lampshade) onto the saddle located on the lamp base. Ensure it is seated without inclination for stability.
2. **Install the LED bulb:** Screw the included A19 LED bulb into the E26 socket.
3. **Put the lampshade on the harp:** Place the fabric lampshade onto the harp, aligning it properly.
4. **Screw the finial to finish the look:** Secure the lampshade by screwing the finial onto the top of the harp.



Built-In USB Charging Ports and 2-Prong AC Outlet

Fast charge your cellphone and other electronic devices

Figure 1: Easy 4-step assembly guide for the TOBUSA table lamp.



Figure 2: Close-up of the harp being placed onto the saddle.



Figure 3: Installation of the A19 LED bulb.



Figure 4: Placing the lampshade onto the harp.



Figure 5: Securing the lampshade with the finial.

5. OPERATING INSTRUCTIONS

5.1. Touch Control Dimming

The TOBUSA table lamps feature a convenient 3-way dimmable touch control. To adjust the brightness:

- **Tap once:** Activates the low brightness setting.
- **Tap twice:** Switches to the medium brightness setting.

- **Tap three times:** Engages the high brightness setting.
- **Tap four times:** Turns the lamp off.

You can touch any metal part of the lamp, including the base, stem, or top finial, to cycle through the brightness levels.



Figure 6: Visual guide to 3-way touch control dimming.

Your browser does not support the video tag.

Video 1: Demonstration of the 3-way touch control dimming feature.

5.2. Charging Ports

Each lamp base is equipped with:

- **2 x USB Charging Ports (5V/2.1A):** Ideal for charging smartphones, tablets, e-readers, and other USB-powered devices.
- **1 x US Standard 2-prong AC Outlet:** Provides a convenient power source for other small electronic appliances.

These ports allow you to charge multiple devices directly from your lamp, reducing clutter and the need for extra wall

adapters.

Easy to Install

1 Step 1

Place the harp
onto saddle.



2 Step 2

Install the LED bulb.



3 Step 3

Put the lampshade
on the harp.



4 Step 4

Screw the finial to
fix the lampshade.



Figure 7: Lamp base with integrated USB charging ports and AC outlet.

Your browser does not support the video tag.

Video 2: Short preview demonstrating the USB charging ports and AC outlet.

6. MAINTENANCE

To keep your TOBUSA lamps in optimal condition:

- **Cleaning:**

- Wipe the metal base with a soft, dry cloth. Avoid abrasive cleaners that may damage the finish.
- For the fabric lampshade, use a lint roller or a soft brush to remove dust. Spot clean with a damp cloth if necessary, using mild soap and water, then blot dry.

- **Bulb Replacement:**

- Ensure the lamp is unplugged before replacing the bulb.
- Allow the old bulb to cool completely before handling.
- Replace with an E26 base bulb, not exceeding 100 watts. For dimming functionality, use dimmable LED bulbs.

7. TROUBLESHOOTING

If you encounter any issues with your TOBUSA table lamps, please refer to the following common solutions:

- **Lamp does not turn on:**

- Check if the power cord is securely plugged into a working electrical outlet.
- Ensure the light bulb is screwed in tightly and is not burnt out. Replace the bulb if necessary.
- Verify that the touch control is functioning by touching different metal parts of the lamp.

- **Touch control is unresponsive or inconsistent:**

- Ensure your hands are clean and dry when operating the touch control.
- Check for any loose connections in the bulb socket or wiring.
- Avoid placing the lamp on surfaces that might interfere with electrical conductivity (e.g., highly insulated surfaces).

- **USB ports or AC outlet are not charging:**

- Confirm the lamp is plugged into a live power outlet.
- Ensure the device you are trying to charge is properly connected to the USB port or AC outlet.
- Test with a different device or charging cable to rule out issues with the device/cable.

- **Lampshade appears crooked or unstable:**

- Re-seat the harp onto the saddle, ensuring it is level and securely in place.
- Tighten the finial on top of the lampshade.

If the problem persists after trying these steps, please contact customer support.

8. WARRANTY AND SUPPORT

TOBUSA provides a **1-year manufacturer's warranty** for this product, covering defects in materials and workmanship under normal use.

For technical assistance, warranty claims, or any other inquiries, please contact TOBUSA customer support through the retailer where you purchased the product or visit the official TOBUSA website.

Online Resources:

- TOBUSA Store: [Visit the TOBUSA Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question