

Re-Flix 726861

Re-Flix Ready-to-Use TV Remote Control for GRUNDIG C3308 - Instruction Manual

Model: 726861

INTRODUCTION

Thank you for choosing the Re-Flix Ready-to-Use TV Remote Control. This remote is specifically designed to be compatible with GRUNDIG C3308 television models, offering immediate functionality without the need for complex programming. This manual provides essential information on setup, operation, maintenance, and troubleshooting to ensure optimal performance.

SETUP

1. Battery Installation

The Re-Flix remote control requires two AAA batteries (not included) for operation. Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, pushing it until it clicks securely into place.

Note: This remote is pre-programmed for GRUNDIG C3308 TVs and does not require additional setup or code entry after battery installation.

OPERATING INSTRUCTIONS

Point the remote control directly at your GRUNDIG C3308 television. Ensure there are no obstructions between the remote and the TV's infrared receiver.

Basic Functions:

- **Power (On/Off):** Press the **POWER** button to turn the TV on or off.
- **Channel Selection:** Use the **CH+** and **CH-** buttons to change channels sequentially. Use the number pad (0-9) to directly enter channel numbers.
- **Volume Control:** Press the **VOL+** button to increase volume and **VOL-** to decrease volume.
- **Mute:** Press the **MUTE** button to temporarily silence the TV audio. Press again to restore sound.
- **Input/Source:** Use the **INPUT** or **SOURCE** button to switch between different video inputs (e.g., HDMI, AV).
- **Menu Navigation:** Use the **MENU** button to access the TV's on-screen menu. Use the arrow keys (**UP**, **DOWN**, **LEFT**, **RIGHT**) to navigate and **OK/ENTER** to confirm selections.
- **Exit/Back:** Press the **EXIT** or **BACK** button to leave menus or return to the previous screen.

MAINTENANCE

Cleaning:

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials, as these can damage the remote's finish or internal components.

Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are installed correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's infrared sensor.
 - Confirm that the remote is pointed directly at the TV.
- **Some buttons not working:**
 - This remote is designed for GRUNDIG C3308. Some advanced functions specific to other TV models may not be supported.
 - Clean the remote's surface, especially around the unresponsive buttons, to remove any dirt or residue.
- **TV responds intermittently:**
 - Batteries may be low; replace them.
 - Ensure you are within the effective range of the remote control (typically up to 8 meters or 25 feet).
 - Bright light sources (e.g., direct sunlight, fluorescent lights) can sometimes interfere with infrared signals. Try to minimize such interference.

SPECIFICATIONS

Feature	Detail
Brand	Re-Flix
Model Number	726861
Compatibility	GRUNDIG C3308 TV models
Power Source	2 x AAA Batteries (not included)
Number of Supported Devices	1
Pre-programmed	Yes, ready-to-use for specified model

WARRANTY AND SUPPORT

This Re-Flix remote control is designed for reliability and ease of use. For specific warranty information, please refer to the terms provided at the point of purchase or contact your retailer. In case of issues not covered by this manual, please reach out to the seller or manufacturer's customer support for assistance.

Please retain this manual for future reference.