

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Jadfezy](#) /

› [Jadfezy 1080P Action Camera \(Model J-03series\) Instruction Manual](#)

Jadfezy J-03series

Jadfezy 1080P Action Camera (Model J-03series) Instruction Manual

Brand: Jadfezy | Model: J-03series

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Jadfezy 1080P Action Camera. Please read this manual thoroughly before operating the device and retain it for future reference.

Key Features:

- **Ultra HD 1080P Video Recording:** Capture videos at 1080P / 30fps and 12MP photos.
- **2-inch LCD Screen:** View recorded moments in real-time.
- **Multifunctionality:** Supports time-lapse video, loop recording, dash cam mode, timed photo, burst photo, self-timer, and long-exposed photo modes.
- **Dual Rechargeable Batteries:** Equipped with 2x900mAh batteries, each providing over 2 hours of recording.
- **30M/98FT Waterproof:** IP68 certified waterproof case for underwater activities.
- **Extensive Accessories Kit:** Includes mounts for helmets, bicycles, and other uses.

WHAT'S IN THE Box

Your Jadfezy Action Camera package includes the following items:

- 1080P Action Camera
- Waterproof Case
- 2x 900mAh Rechargeable Batteries
- Battery Charger
- USB Charging Cable
- Helmet Mounting Kit
- Bicycle Mounting Kit
- Various Mounts and Adapters
- Cleaning Cloth
- User Manual (Quick Start Guide)



Image: Contents of the Jadfezy Action Camera package, including the camera, waterproof case, batteries, and various mounts.

SETUP

1. Battery Installation and Charging

1. Open the battery compartment cover on the bottom of the camera.
2. Insert a fully charged 900mAh Lithium-Ion battery, ensuring correct polarity.
3. Close the battery compartment securely.
4. To charge, use the provided USB cable and battery charger. Each battery provides over 2 hours of recording time.



Image: Two rechargeable 900mAh batteries for the action camera.

2. Memory Card Installation (Micro SD)

A Micro SD card (not included with all models) is required for storing photos and videos. Insert the Micro SD card into the designated slot until it clicks into place. Ensure the card is formatted before first use via the camera settings.

3. Attaching the Waterproof Case

For underwater use or protection against dust and impact, place the camera inside the waterproof case. Ensure the case is properly sealed before use. The case is rated for depths up to 30 meters (98 feet).



Image: The Jadfezy Action Camera enclosed within its transparent waterproof housing, ready for use.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the Power/Mode button (usually on the front or top) for a few seconds to turn the camera on or off.

2. Switching Modes

Press the Power/Mode button repeatedly to cycle through different modes (Video, Photo, Playback, Settings).

3. Recording Videos / Taking Photos

In Video mode, press the OK/Shutter button to start recording. Press again to stop. In Photo mode, press the OK/Shutter button to take a picture.

4. Wi-Fi Connectivity and App Usage

To enable Wi-Fi, power on the camera and press the Up/Wi-Fi button. The Wi-Fi icon will appear on the screen. Download the "Fun DV" app from your device's app store (scan the QR code in the quick start guide for direct link). Connect your phone/tablet to the camera's Wi-Fi network (usually named "Fun DV_XXXX"). The temporary password will be displayed on the camera screen. Once connected, you can control the camera, view live footage, and transfer files via the app.

Your browser does not support the video tag.

Video: Demonstrates how to connect the Jadfezy Action Camera to a mobile device via Wi-Fi and use the companion app for remote control and file transfer.

Your browser does not support the video tag.

Video: A short preview showing the camera's Wi-Fi connectivity and app interface for remote operation.

5. Advanced Modes

Explore various shooting modes like time-lapse video, loop recording (for dash cam use), burst photos, and self-timer photos through the camera's settings menu.



Image: Visual representation of various shooting modes including self-timer, dash cam, time-lapse, and burst photo.

MAINTENANCE

- **Cleaning:** Use the provided cleaning cloth to gently wipe the camera lens and screen. Do not use harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Remove batteries if the camera will not be used for an extended period.
- **Waterproof Case:** After each use in water, rinse the waterproof case with fresh water and allow it to air dry. Check the rubber seal for any damage regularly.

TROUBLESHOOTING

- **Camera Not Turning On:** Ensure the battery is fully charged and correctly inserted.
- **Memory Card Error:** Reformat the Micro SD card via the camera settings. If the issue persists, try a different, compatible Micro SD card.
- **Wi-Fi Connection Issues:** Ensure Wi-Fi is enabled on the camera and your mobile device. Verify the correct network name and password. Restart both devices if necessary.
- **Poor Video/Photo Quality:** Check the selected resolution settings. Ensure the lens is clean and free from smudges.
- **Short Battery Life:** Ensure batteries are fully charged. Consider carrying spare charged batteries for

extended use.

SPECIFICATIONS

Brand	Jadfezy
Model Number	J-03series
Video Resolution	1080p / 30fps (Max)
Photo Resolution	12MP
Screen Size	2 Inches LCD
Waterproof Depth	30m / 98ft (with waterproof case)
Battery Capacity	2x 900mAh Lithium Ion
Flash Memory Type	Micro SD
Connectivity Technology	HDMI, USB, Wi-Fi
Item Weight	12.3 ounces

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the detailed user manual provided in the package or contact Jadfezy customer service. Keep your purchase receipt as proof of purchase for warranty claims.

© 2025 Jadfezy. All rights reserved.