

ASKGO F30

ASKGO Electric Dirt Bike F30 User Manual

Model: F30

1. INTRODUCTION & SAFETY GUIDELINES

This manual provides essential information for the safe and efficient operation of your ASKGO Electric Dirt Bike F30. Please read it thoroughly before your first ride and keep it for future reference. Failure to follow these instructions may result in serious injury, damage to the product, or voiding of the warranty.

Important Safety Warnings:

- Always wear a helmet and appropriate safety gear when riding.
- Familiarize yourself with local laws and regulations regarding electric bicycles.
- Perform a pre-ride inspection before each use, checking brakes, tires, and battery.
- Do not ride under the influence of alcohol or drugs.
- Avoid riding in adverse weather conditions or on slippery surfaces.
- Ensure all components are securely fastened before riding.

Video: ASKGO Electric Dirt Bike F30 Overview. This video provides a general overview of the ASKGO F30 electric dirt bike, showcasing its features and riding capabilities.

2. PACKAGE CONTENTS

Carefully unpack your ASKGO Electric Dirt Bike F30 and verify that all components are present. If any items are missing or damaged, please contact customer support.

- Electric Dirt Bike x1
- 4-digital Bike Lock x1
- Tools Kit x1
- NFC Key x2
- Charger x1
- User Manual x1
- Front Basket x1
- Fenders (Front & Rear) x1 set
- Headlight x1

- Pedals x1 pair
- Front Reflector x1

3. SETUP & ASSEMBLY

Follow these steps to assemble your ASKGO Electric Dirt Bike F30. It is recommended to watch the assembly video for visual guidance.

Video: ASKGO Electric Bike Unboxing and Installation Guide. This video demonstrates the complete unboxing and assembly process for the electric bike.

3.1 Unboxing and Initial Preparation

1. Carefully open the outer box packaging of the bicycle.
2. Remove the cardboard securing the bike, the tool kit, and the foam from the box.
3. Lift the bicycle out of the box.
4. Cut the straps securing the front wheel and remove the protective cover from the brake disc.
5. Place the front wheel flat on the ground.
6. Open the kickstand and stand the bike upright.
7. Cut and remove the foam and straps wrapped around the bike body.

3.2 Installing the Handlebars

1. Use a tool to loosen the screws on the clamp cover securing the handlebars and remove it.
2. Position the handlebars in the correct place and reattach the clamp cover.
3. Tighten the screws to secure the handlebars.

3.3 Installing the Headlight

1. Remove the screws on both sides of the headlight bracket.
2. Fix the headlight onto the bracket, making sure the washers on both sides are placed against the headlight.
3. Use the appropriate tool to tighten the screws and plug in the wire behind the headlight.

3.4 Installing the Front Wheel

1. Loosen the screws securing the front wheel and remove the spacer between the brake pads.
2. Remove the bottom spacer plate.
3. Install the front wheel onto the front fork, ensuring the brake disc is aligned and inserted between the brake pads.
4. Position the clip washers correctly before tightening the screws. **Attention: Please securely fasten the safety hook and tighten all screws. For your safety, ensure the installation is performed according to specifications.**

3.5 Installing the Front Fender

1. Use a tool to remove the screws securing the fender.
2. Position the fender correctly and reattach the screws, tightening them securely.
3. Remove the screws on both sides of the fender bracket.
4. Fix the fender brackets onto the front fork and tighten them with screws.

3.6 Installing the Front Basket

1. Remove the screws securing the basket from the frame.

2. Position the basket correctly on the frame and reattach the screws, tightening them securely.

3.7 Installing the Pedals

1. First, distinguish between the left and right pedals. The left pedal is marked with an "L", and the crank arm also has a corresponding marking.
2. Screw the pedal onto the crank arm in the direction indicated by the marking.
3. The right pedal is installed in the same way.
4. Use a tool to tighten the pedals securely.

3.8 Installing the Front Reflector

1. Remove the screw from the reflector.
2. Attach the reflector to the handlebars and secure it by tightening the screw.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

To power on the bike, press and hold the power button on the display. To power off, press and hold the same button.

4.2 NFC/Password Unlock

Your ASKGO F30 features convenient NFC card tap or 4-digit password unlock for quick and secure access. This allows for easy sharing with family or friends.

4.3 Riding Modes

Customize your ride with 5 available modes:

- **Pure Electric Mode:** Full throttle, no pedaling required.
- **PAS (Pedal Assist System) Mode:** Provides electric assistance while you pedal, with 5 levels of assistance.
- **Sport Mode:** Enhanced power delivery for dynamic riding.
- **Cruise Control:** Maintains a set speed without continuous throttle input.
- **Boost Mode:** Delivers maximum power for quick acceleration or climbing.

RIDING MODES

Switch Riding Modes Anytime



Pure Electric Mode



PAS Mode



Cruise Control



Walk Assist Mode



Bike Mode



Image: Illustration of the five riding modes available on the ASKGO F30 electric dirt bike.

4.4 Smart LCD Display Functions

The intelligent LCD display provides crucial ride information:

- Battery Level Alert
- Headlight Icon
- Boost Mode Indicator
- Mileage Display (ODO, TRIP, VOL, CUR)
- NFC Function Indicator
- Speed Display
- Cruise Indication
- Brake Prompt
- PAS Level Indicator
- Gear Indication

LCD SMART SCREEN

Note: Reach 30MPH by adjusting the PAS mode.



Image: Detailed view of the ASKGO F30's LCD smart screen, showing various indicators and controls.

4.5 Adjusting Speed Limits

To adjust or remove speed restrictions, follow the steps outlined in the video below:

1. First, power on the vehicle.
2. The three buttons used for this operation are: Center (Display Power button), Top ("+" button), Bottom ("- button).
3. Long-press the power button to enter the main interface.
4. Simultaneously long-press the "+" and "-" buttons to enter the settings interface (P00 option).
5. Repeatedly press the "+" button to navigate to the P08 option.
6. Press the center power button to select and modify P08.
7. Long-press the "+" button to increase the value to 100.
8. Press the center power button again to confirm and save the changes.
9. Simultaneously press the "+" and "-" buttons to exit the settings and return to the display interface. The speed limiter has now been successfully removed.

Video: Instructions on How to Remove Speed Restrictions. This video guides users through the process of adjusting the speed settings on the electric bike's display.

5. MAINTENANCE

Regular maintenance ensures the longevity and safety of your ASKGO Electric Dirt Bike F30.

5.1 Battery Care

- Charge the 960WH removable battery regularly, even when not in use, to maintain its health.
- Avoid fully discharging the battery.
- Store the battery in a cool, dry place.
- The battery is UL2849 certified for greater safety.

5.2 Brake System

- Regularly inspect the dual hydraulic brakes for wear and tear.
- Ensure brake levers are responsive and brake pads are not excessively worn.
- Adjust or replace components as needed by a qualified technician.

5.3 Tires

- Check the pressure of the 20"x4.0 puncture-resistant fat tires before each ride.
- Maintain recommended tire pressure for optimal performance and safety.

5.4 General Inspection

- Periodically check all bolts and fasteners for tightness.
- Keep the bike clean and free from dirt and debris.
- Lubricate the chain regularly.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your ASKGO Electric Dirt Bike F30.

6.1 Power Issues

- **Bike does not power on:** Check if the battery is properly inserted and charged. Ensure the power button is pressed and held sufficiently.
- **Battery not charging:** Verify the charger is correctly connected to both the bike and a power outlet. Check for any damage to the charger or charging port.

6.2 Motor & Pedal Assist Problems

- **No pedal assist:** Ensure the PAS level is set above 0 on the display. Check if the pedal sensor is clean and unobstructed.
- **Motor not engaging:** Verify all electrical connections are secure. If the issue persists, consult a technician.

6.3 Brake Issues

- **Brakes feel spongy:** This may indicate air in the hydraulic system or worn brake pads. Seek professional service for bleeding the brakes or replacing pads.
- **Brakes squeal:** Clean brake rotors and pads. If squealing persists, pads may need replacement or adjustment.

7. SPECIFICATIONS

Below are the key specifications for the ASKGO Electric Dirt Bike F30.

Feature	Detail
Bike Type	Electric Dirt Bike, Adult Electric Bicycle, Electric Motorcycle, Off-Road Ebike, All-Terrain E Bike, Fat Tire Electric Bike, Moped Style Ebike
Age Range	Adult
Brand	ASKGO
Model Name	F30
Motor	1800W Peak (750W Continuous) Brushless Motor
Top Speed	30 MPH
Battery	48V/15AH (960WH) Removable, UL2849 Certified
Max Range	Up to 100 Miles (PAS Mode)
Unlock Method	NFC & Password Unlock
Brakes	Dual Hydraulic Brakes
Tires	20"x4.0 Puncture Resistant Fat Tires
Suspension	Front Full Suspension System
Number of Speeds	7-Speed Manual Gear, 5-level PAS Mode
Frame Material	Alloy Steel
Maximum Weight Recommendation	385 Pounds
Item Weight	83.7 Pounds
Assembly Required	Yes

EBIKE SIZE INFORMATION



5'3"-6'3"
Recommend Height



83.7LBS
Item Weight



365
LBS
Max Capacity

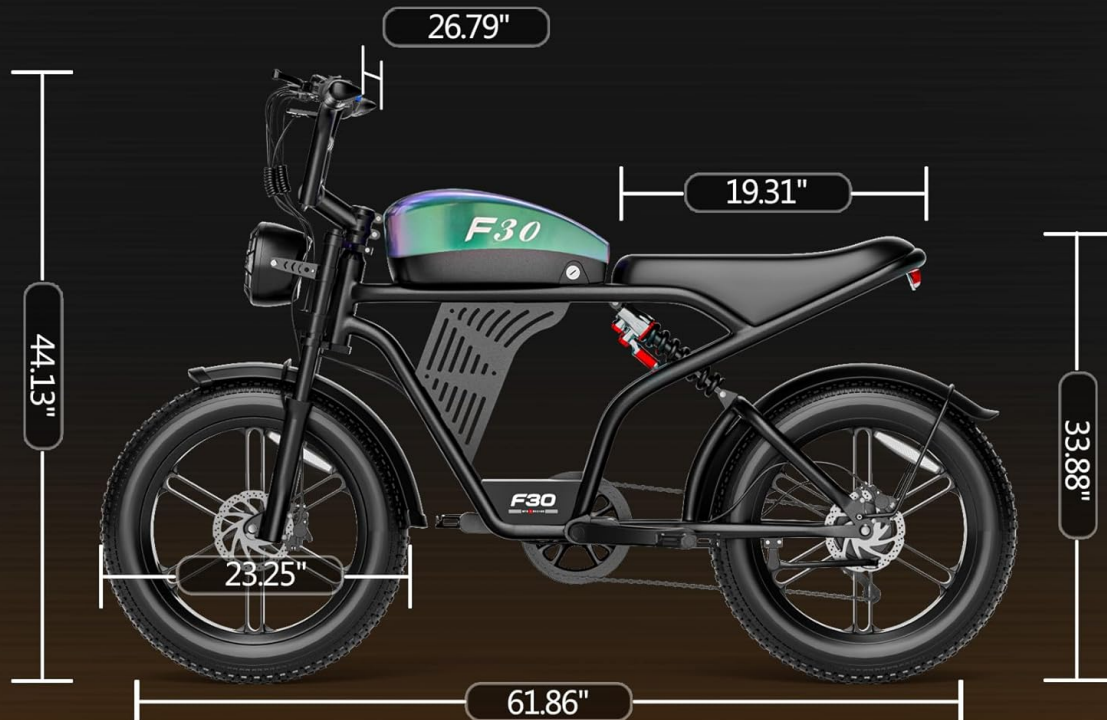


Image: Dimensions and weight recommendations for the ASKGO F30 electric dirt bike.

8. WARRANTY & SUPPORT

8.1 Warranty Information

The ASKGO Electric Dirt Bike F30 comes with a 1-year warranty. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For any questions, technical assistance, or warranty inquiries, please visit the official ASKGO Store or contact their customer service directly.





Official ASKGO Store: [ASKGO Store on Amazon](#)

Related Documents - F30



[F30 Phone Stand with Wireless Speaker and Alarm Clock User Manual](#)

User manual for the F30, a phone stand with a wireless speaker and alarm clock. Includes features, setup, operation, and FCC warnings.

 The image shows the cover of the Windgoo F30 Electric Bike User Manual. It features a black and white photograph of the electric bike. The text 'F30 USER MANUAL' is at the top, and the 'windgoo' logo is at the bottom. A small version number 'V1.1' is in the top right corner.	<p>Windgoo F30 Electric Bike User Manual: Setup, Operation, and Maintenance Guide</p> <p>Comprehensive user manual for the Windgoo F30 electric bike, covering specifications, assembly, startup procedures, charging, display controls, maintenance, troubleshooting, and safety guidelines.</p>
 The image shows the cover of the FRS User's Manual for the Fujian Juston F30 Two-Way Radio. It features a photograph of the two-way radio. The text 'FRS USER'S MANUAL' is at the bottom right.	<p>FRS User's Manual - Fujian Juston F30 Two-Way Radio</p> <p>Comprehensive user's manual for the Fujian Juston F30 FRS two-way radio, covering functions, specifications, operation, troubleshooting, and compliance.</p>
 The image shows the cover of the ResMed AirFit F30 Full Face CPAP Mask Sizing Template Guide. It features a diagram of the CPAP mask with measurement lines. The text 'ResMed AirFit F30' is visible.	<p>ResMed AirFit F30 Full Face CPAP Mask Sizing Template Guide</p> <p>Download and print the ResMed AirFit F30 full face CPAP mask sizing template to accurately determine the correct cushion size for optimal comfort and therapy. Includes instructions and a ruler for scaling.</p>
 The image shows the cover of the ANS F30 User Guide. It features a photograph of the ANS F30 flip phone. The text 'User guide Model: F30' is at the top, and the 'ANS' logo is at the bottom left.	<p>ANS F30 User Guide</p> <p>Comprehensive user guide for the ANS F30 flip phone, covering setup, features, calls, messages, internet, camera, tools, settings, and safety information.</p>