

[Manuals.plus](#) /

› [Locksworth](#) /

› Locksworth 1.2 Cubic Feet Digital Security Safe User Manual

Locksworth AZ4319VC-lsw

Locksworth 1.2 Cubic Feet Digital Security Safe User Manual

Model: AZ4319VC-lsw | Brand: Locksworth

INTRODUCTION

Thank you for choosing the Locksworth Digital Security Safe. This manual provides essential instructions for the proper installation, operation, and maintenance of your safe. Please read this manual thoroughly before using the product to ensure optimal security and functionality. Keep this manual for future reference.

SAFETY INFORMATION

- Do not store the emergency override keys inside the safe. Keep them in a secure, separate location.
- Ensure the safe is installed on a stable, level surface or securely mounted to a wall or floor.
- Keep the safe away from excessive moisture or direct heat sources.
- Do not attempt to force the safe open if the digital lock malfunctions. Use the emergency override keys.
- Replace batteries promptly when the low battery indicator appears to avoid being locked out.

PACKAGE CONTENTS

Verify that all components are present before installation:

- Locksworth Digital Security Safe (1 unit)
- Emergency Override Keys (2 keys)
- Expansion Bolts for mounting (4 bolts)
- Instruction Manual (this document)
- Removable Shelf (1 unit)

SETUP

1. Battery Installation

The digital keypad requires 4 AA batteries (not included). Open the safe using the emergency override key. Locate the battery compartment on the inside of the door. Insert the batteries, ensuring correct polarity. Close the compartment.

2. Mounting the Safe

For enhanced security, it is recommended to mount the safe to a floor, wall, or cabinet. The safe features pre-drilled anchor points.

1. Choose a suitable location for mounting.
2. Position the safe and mark the drilling points through the pre-drilled holes on the back or bottom of the safe.
3. Drill pilot holes at the marked locations.
4. Align the safe with the drilled holes and secure it using the provided expansion bolts. Tighten all bolts firmly.



Image: Installation diagram illustrating how to fix the safe to a wall or floor using the pre-drilled holes and expansion bolts. Steps include marking, drilling, and securing.

3. Shelf Installation

The safe includes a removable shelf to organize contents. Simply snap the shelf into the designated slots inside the safe.

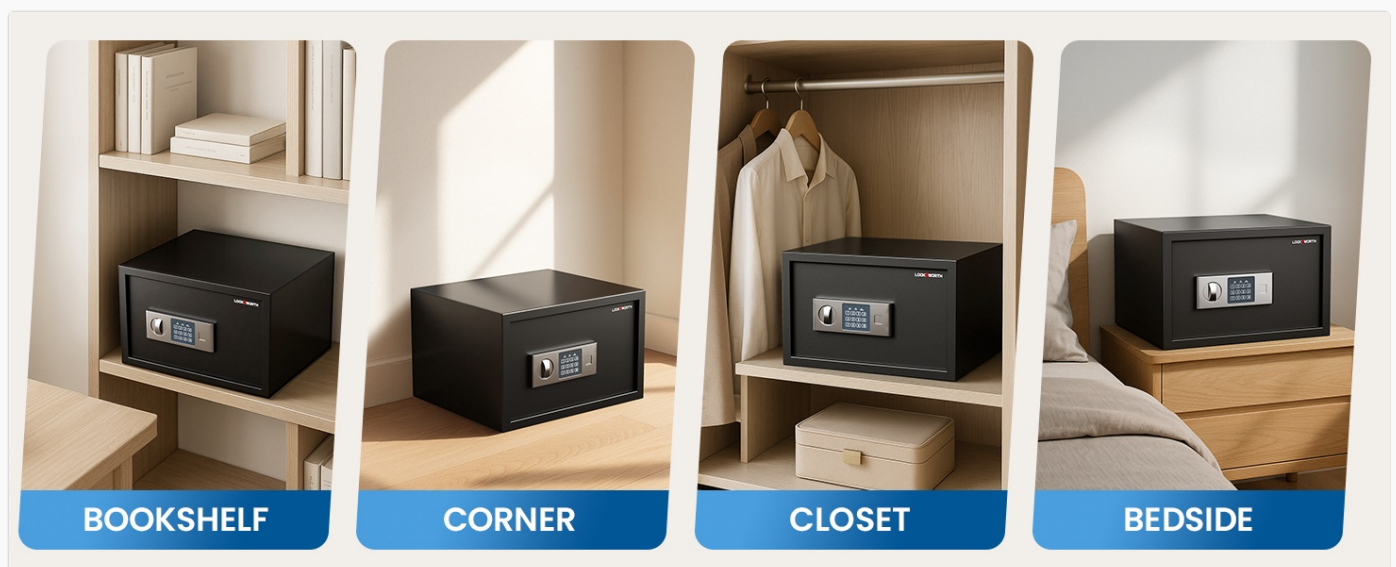


Image: An illustration of the safe's interior, highlighting the built-in battery case, the password reset button, and the design of the elegant lock panel.


OPERATING INSTRUCTIONS

1. Opening the Safe

There are two primary methods to open your Locksworth safe:

- **Using a Passcode:** Enter your personal code on the digital keypad, then turn the knob clockwise to open the door.
- **Using the Emergency Override Key:** Insert the key into the keyhole, turn it clockwise, and simultaneously turn the knob clockwise to open the door. This method is used for initial setup, dead batteries, or forgotten passcodes.

SAFE DEPOSIT BOX FOR HOME

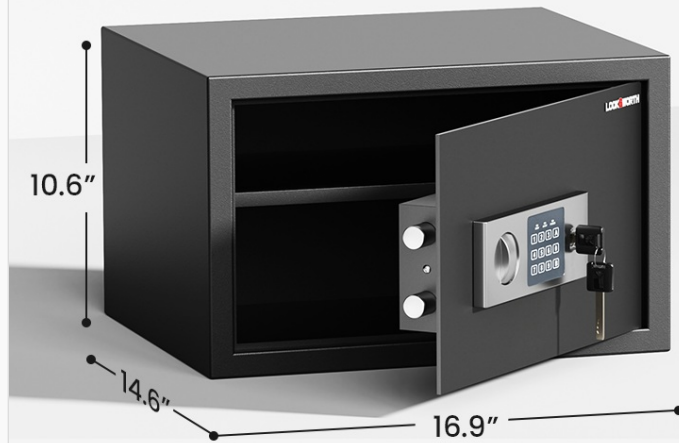

Built-in Battery Case

Ensures both aesthetics and practicality



Password Reset Button

Set new passwords as needed for greater security



Elegant Lock Panel

Blending functionality with aesthetics, our safe ensures that security meets style seamlessly

Image: A visual guide demonstrating the two methods for opening the safe: using a digital passcode in conjunction with the knob, and using the emergency key with the knob.

2. Setting/Changing Your Passcode

1. With the safe door open, locate the red reset button on the inside of the door (usually near the hinge or battery compartment).
2. Press the reset button. The keypad will beep, and an indicator light will illuminate.
3. Enter your desired 3-8 digit passcode on the keypad.
4. Press the 'A' or '#' button to confirm. The safe will beep again, indicating the new passcode is set.
5. Test the new passcode with the door open before closing it.

MAINTENANCE

1. Battery Replacement

When the 'LO-BAT' indicator light illuminates, it's time to replace the batteries. Open the safe using your passcode or emergency key, replace the 4 AA batteries in the compartment, ensuring correct polarity. Your passcode will typically be retained during battery replacement, but it is good practice to re-test it.

2. Cleaning

Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or electronic components.

TROUBLESHOOTING

- **Safe will not open with passcode:**
 - Ensure batteries are not depleted. Replace if necessary.
 - Verify the correct passcode is being entered.
 - If multiple incorrect attempts have been made, the safe may be temporarily locked (see 'Password Error' below).
 - Use the emergency override key to open the safe.
- **Password Error / Alarm:**
 - If 3 invalid codes are entered consecutively, the keypad will be inaccessible for 20 seconds, and an alert will sound.
 - If 6 invalid codes are entered consecutively, the keypad will be inaccessible for 5 minutes, and an alert will sound.
 - Wait for the lockout period to expire before attempting to enter the passcode again.
- **Keys are inside the safe:** If the emergency keys are accidentally locked inside, contact customer support for assistance.



Drop test
8 corners/6 faces/12 deges



Lock Test
10000 opening/closing



Vibration alarm
false alarm rate below 1%



Load test
300 kg load test

SUPERME SECURITY SAFE STRUCT



Image: A visual representation of the safe's alert system for incorrect password entries, detailing the lockout durations for 3 and 6 invalid attempts.

SPECIFICATIONS

Feature	Detail
Brand	Locksworth
Model Number	AZ4319VC-lsw
Product Dimensions (D x W x H)	16.9" x 14.6" x 10.6"
Capacity	1.2 cubic feet
Lock Type	Electronic Combination Lock, Key
Material	Alloy Steel
Item Weight	28.7 pounds

Special Features	Anti-Theft, Combination Lock, Fire Resistant, Portable, Scratch Resistant
Mounting Type	Floor Mount (also suitable for wall/cabinet)

WARRANTY

This Locksworth safe comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage resulting from misuse, unauthorized modification, accident, or improper installation. Please retain your proof of purchase for warranty claims.

SUPPORT

For technical assistance, warranty claims, or any questions regarding your Locksworth safe, please refer to the contact information provided with your purchase or visit the official Locksworth website. Ensure you have your model number (AZ4319VC-lsw) and proof of purchase ready when contacting support.

© 2026 Locksworth. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question