

[Manuals.plus](#) /

> [ODEJOI](#) /

> ODEJOI MP3 Player D16 User Manual

ODEJOI D16

ODEJOI MP3 Player D16 User Manual

Model: D16

1. PRODUCT OVERVIEW

The ODEJOI D16 MP3 Player is a portable audio device featuring 64GB of internal storage, Bluetooth 5.3 connectivity, a 2.4-inch color touch screen, and a built-in speaker. It supports various audio formats, includes an FM radio, voice recorder, and 18 soothing sleep sounds. The device is designed for ease of use with intuitive touch controls and a durable metal body.

Premium Metal Body & Modern Touch

2.4" Touch Screen | Modern & Sturdy



2.4 inch



Fingerprint



Image: Front view of the ODEJOI D16 MP3 Player highlighting its 2.4-inch touch screen, fingerprint-like touch controls, and physical volume and power buttons.

2. WHAT'S IN THE BOX

Upon unboxing your ODEJOI D16 MP3 Player, verify that all components are present:

- ODEJOI D16 MP3 Player
- Headphones
- Charging Cable (USB)
- User Manual (this document)



Image: An unboxing sequence showing the white retail packaging, a USB cable, headphones, and the black electronic device on a light grey background.

3. SETUP

3.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB charging cable to the device's charging port and a compatible USB power source (e.g., computer USB port, USB wall adapter). A full charge takes approximately 2.5 hours and provides up to 45 hours of playback time.

3.2 Power On/Off

To power on the device, press and hold the Power button located on the side of the player. To power off, press and hold the Power button again until the shutdown prompt appears, then confirm.

3.3 Initial Language Setting

Upon first power-on, you may be prompted to select your preferred language. The device supports 28 languages. Navigate using the touch controls and confirm your selection.

3.4 Memory Expansion

The MP3 player comes with 64GB of internal memory. To expand storage, insert a microSD card (up to 128GB, not included) into the designated slot on the device. Ensure the card is inserted correctly.

3.5 Connecting to a Computer

Connect the MP3 player to your computer using the provided USB cable. The device will appear as a removable disk, allowing you to transfer music, videos, and other files. The device supports OTG function for direct file transfer from compatible devices.



Image: A portable music player connected to a laptop, illustrating the USB connection and OTG function.

4. OPERATING INSTRUCTIONS

4.1 Navigation and Touch Controls

The device features a 2.4-inch color touch screen and 7 backlit touch keys for intuitive navigation. Tap icons to select functions and swipe to browse menus. Physical volume buttons are located on the side for quick adjustments.

4.2 Music Playback

Access the 'Music' application from the main menu. The player supports various audio formats including MP3, FLAC, APE, AAC, and WAV. Select a song or playlist to begin playback. The device features a smart noise reduction chip for Hi-Fi audio quality.



Image: A person enjoying music outdoors with the MP3 player, illustrating HiFi sound quality and support for MP3, APE, AAC, FLAC, and WAV formats.

4.3 Bluetooth Connection

To connect to Bluetooth headphones, speakers, or car audio systems:

1. Go to the 'Bluetooth' menu.
2. Turn Bluetooth on.
3. The player will scan for available devices.
4. Select your desired device from the list to pair.

The device uses Bluetooth 5.3 for stable and fast connections.



BLUETOOTH 5.3

Smooth link to multiple devices.



Image: The MP3 player positioned near a Bluetooth speaker and wireless earbuds, with a prominent Bluetooth 5.3 logo, indicating smooth connectivity to multiple devices.

4.4 FM Radio

Select the 'FM Radio' application. You can scan for stations, save favorites, and record radio broadcasts directly on the device.

4.5 Voice Recorder

Use the 'Recorder' function to capture audio. Recordings are saved to the device's internal memory or microSD card.

4.6 Sleep Sounds

The player includes 18 natural relaxing sounds (e.g., rain, sea, summer night) designed to aid sleep. Access these through the 'Sleep Music' or 'White Noise' feature.



Image: A girl sleeping, with the MP3 player showing its 'Sleep Music' menu and various soothing sound options like wind, rain, stream, and bird sounds.

4.7 Video and Photo Viewing

The device supports viewing of videos and photos. Transfer compatible files to the device and access them through the respective 'Video' or 'Photo' applications.

4.8 Screen Lock

To prevent accidental touches, utilize the screen lock feature. This can typically be activated by a short press of the power button or through a menu option.



Image: The MP3 player displaying a lock icon on its screen, indicating the screen lock feature is active, preventing unintended operations.

5. MAINTENANCE

5.1 Cleaning

Wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials that could damage the screen or body.

5.2 Storage

Store the MP3 player in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery has a partial charge (around 50%) to prolong its lifespan.

5.3 Battery Care

To maintain battery health, avoid fully discharging the device frequently. Charge the device regularly, but do not leave it connected to a charger for excessively long periods after it is fully charged.

6. TROUBLESHOOTING

6.1 Device Not Turning On

- Ensure the battery is charged. Connect the device to a charger for at least 15 minutes.
- Press and hold the Power button for 5-10 seconds to attempt a forced restart.

6.2 Cannot Connect Bluetooth

- Ensure Bluetooth is enabled on both the MP3 player and the target device.
- Place the devices within close proximity (typically within 10 meters).

- Check if the target device is in pairing mode.
- Try unpairing and re-pairing the devices.

6.3 Music Not Playing

- Verify that the audio files are in a supported format (MP3, FLAC, APE, AAC, WAV).
- Check the volume level.
- Ensure headphones are properly connected or Bluetooth is paired correctly.
- If using a microSD card, ensure it is inserted correctly and not corrupted.

6.4 Screen Unresponsive

- Restart the device by holding the Power button.
- Ensure the screen is clean and dry.

7. SPECIFICATIONS

Brand	ODEJOI
Model Number	D16
Internal Memory	64 GB
Expandable Memory	Up to 128 GB (Micro SD)
Connectivity	Bluetooth 5.3, USB
Screen Size	2.4 Inches
Screen Technology	LCD
Supported Audio Formats	FLAC, APE, MP3, AAC, WAV
Battery Life	Up to 45 Hours
Charging Time	Approx. 2.5 Hours
Special Features	FM Radio, Voice Recorder, 18 Sleep Sounds, Built-in Speaker, Touch Keys
Included Components	Headphones, Charging Cable

8. WARRANTY AND SUPPORT

8.1 Manufacturer Warranty

The ODEJOI D16 MP3 Player comes with a 24-month manufacturer's warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your ODEJOI D16 MP3 Player, please contact

ODEJOI customer support through the retailer's platform or the official ODEJOI website. Please have your purchase receipt and product model number (D16) available when contacting support.

