

Roku 65R5D5

Roku 65-Inch Select Series 4K QLED Smart TV User Manual

Model: 65R5D5

1. SETUP

This section guides you through the initial setup of your Roku 65-Inch Select Series 4K QLED Smart TV. Ensure all components are present before beginning.

1.1 What's in the Box

- Roku Select Series 65" 4K TV
- Stands and screws
- Remote Control
- User Manual (this document)

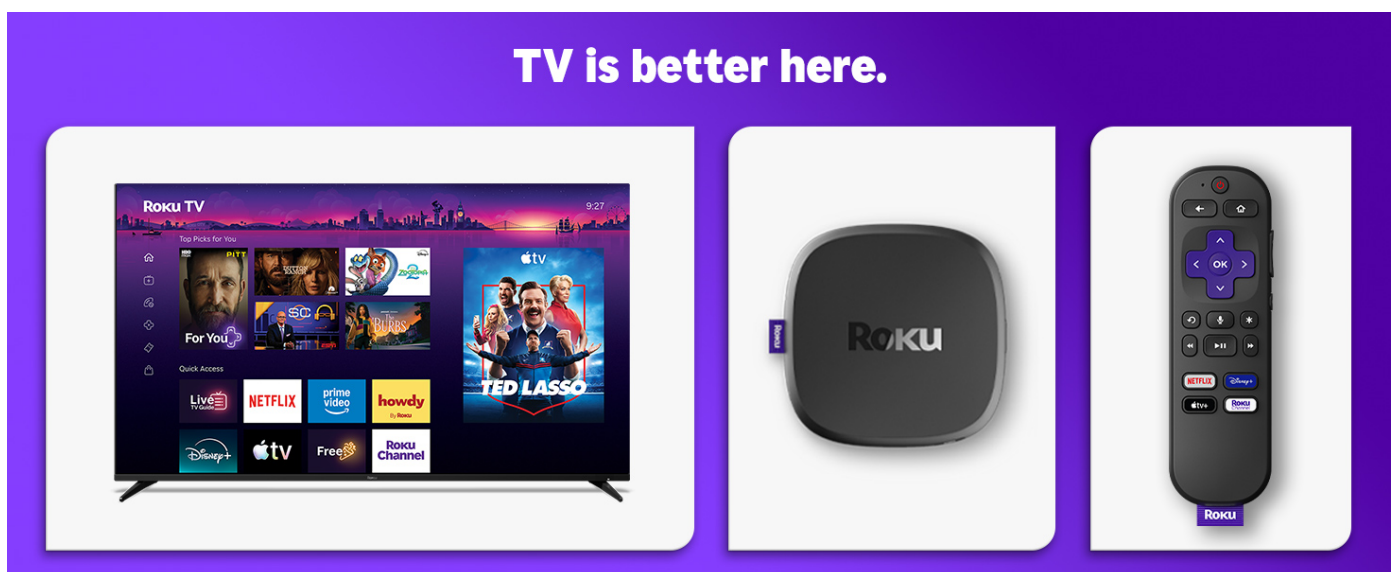 


Figure 1.1: Included components with your Roku TV.

1.2 Attaching the TV Stands

1. Carefully place the TV screen-down on a soft, clean surface to prevent damage.

2. Align each stand with the corresponding screw holes on the bottom of the TV.
3. Secure the stands using the provided screws. Ensure they are tightened firmly.

1.3 Connecting Power and Initial Power On

1. Connect the power cord to the TV's power input and then to a wall outlet.
2. Insert two AAA batteries into the remote control.
3. Press the power button on the remote or the TV to turn it on.

1.4 Network Connection and Roku Account Setup

Follow the on-screen prompts to connect your TV to your home Wi-Fi network. You will be guided to create or log in to a Roku account. This account is essential for accessing streaming services and features.

Your browser does not support the video tag.

Video: Roku Select Series TV Video. This video provides an overview of the Roku Select Series TV features and initial setup process.

Your browser does not support the video tag.

Video: Roku TV OS Video. This video demonstrates the Roku TV operating system interface and navigation.

2. OPERATING INSTRUCTIONS

Learn how to navigate your Roku TV, access content, and utilize its smart features.

2.1 Navigating the Home Screen

The Roku Home Screen provides quick access to your streaming channels, inputs, and settings. Use the directional pad on your remote to move between options and the 'OK' button to select.

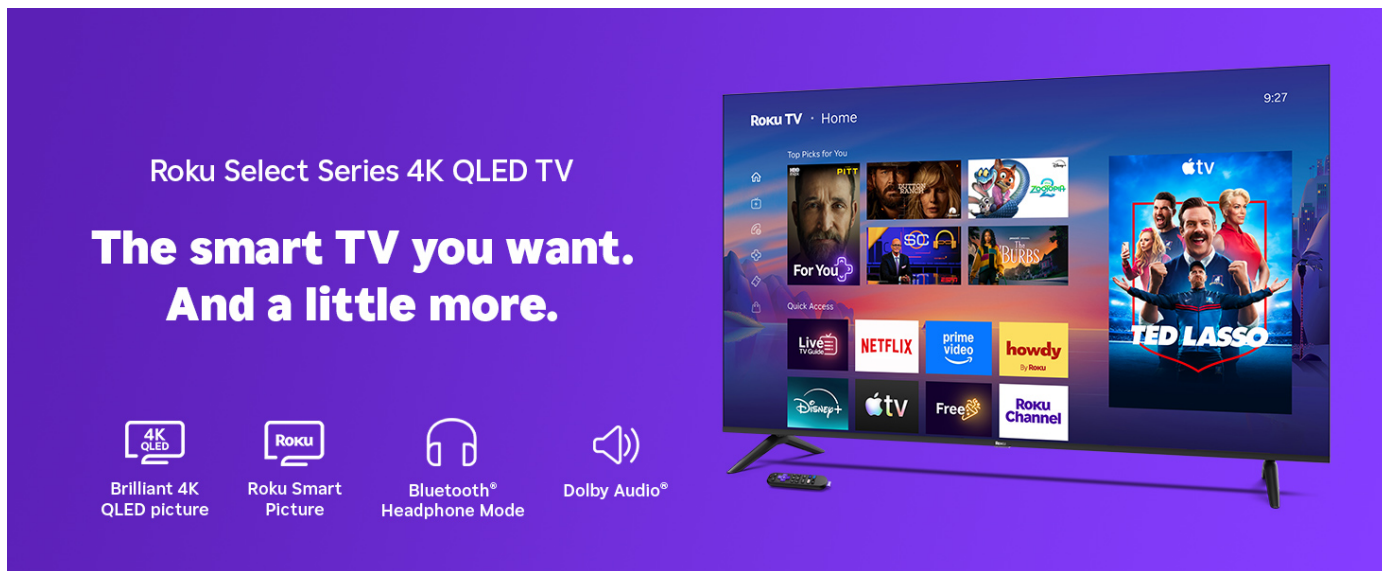 


Figure 2.1: The Roku TV Home Screen, showing streaming apps and content.

2.2 Using the Voice Remote

Your Roku TV comes with an enhanced voice remote. Press and hold the voice button to search across thousands of apps, control playback, or launch specific channels. You can also set personal shortcuts for your favorite apps using the quick launch buttons.



Figure 2.2: The Roku Enhanced Voice Remote.

2.3 Streaming Content

Access a wide variety of entertainment through pre-installed apps like Netflix, Disney+, Hulu, and Prime Video. The Roku platform also offers a vast selection of free live TV, news, sports, and movies.

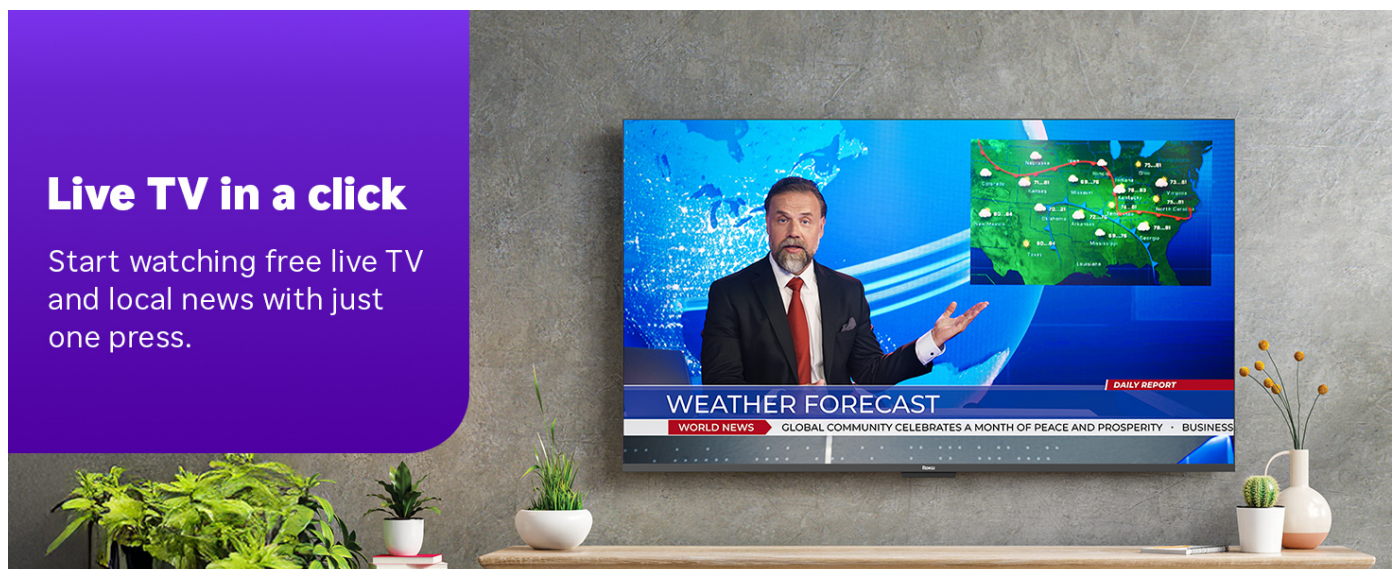 


Figure 2.3: Live TV streaming on Roku TV.

2.4 Picture and Sound Settings


Your TV features a 4K QLED display with HDR10 for vibrant colors and sharp detail. Roku Smart Picture automatically optimizes incoming signals and selects the best picture mode. For audio, Dolby Audio technology ensures clear speech and rich sound. You can adjust these settings in the TV's menu.



Always easy on the eyes

Roku Smart Picture picks the best image settings for whatever you're watching.

 Figure 2.4: Roku Smart Picture settings menu.

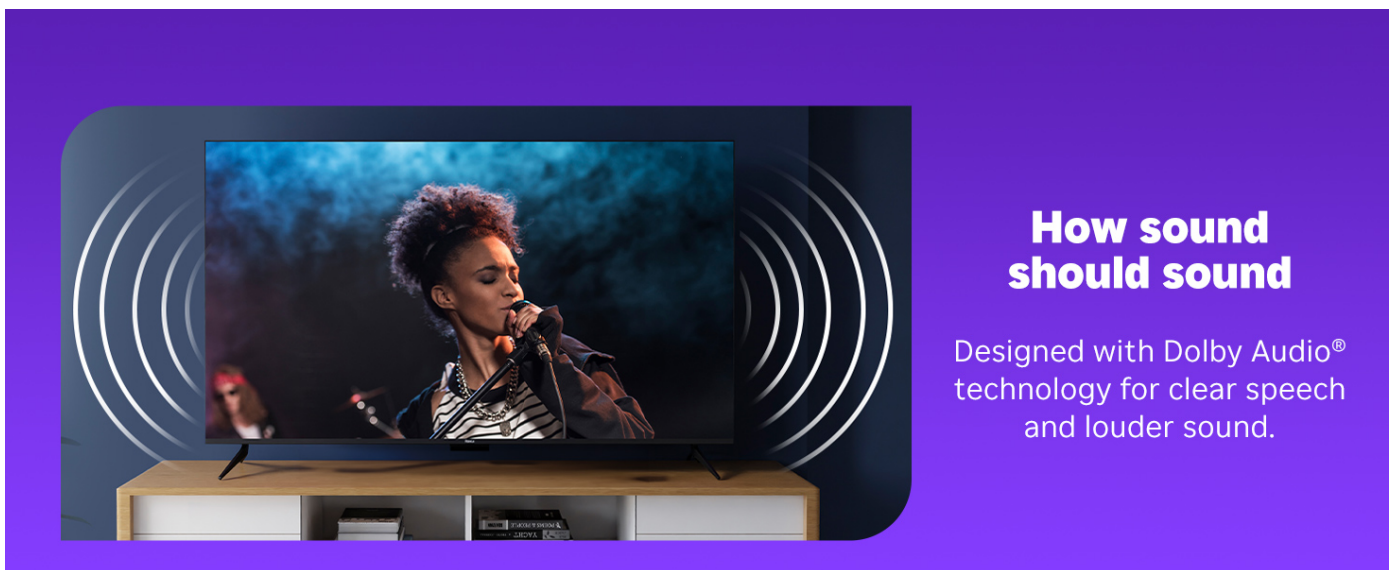

How sound should sound

Designed with Dolby Audio® technology for clear speech and louder sound.

Figure 2.5: Dolby Audio for enhanced sound quality.

2.5 Bluetooth Headphone Mode

Connect your Bluetooth headphones to the TV for private listening. This feature allows you to enjoy your entertainment without disturbing others.

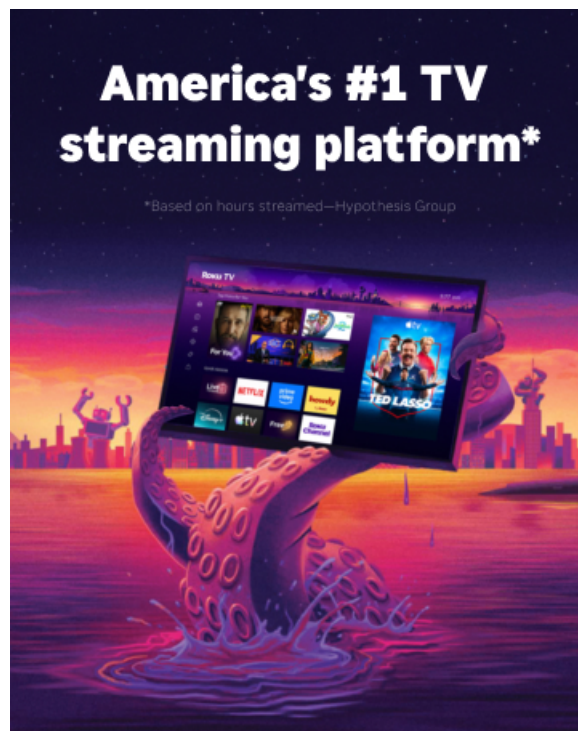 


Figure 2.6: Using Bluetooth Headphone Mode.

2.6 Smart Home Integration

Your Roku TV is compatible with Roku Voice, Siri, Alexa, and Google Assistant for easy voice control. You can also share videos, photos, and music from your Apple devices to the TV using Apple AirPlay.

3. MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your Roku TV.

3.1 Cleaning the TV Screen

- Always turn off and unplug the TV before cleaning.
- Use a soft, dry microfiber cloth to gently wipe the screen.
- For stubborn marks, lightly dampen the cloth with water or a screen-safe cleaning solution (avoid harsh chemicals).
- Do not spray liquid directly onto the screen.

3.2 General Care

- Keep the TV in a well-ventilated area, away from direct sunlight and heat sources.
- Avoid placing heavy objects on the TV or remote.
- Regularly check for and install software updates to ensure optimal performance and access to the latest features.

4. TROUBLESHOOTING

If you encounter issues with your Roku TV, refer to the following common solutions.

4.1 No Power

- Ensure the power cord is securely plugged into both the TV and a working electrical outlet.
- Check if the outlet is receiving power by plugging in another device.
- Try pressing the power button on the TV itself, not just the remote.

4.2 No Picture / Black Screen

- Verify the correct input source is selected (e.g., HDMI 1, TV).
- Ensure all cables connected to the TV (HDMI, antenna) are securely attached.
- Restart the TV by unplugging it from the power outlet for 60 seconds, then plugging it back in.

4.3 Network Connection Issues

- Go to **Settings > Network > Check connection** to diagnose the issue.
- Restart your Wi-Fi router and modem.
- Ensure the TV is within range of your Wi-Fi signal.

4.4 Remote Not Responding / Lost Remote

- Replace the batteries in the remote control.
- Ensure there are no obstructions between the remote and the TV.
- If your remote is lost, use the free Roku Mobile app on your smartphone to control the TV and activate the 'lost remote finder' feature.



Figure 4.1: Using the lost remote finder feature.

5. SPECIFICATIONS

Detailed technical specifications for the Roku 65-Inch Select Series 4K QLED Smart TV.

Feature	Specification
Model Name	Roku 65" Select Series 4K
Model Number	65R5D5
Screen Size	65 inches
Display Technology	4K UHD, LED
Resolution	4K

Feature	Specification
Refresh Rate	60 Hz
HDR Format Supported	HDR10, HDR10+, HLG
Operating System	Roku OS
Connectivity Technology	Bluetooth, Ethernet, USB-A, Wi-Fi
Hardware Interface	Bluetooth, Ethernet, HDMI, S/PDIF, USB
Total USB Ports	1
Speaker Description	Dolby Audio
Speaker Maximum Output Power	20 watts
Product Dimensions (D x W x H)	13.9"D x 56.9"W x 35.5"H
Item Weight	30.9 pounds
VESA Mount Standard	400 x 300 mm
Power Consumption	248 watts
Remote Required Battery Type	AAA (2 required)

6. WARRANTY INFORMATION

Roku warrants the hardware against defects in materials and workmanship under normal use for a period of **one (1) year** from the date of purchase ("Warranty Period"). This applies to Roku Smart Home devices, Roku streaming players, Roku Streaming Sticks, or Roku audio devices, when used in accordance with the provided documentation.

If Roku determines that the device's hardware is defective during the Warranty Period, Roku's sole obligation, and your exclusive remedy, will be to either repair or replace the unit with either a new or rebuilt device, at its option.

Important information about warranty returns and replacements is available on the Roku support site. You may also return a device for any reason, subject to the terms of the applicable return policy: 1) Within thirty (30) days from the date of purchase from Roku; or 2) within the applicable return period if purchased from an authorized re-seller or distributor.

Additional details regarding product returns can be found on the Roku support site.

7. SUPPORT

For further assistance, detailed FAQs, and the latest support resources, please visit the official Roku support website. You can find contact information for customer service and additional troubleshooting guides there.

Online Support: support.roku.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question