

DEVOAC N3P

DEVOAC N300 Cordless Vacuum Cleaner Instruction Manual

Model: N3P

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and filters in place.
- Turn off the appliance before making any adjustments, changing accessories, or storing the vacuum cleaner.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

2. PRODUCT OVERVIEW AND WHAT'S IN THE BOX

The DEVOAC N300 is a versatile 6-in-1 cordless stick vacuum cleaner designed for efficient cleaning across various surfaces. It features a powerful motor, long battery runtime, and multiple attachments for comprehensive cleaning.

Included Components:

- 1x Main Motor
- 1x Motorized Floor Brush
- 1x Retractable Metal Tube
- 1x 2-in-1 Brush
- 1x Long Crevice Tool

- 2x Sponge Filters (one pre-installed)
- 1x Wall Mount Kit
- 1x Roller Cleaning Gadget
- 1x Power Adapter
- 1x User Manual
- 1x Quick Start Guide

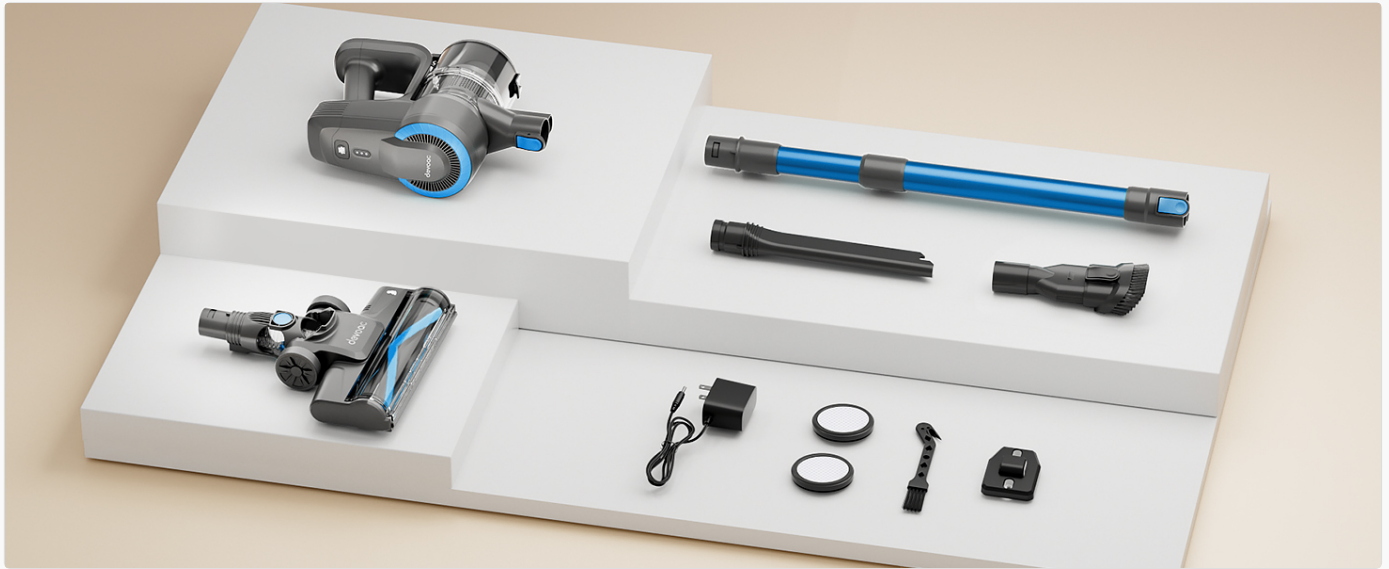


Figure 2.1: All components included with the DEVOAC N300 Cordless Vacuum Cleaner.

3. SETUP

3.1 Assembly

1. Insert the retractable metal tube into the main motor unit until it clicks securely into place.
2. Attach the motorized floor brush to the other end of the metal tube, ensuring it locks firmly.
3. For handheld use, detach the metal tube and attach desired accessories (2-in-1 brush or long crevice tool) directly to the main motor unit.



Figure 3.1: Step-by-step assembly of the vacuum cleaner.

3.2 Charging the Battery

The DEVOAC N300 is equipped with a 2200mAh rechargeable battery. For optimal performance, fully charge the vacuum before first use.

- Connect the power adapter to the charging port on the main motor unit.
- Plug the adapter into a wall outlet.
- The battery indicator lights on the main motor will illuminate to show charging status.
- A full charge typically takes 4-5 hours.
- A fully charged battery provides up to 40 minutes of runtime in Standard Mode and 25 minutes in Max Mode.

Entire House Quick Cleanup

A single charge for quicker house cleaning



Figure 3.2: Battery specifications and charging details.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Suction Modes

Press the power button to turn on the vacuum. The DEVOAC N300 offers two suction modes:

- **Standard Mode:** Ideal for everyday cleaning of dust, pet hair, and small debris on hard floors and low-pile carpets.
- **Max Mode:** Provides increased suction power for tougher messes and deeper cleaning on rugs or heavily soiled areas. Press the mode button to switch between Standard and Max modes.



Figure 4.1: Deep cleaning with two suction modes.

4.2 Versatile Cleaning with Attachments

The 6-in-1 design allows for flexible cleaning across various scenarios:

- **Motorized Floor Brush:** Use for general floor cleaning on hardwood, tile, marble, and low-pile carpets. The flexible head allows for easy maneuvering around furniture.
- **Long Crevice Tool:** Perfect for reaching into narrow gaps, tight corners, sofa crevices, and car interiors.
- **2-in-1 Brush:** Use the brush bristles for delicate surfaces like curtains or upholstery, or retract the bristles for wider suction on beds and sofas.
- **Retractable Metal Tube:** Extends to clean high places like ceilings or curtain tops, and can be shortened for compact storage or handheld use.

Rechargeable Battery

Quick charge & Longer runtime
in max power mode



40min
Eco Mode



25min
Max Mode



4-5H
Charging

Figure 4.2: Multi-surface cleaning capabilities.



Versatile Cleaning Motorized Floor Brush

For deep cleaning across multiple surfaces



Cat/Dog
Bed



Furniture



Curtains



Mattresses

Figure 4.3: Motorized Floor Brush for versatile cleaning.

Ultra-Lightweight Extendable



Adjustable
Length



3.9 lbs



Figure 4.4: Long Crevice Tool for narrow spaces.

Convenient Free-Standing Design



Stand anywhere you want

VS



Easily fall down

Figure 4.5: 2-in-1 Brush for various surfaces.

4.3 LED Motorized Brush Head

The motorized brush head features built-in LED lights to illuminate dark areas, making dust and debris visible under furniture or in dimly lit corners. The flexible, scratch-resistant roller gently cleans floors without leaving marks.



Figure 4.6: LED lights on the motorized brush head for improved visibility.

4.4 Self-Standing Design

The DEVOAC N300 is designed to stand upright on its own, allowing for convenient storage in kitchens, closets, garages, or dorm rooms without the need for a wall mount. This feature also provides ease of use during cleaning breaks.



Flexible LED Head Brush



Figure 4.7: Self-standing feature for convenient storage and use.

4.5 Operational Videos

Video 4.1: A seller-provided demonstration of the N300 vacuum, showcasing its features and assembly process.

Video 4.2: A seller-provided video demonstrating the vacuum's performance and various uses in a home setting.

5. MAINTENANCE

5.1 Emptying the Dust Cup

To maintain optimal suction and performance, empty the dust cup regularly, ideally after each use or when the MAX line

is reached.

1. Ensure the vacuum is turned off.
2. Locate the dust cup release button (often near the handle).
3. Press the button to open the bottom flap of the dust cup, allowing debris to fall into a trash bin.
4. Close the flap securely until it clicks.





**Versatile Cleaning
Motorized Floor Brush**

For deep cleaning across multiple surfaces



Hardwood



Tile & Marble



Rug

6-IN-1 Kit
01

Figure 5.1: One-touch dust cup emptying for hands-free operation.

5.2 Cleaning the Filters

The DEVOAC N300 features a 5-stage filtration system with foam filters. Regular cleaning of the filters is essential for maintaining suction power and air quality.

1. Twist and pull to remove the filter assembly from the dust cup.
2. Separate the foam filter from the mesh filter.
3. Tap off loose dirt from both filters over a trash bin.
4. Rinse the foam filter under cold running water until the water runs clear. Do not use detergent.
5. Allow filters to air dry completely for at least 24 hours before reassembling and placing back into the vacuum. Ensure they are completely dry to prevent damage and mold growth.





Long Crevice Tool

For deep cleaning in narrow
and hard-to-reach areas



Corners



Sofa
Crevice



Window
Tracks



Car
Interiors

6-IN-1 Kit
02

Figure 5.2: Cleaning the 5-stage filtration system.

5.3 Cleaning the Brush Head

Periodically check the motorized brush head for tangled hair or debris. Use the provided roller cleaning gadget to easily remove any obstructions.

1. Ensure the vacuum is turned off and disconnected from the power source.
2. Detach the motorized floor brush from the extension tube.
3. Use the roller cleaning gadget to cut and remove any hair or fibers wrapped around the brush roll.
4. Clear any debris from the brush head opening.
5. Reattach the brush head securely.

6. TROUBLESHOOTING

If you encounter any issues with your DEVOAC N300, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged; Power button not pressed correctly	Charge the battery fully; Ensure power button is pressed firmly.
Low suction power	Dust cup is full; Filters are clogged; Brush roll is obstructed	Empty the dust cup; Clean or replace filters; Remove obstructions from brush roll.
Brush roll not spinning	Obstruction in brush roll; Brush head not properly attached	Remove any tangled hair or debris; Reattach brush head securely.
Short battery runtime	Battery not fully charged; Operating in Max Mode continuously	Ensure battery is fully charged (4-5 hours); Use Standard Mode for longer runtime.

If the problem persists after trying these steps, please contact DEVOAC customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	DEVOAC
Model Name	DEVOAC N3P
Special Features	2200mAh Rechargeable Battery & Up to 40mins Runtime, 3.9lb Ultra-lightweight, 6 IN 1 Versatile Use Vacuum, Powerful Suction & 2 Adjustable Suction Modes
Filter Type	Foam (5-Stage Filtration)
Is Cordless?	Yes
Capacity	0.8 Liters

Feature	Specification
Recommended Uses	Stick Vacuum & Handheld Vacuum & Hard Floor Vacuum & Carpet Cleaner Vacuum & Pet Vacuum & Upright Vacuum, Cordless, Battery Powered, Portable
Color	Blue
Product Dimensions	17"L x 11"W x 7.1"H
Battery Life	Up to 40 minutes
Item Weight	7.17 pounds (main motor unit 2.2lbs)
Number of Speeds	2
Indoor/Outdoor Usage	Indoor
Surface Recommendation	Hard Floor, Wood Floor, Low-Pile Carpet
Power Source	Battery Powered

8. WARRANTY AND SUPPORT

DEVOAC is committed to providing high-quality products and excellent customer service.

- **1-Year Warranty:** Your DEVOAC N300 Cordless Vacuum Cleaner is covered by a 1-year warranty from the date of purchase.
- **30-Day Return:** Enjoy a hassle-free 30-day return policy.
- **Professional Support Team:** Our dedicated support team is available to assist you with any questions or concerns.
- **Contact:** For assistance, please refer to the contact information provided in your Quick Start Guide or visit the official DEVOAC website.



Figure 8.1: DEVOAC customer support and warranty information.

© 2026 DEVOAC. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

