

[Manuals.plus](#) /

› [Brabantia](#) /

› Brabantia Airfryer XL BBEK1134 User Manual

## Brabantia BBEK1134

# Brabantia Airfryer XL BBEK1134 User Manual

Model: BBEK1134

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Brabantia Airfryer XL BBEK1134. Keep this manual for future reference.

- Always place the appliance on a stable, heat-resistant surface, away from walls and other heat sources.
- Do not immerse the appliance, cord, or plug in water or other liquids to prevent electric shock.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- Ensure the frying basket is correctly inserted before operation.
- Hot air is released through the air outlet opening during operation. Keep your hands and face at a safe distance from the air outlet opening.

## 2. PRODUCT OVERVIEW

The Brabantia Airfryer XL BBEK1134 is designed for preparing a variety of dishes using hot air circulation, offering a healthier alternative to traditional frying. It features a digital touchscreen for easy operation and pre-set cooking programs.

### Components

- Main Unit with Digital Touchscreen
- Removable Frying Basket
- Grill Plate
- Cool Touch Handle

# INHOUD VAN DE VERPAKKING

Airfryer, Mand, Roosterplaat & Handleiding.



1x Brabantia Airfryer XL  
BBEK1134



1x Mand & 1x Roosterplaat



1x Handleiding

Image: The Brabantia Airfryer XL BBEK1134 main unit, removable basket, and grill plate, along with its dimensions (24cm width, 25cm height, 30cm depth).

## Key Features

- **Capacity:** 4 Liters, suitable for 2-4 persons.
- **Power:** 1500 Watts for rapid heating and efficient cooking.
- **Temperature Range:** Adjustable from 80°C to 200°C.
- **Timer:** Adjustable up to 60 minutes.
- **Cooking Programs:** 8 pre-set programs for various dishes.
- **Control:** Digital Touchscreen for intuitive operation.
- **Safety:** Cool Touch Handle and Anti-slip feet.
- **Material:** PFAS-Free with a non-stick coating for easy cleaning.
- **Technology:** Rapid Air Circulation for even cooking.

## 3. SETUP AND FIRST USE

## Unpacking

1. Remove all packaging materials, stickers, and labels from the appliance.
2. Check that all components listed in the 'Product Overview' section are present and undamaged.

## Cleaning Before First Use

1. Clean the frying basket and grill plate with hot water, a mild dishwashing liquid, and a non-abrasive sponge. These parts are also dishwasher safe.
2. Wipe the inside and outside of the appliance with a damp cloth.
3. Ensure all parts are thoroughly dry before use.

## Placement

1. Place the airfryer on a stable, level, and heat-resistant surface.
2. Ensure there is at least 10 cm of free space at the back and sides of the appliance, and 10 cm above it, to allow for proper air circulation.
3. Do not place the appliance near flammable materials or objects that are sensitive to heat.

## 4. OPERATING INSTRUCTIONS

The Brabantia Airfryer XL BBEK1134 features a user-friendly digital touchscreen for selecting cooking programs, adjusting temperature, and setting the timer.



Image: Close-up of the Brabantia Airfryer XL BBEK1134 digital touchscreen, showing temperature, time, and program icons.

## EENVOUDIG IN GEBRUIK.

Met het gebruiksvriendelijke touchscreen bedieningspaneel en een timer tot 60 minuten.

### General Operation

1. Plug the power cord into a grounded wall outlet. The appliance will beep, and the display will light up briefly before showing the standby screen.
2. Pull the frying basket out of the appliance.
3. Place the grill plate inside the basket.
4. Place your ingredients into the frying basket. Do not exceed the MAX fill line.
5. Slide the frying basket back into the appliance until it clicks into place.
6. Press the power button (U) to turn on the airfryer.

### Manual Mode

1. After turning on, use the temperature (+ / -) buttons to set the desired cooking temperature (80°C - 200°C).
2. Use the time (+ / -) buttons to set the desired cooking time (1 - 60 minutes).
3. Press the start/pause button (▶||) to begin cooking.

## Pre-set Programs

The airfryer comes with 8 pre-set programs for common dishes. These programs automatically set the optimal temperature and time.

# 8 SLIMME PROGRAMMA'S VOOR ELK GERECHT.



FRIET  
Goudgeel  
& Krokant



RUND  
VLEES  
Bruin &  
Mals



KIPPEN  
VLEUGELS  
Rondom  
Bruin



GARNALEN  
Stevig &  
Roze



VIS  
Zacht &  
Gaar



SPEK  
Super  
Krokant



CAKE  
Luchtig  
Gebakken



GROENTE  
Geroosterd  
& Vers



Image: The 8 smart programs available on the Brabantia Airfryer XL BBEK1134: Fries, Beef, Wings, Prawn, Fish, Bacon, Cake, and Vegetables.

1. After turning on, press the program selection button (circular icon with multiple dots) repeatedly to cycle through the 8 pre-set programs.
2. Once the desired program icon is highlighted, press the start/pause button (▶||) to begin cooking.
3. You can manually adjust the time and temperature even when a pre-set program is selected.

## Warm-Hold Function

The warm-hold function keeps your food warm after cooking without drying it out. This is useful if you are not ready to serve immediately.

- After a cooking cycle is complete, the airfryer may automatically switch to warm-hold mode, or you can select it manually if available. Refer to the display for specific indicators.
- The warm-hold duration is typically pre-set but can sometimes be adjusted.

## Shaking Ingredients

Some ingredients, especially smaller items like fries, require shaking halfway through the cooking time to ensure even cooking and crispiness.

- When the airfryer beeps or indicates 'SHAKE' on the display, carefully pull out the frying basket.
- Shake the basket gently.
- Slide the basket back into the appliance. Cooking will resume automatically.

## 5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your Brabantia Airfryer XL BBEK1134.

### Cleaning the Frying Basket and Grill Plate

# ... MAAR OOK PERFECT VOOR.



Hartige omeletten



Verse broodjes



Zoete taarten



Ambachtelijke pizza's



Verse popcorn



Luchtige brownies

Image: The removable frying basket and grill plate of the Brabantia Airfryer XL BBEK1134 placed in a dishwasher, demonstrating their dishwasher-safe feature.

1. Unplug the airfryer and allow it to cool down completely before cleaning.

2. Remove the frying basket and grill plate.
3. Wash these parts in hot water with a mild dishwashing liquid and a non-abrasive sponge. The non-stick coating makes cleaning easy.
4. Alternatively, the frying basket and grill plate are dishwasher safe.
5. For stubborn food residues, soak the basket and grill plate in hot water with dishwashing liquid for about 10 minutes.

## Cleaning the Main Unit

1. Wipe the exterior of the airfryer with a damp cloth. Do not use abrasive cleaning agents or scouring pads.
2. Clean the inside of the appliance with a damp cloth and a mild, non-abrasive cleaner if necessary.
3. Never immerse the main unit in water or any other liquid.

## Storage

Ensure the appliance is clean and dry before storing. Store it in a cool, dry place.

## 6. TROUBLESHOOTING

If you encounter issues with your Brabantia Airfryer XL BBEK1134, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Airfryer does not turn on.	The appliance is not plugged in or the power outlet is not working.	Ensure the power cord is securely plugged into a functional outlet. Check the circuit breaker.
Food is not cooked evenly.	Too much food in the basket; food not shaken.	Do not overload the basket. Shake smaller ingredients halfway through cooking.
Food is not crispy.	Not enough oil (for some foods); temperature too low; cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time.
White smoke comes from the appliance.	Fat residues from previous use; cooking fatty ingredients.	Clean the basket and grill plate thoroughly after each use. This is normal when cooking very fatty foods.
Appliance smells during first use.	Manufacturing residues burning off.	This is normal for the first few uses and will dissipate. Ensure good ventilation.

## 7. SPECIFICATIONS

Detailed technical specifications for the Brabantia Airfryer XL BBEK1134.

**Brand:** Brabantia

**Model Name:** BBEK1134

**Product Dimensions (D x W x H):** 37.1 x 25.6 x 26.2 cm

**Item Weight:** 1 Kilogram

**Color:** Black

**Capacity:** 4 Liters

**Output Power:** 1500 Watts

**Control Method:** Touch

**Minimum Temperature Setting:** 80 Degrees Celsius

**Maximum Temperature Setting:** 200 Degrees Celsius

**Hot Air Frying Technology:** Rapid Air Circulation

**Special Features:** PFAS-free

**Non-stick Coating:** Yes

**Inner Material:** Plastic

**Dishwasher Safe Parts:** Yes (Basket and Grill Plate)

**Manufacturer:** Brabantia

**Manufacturing Year:** 2025

## 8. WARRANTY AND SUPPORT

### Warranty Information

For warranty details, please refer to the official Brabantia warranty policy provided with your purchase or visit the Brabantia website. The warranty description indicates 'China', which typically refers to the manufacturing origin. For specific terms and conditions, consult the documentation included in the product packaging.

### Customer Support

If you have any questions, require assistance, or need to report an issue with your Brabantia Airfryer XL BBEK1134, please contact Brabantia customer support.

- Visit the official Brabantia Store for more information and support: [Brabantia Store](#)
- Refer to the contact information provided in your product packaging for direct customer service channels.