

Shintenchi YLG61120

Shintenchi Kitchen Pantry Cabinet YLG61120 User Manual

Model: YLG61120

INTRODUCTION

Thank you for choosing the Shintenchi Kitchen Pantry Cabinet. This versatile 5-layer storage cupboard is designed to enhance organization in your kitchen, bathroom, laundry room, or dining area. Its adjustable shelves and durable construction provide practical storage solutions for various items. This manual provides essential information for safe assembly, operation, and maintenance of your new cabinet.

SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Keep all small parts and packaging materials away from children and pets to prevent choking hazards.
- Assemble the cabinet on a clean, flat, and soft surface to avoid scratching the product.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload shelves. Distribute weight evenly to maintain stability.
- For added stability, consider anchoring the cabinet to a wall, especially if children are present. Wall anchoring hardware may not be included.
- Avoid placing hot items directly on the cabinet surface without protection.

PACKAGE CONTENTS

Before beginning assembly, verify that all components are present and undamaged. Refer to the detailed parts list provided in the separate assembly instruction manual included with your product. If any parts are missing or damaged, please contact customer support.

SETUP AND ASSEMBLY

Assembly is required for this cabinet. A detailed instruction manual with step-by-step diagrams is included in the packaging to guide you through the process. Please follow these instructions carefully.

Key Assembly Steps:

1. **Unpack and Identify Parts:** Lay out all components and hardware. Compare them against the parts list in your assembly manual.
2. **Assemble the Main Frame:** Follow the instructions to connect the side panels, top, and bottom panels.
3. **Install Adjustable Shelves:** Insert the shelf pins into the desired holes on the side panels. Place the shelves onto the pins. The shelves are adjustable to accommodate items of various heights.
4. **Attach Doors:** Secure the doors to the main frame using the provided hinges. Ensure the doors align properly and close smoothly.
5. **Install Door Handles:** Attach the handles to the cabinet doors.
6. **Final Check:** Ensure all connections are tight and the cabinet is stable.



Image: Detailed dimensions and internal layout of the Shintenchi Kitchen Pantry Cabinet.



Image: Close-up of the adjustable shelf support system.

OPERATING INSTRUCTIONS

Adjustable Shelves:

The Shintenchi Kitchen Pantry Cabinet features adjustable shelves to accommodate items of varying heights. To adjust a shelf:

1. Empty the shelf of all contents.
2. Carefully lift the shelf and remove the four shelf pins from their current holes.
3. Reinsert the shelf pins into the desired new set of holes, ensuring they are level.
4. Place the shelf back onto the pins, ensuring it is securely seated.

Magnetic Door Closure:

The cabinet doors are equipped with magnetic closures to ensure they remain securely shut, protecting your stored items.

Meets All Your Unique Storage Needs



Image: Cabinet with doors open, showcasing adjustable shelves and storage capacity.

MAINTENANCE

Cleaning:

The cabinet is constructed from smooth materials, making it easy to clean. For daily maintenance:

- Wipe surfaces with a soft, damp cloth.
- For stubborn stains, use a mild, non-abrasive cleaner.
- Dry immediately with a clean, soft cloth to prevent water spots.
- Avoid harsh chemicals, abrasive cleaners, or scouring pads, as these can damage the finish.

Large Storage Space for Various Storage Needs



Image: Features highlighting the waterproof and easy-to-clean surface.

General Care:

- Avoid exposing the cabinet to direct sunlight or extreme temperature changes.
- Do not drag the cabinet when moving it; always lift it to prevent damage to the base or floor.
- Periodically check all hardware for tightness and re-tighten if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Cabinet feels wobbly or unstable.	Loose fasteners; uneven floor.	Ensure all screws are tightened. Move the cabinet to a level surface or use shims under the base to stabilize.
Doors do not close properly or are misaligned.	Hinges are loose or improperly installed; cabinet is not level.	Check hinge screws and adjust if necessary. Ensure the cabinet is on a level surface.
Shelf does not sit level.	Shelf pins are not inserted into corresponding holes or are bent.	Remove the shelf and ensure all four pins are inserted into the same level of holes. Replace any bent pins.
Scratches or minor surface damage.	Impact during assembly or use.	For minor scratches, a furniture repair marker or touch-up paint matching the cabinet color may be used.

SPECIFICATIONS

Model: YLG61120

Brand: Shintench

Product Dimensions (Overall): 23.62" W x 15.75" D x 47.24" H (60 cm W x 40 cm D x 120 cm H)

Material: Wood

Color: Black

Number of Shelves: 3 (adjustable)

Number of Doors: 2

Mounting Type: Floor Mount (Freestanding)

Item Weight: 18 Kilograms

Assembly Required: Yes

Special Feature: Adjustable Shelf, Magnetic Door Closure, Waterproof Surface

Recommended Uses: Kitchen, Bathroom, Laundry Room, Dining Room

WARRANTY INFORMATION

Specific warranty details for the Shintenchī Kitchen Pantry Cabinet Model YLG61120 are typically provided with your purchase documentation or can be obtained by contacting the manufacturer directly. Please retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions regarding the assembly, operation, or maintenance of your Shintenchī Kitchen Pantry Cabinet, or if you require assistance with missing or damaged parts, please contact Shintenchī customer support through the retailer where the product was purchased or via the contact information provided on the manufacturer's official website.

© 2026 Shintenchī. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question