

[Manuals.plus](#) /

› [MAXGROOM](#) /

› MAXGROOM 5-in-1 Body Shaver (Model LK-892) Instruction Manual

MAXGROOM LK-892

MAXGROOM 5-in-1 Body Shaver (Model LK-892) Instruction Manual

Your comprehensive guide to safe and effective use.

IMPORTANT SAFETY INFORMATION

Please read all safety warnings and instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Warning:** This product contains sharp blades. Use with caution to avoid injury.
- Do not use near water or while charging.
- Clean and store properly to prevent bacterial growth.
- Do not use during sleep or in areas where you cannot see clearly.
- Follow the provided care and maintenance instructions to ensure safe and optimal use.
- Keep out of reach of children.

PRODUCT OVERVIEW

The MAXGROOM 5-in-1 Body Shaver is a versatile grooming tool designed for various body hair trimming and shaving needs. It features a high-speed motor and multiple interchangeable heads for comprehensive personal care.



Image: The MAXGROOM 5-in-1 Body Shaver with its main unit and several interchangeable heads displayed.

Key Features:

- **5-in-1 Versatility:** Includes T-shaped contour trimmer, U-shaped curved trimmer, I-shaped body shaver, rotary head for close shave, and nasal hair trimmer.
- **High-Speed Motor:** Delivers 7000 rotations per minute for efficient and smooth shaving.
- **IPX6 Waterproof:** Suitable for both wet and dry use, and easy to clean under running water.
- **Long Battery Life:** Up to 120 minutes of use on a single 90-minute charge.
- **Dual Charging Modes:** Charge via the integrated base or directly through the device body.
- **LED Display:** Shows battery level for convenient monitoring.
- **Integrated Storage Base:** Keeps all heads and the shaver organized.

SETUP AND INITIAL USE

1. Unpacking and Inspection:

Carefully remove all components from the packaging. Inspect the device and accessories for any signs of damage. Do not use if any part is

damaged.

2. Initial Charging:

Before first use, fully charge the shaver. Connect the USB-C charging cable to the shaver or the charging base, then connect the other end to a suitable USB power adapter (not included). The LED display will indicate charging status and battery level.



Image: The MAXGROOM shaver demonstrating two charging methods: direct USB-C connection and placement on its charging dock.

A full charge takes approximately 90 minutes and provides up to 120 minutes of operating time.

3. Attaching/Detaching Heads:

The shaver heads are designed for easy magnetic attachment and detachment. To attach a head, align it with the shaver body and gently push until it clicks into place. To detach, pull the head away from the body.

Todo en Uno



Múltiples zonas
del cuerpo

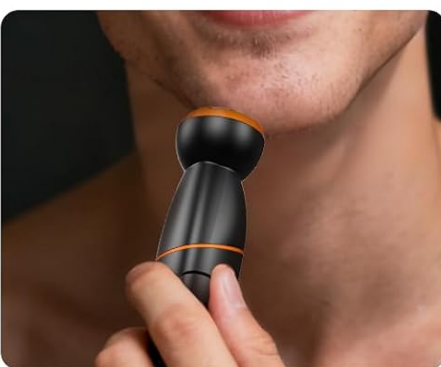


Image: A visual representation of the MAXGROOM 5-in-1 shaver with its different heads in action, illustrating its versatility for various grooming areas.

OPERATING INSTRUCTIONS

1. General Operation:

- Press the power button to turn the shaver on or off.
- The shaver can be used for both wet and dry shaving. For wet shaving, apply shaving foam or gel to the skin.
- Always ensure the blades are clean before use.



Image: An illustration of the MAXGROOM shaver's internal high-speed motor, emphasizing its 7000 RPM performance for efficient grooming.

2. Using Different Shaver Heads:

- **T-shaped Contour Trimmer:** Ideal for defining beard styles and creating sharp lines.
- **U-shaped Curved Trimmer:** Designed for close trimming in sensitive or hard-to-reach areas.
- **I-shaped Body Shaver:** Use for general body hair removal on larger areas.
- **Rotary Head:** Provides a close and smooth shave for facial hair or other areas requiring a very clean finish.
- **Nasal Hair Trimmer:** Gently insert into nostrils or ears to trim unwanted hair.



Image: A visual guide demonstrating the application of the T-head for beard styling and the R-head for precise contouring with the MAXGROOM shaver.

3. Shaving Technique:

For optimal results, especially on longer hair, it is recommended to first trim the hair down to approximately 0.1 mm using one of the trimmer heads. Afterwards, switch to the rotary or I-shaped shaver head for a complete, residue-free shave.



Image: An illustration detailing a two-step shaving process: initially trimming longer hair to a short length (0.1mm), followed by a final shave for a completely smooth finish.

MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will extend the life of your MAXGROOM shaver and ensure hygienic use.

1. Cleaning the Shaver:

- After each use, turn off the shaver and detach the head.
- Rinse the shaver head and the blades under running water. The IPX6 waterproof rating allows for easy cleaning.
- Use the included cleaning brush to remove any stubborn hair particles.
- Ensure all parts are completely dry before reattaching the head or storing the device.

IPX6

RESISTENCIA AGUA

Uso seco y mojado



Image: A man using the MAXGROOM IPX6 waterproof shaver in the shower, demonstrating its wet use capability. An inset image shows the shaver head being rinsed under a faucet for easy cleaning.

2. Storage:

Store the shaver and all its accessories in the integrated storage base provided. This keeps your grooming area tidy and ensures all components are readily accessible.

TROUBLESHOOTING

If you encounter any issues with your MAXGROOM shaver, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Shaver does not turn on.	Low battery or no charge.	Charge the shaver fully (refer to Initial Charging section).

Problem	Possible Cause	Solution
Poor shaving performance or pulling hair.	Blades are dull or clogged with hair. Hair is too long.	Clean the shaver head and blades thoroughly. If hair is long, pre-trim with a suitable head. Consider replacing the blade head if dullness persists.
Shaver stops working during use.	Battery is depleted.	Recharge the shaver.
Device feels hot during charging.	Normal operation.	A slight warmth during charging is normal. If it becomes excessively hot, discontinue charging and contact support.

If the problem persists after trying these solutions, please contact MAXGROOM customer support.

SPECIFICATIONS

Feature	Detail
Model Number	LK-892
Power Source	Rechargeable Battery (Lithium-ion)
Battery Life	Up to 120 minutes
Charging Time	Approx. 90 minutes
Water Resistance	IPX6 (Wet & Dry Use)
Motor Speed	7000 RPM
Blade Material	Stainless Steel
Included Heads	T-shaped Trimmer, U-shaped Trimmer, I-shaped Body Shaver, Rotary Head, Nasal Trimmer
Dimensions	22.3 x 16.7 x 8.4 cm (Package)
Weight	650 g (Package)

WARRANTY AND SUPPORT

Your MAXGROOM 5-in-1 Body Shaver comes with a **two-year warranty** from the date of purchase. For any questions, technical assistance, or warranty claims, please contact our professional support team. We offer **24-hour assistance** to ensure your complete satisfaction. Please refer to your purchase documentation for specific contact details or visit the official MAXGROOM website for support information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question