

Ufesa 80106056

Ufesa Core 3200W Steam Iron User Manual

Model: 80106056

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Ufesa Core 3200W Steam Iron. Retain this manual for future reference.

- Always unplug the iron from the electrical outlet when filling with water, emptying, or when not in use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against the risk of electric shock, do not immerse the iron in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Use the iron only for its intended household use.
- Never direct steam at people or pets.
- Place the iron on a stable, heat-resistant surface when resting.

2. PRODUCT OVERVIEW

The Ufesa Core 3200W Steam Iron is designed for efficient and effective garment care. Familiarize yourself with its components.



Image 2.1: Side view of the Ufesa Core 3200W Steam Iron, showcasing its sleek design and water tank.

Key Features:

- **High Power:** 3200W for rapid heating and consistent performance.
- **Powerful Steam:** Up to 260g steam shot for stubborn creases and 50g/min continuous steam.
- **3-in-1 Anti-calc System:** Includes self-cleaning, anti-calc shot, and an anti-calc cartridge to prevent limescale buildup.
- **Anti-drip System:** Prevents water stains on fabrics, even at low temperatures.
- **Versatile Ironing:** Supports vertical steaming, dry ironing, and a spray function.
- **Prime Glide Ceramic Soleplate:** Ensures smooth gliding and even heat distribution.
- **Large Water Tank:** 350ml capacity for extended ironing sessions.
- **Long Cable:** 1.9m power cord for flexible use.

Components:

1. Water Inlet with cover
2. Spray Nozzle
3. Steam Control Selector
4. Steam Shot Button
5. Spray Button
6. Temperature Control Dial
7. Water Tank (350ml capacity)
8. Ceramic Soleplate
9. Power Cord
10. Self-clean Button (often integrated with steam control)

3. SETUP

3.1 Unpacking

- Carefully remove the iron from its packaging.
- Remove any labels or protective films from the soleplate or body of the iron.
- Inspect the iron for any signs of damage. If damaged, do not use and contact customer support.

3.2 First Use

Before first use, it is recommended to perform a test run.

1. Fill the water tank (see 3.3).
2. Plug in the iron and set the temperature to maximum.
3. Allow the iron to heat up completely.
4. Iron an old piece of fabric (e.g., a cotton cloth) for a few minutes to remove any manufacturing residues.
5. Some odor or light smoke may occur during the first use; this is normal and will dissipate.

3.3 Filling the Water Tank



Image 3.1: Demonstrating how to fill the water tank of the Ufesa Core 3200W Steam Iron using a jug.

1. Ensure the iron is unplugged from the power outlet.

2. Set the steam control to the 'dry ironing' position (no steam).
3. Open the water inlet cover.
4. Using a measuring cup, carefully pour tap water into the water tank up to the 'MAX' level indicator. Do not overfill.
5. Close the water inlet cover securely.
6. For optimal performance and to prolong the life of your iron, it is recommended to use a mixture of 50% tap water and 50% distilled water, especially in areas with hard water. Do not use 100% distilled water as it can affect steam production.

4. OPERATING THE IRON

4.1 Temperature Setting

Always check the garment's care label for recommended ironing temperature. If unsure, start with a lower temperature and test on an inconspicuous area.

1. Plug the iron into a suitable electrical outlet.
2. Turn the temperature control dial to the desired setting. The indicator light will illuminate.
3. Wait for the indicator light to turn off, indicating the iron has reached the selected temperature.

The temperature dial typically has markings for different fabric types:

- (*): Synthetic fabrics (Nylon, Acrylic, Polyester)
- (**): Silk, Wool
- (***): Cotton, Linen

4.2 Dry Ironing

For dry ironing, ensure the water tank is empty or the steam control is set to the 'no steam' position.

1. Set the steam control to the 'dry ironing' symbol.
2. Select the appropriate temperature for your fabric.
3. Once the iron is heated, proceed with ironing.

4.3 Steam Ironing

Steam ironing is effective for most fabrics, especially cotton and linen. Ensure the water tank is filled.



Image 4.1: The Ufesa Core 3200W Steam Iron in use, producing steam for effective wrinkle removal.

1. Fill the water tank (see 3.3).
2. Set the temperature control dial to a steam-appropriate setting (usually ** or ***). The iron will not produce steam if the temperature is too low.
3. Once the iron is heated (indicator light off), adjust the steam control selector to the desired steam level.
4. For stubborn creases, press the **Steam Shot Button** for a powerful burst of steam (up to 260g). Wait a few seconds between shots to allow the iron to reheat.

4.4 Vertical Steaming

The iron can be used to remove wrinkles from hanging garments, curtains, or drapes.

1. Ensure the water tank is filled and the iron is heated to a high temperature setting (***).
2. Hold the iron vertically, a few centimeters away from the fabric.
3. Press the **Steam Shot Button** repeatedly to release bursts of steam.
4. Do not allow the hot soleplate to touch the fabric during vertical steaming.

4.5 Spray Function

The spray function helps to dampen stubborn creases before ironing.

- Ensure the water tank is filled.
- Press the **Spray Button** to release a fine mist of water onto the fabric.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your iron.

5.1 After Each Use

1. Unplug the iron and allow it to cool completely.
2. Empty any remaining water from the tank by opening the water inlet and tilting the iron over a sink.
3. Store the iron upright on its heel rest to protect the soleplate.

5.2 Cleaning the Soleplate



Image 5.1: Close-up of the 'Prime Glide' ceramic soleplate of the Ufesa Core 3200W Steam Iron.

- Ensure the iron is cool and unplugged.
- Wipe the soleplate with a damp cloth and a non-abrasive liquid cleaner.
- Do not use abrasive scourers, metal pads, or harsh chemicals as these can damage the ceramic coating.

- If starch or other residue builds up, use a specialized soleplate cleaning stick (follow product instructions).

5.3 3-in-1 Anti-calc System

The integrated anti-calc system helps prevent limescale buildup, which can affect steam performance and stain garments. This system includes:

- **Self-cleaning Function:** Periodically use this function to flush out mineral deposits. Refer to the specific instructions for activating the self-clean cycle (often involves filling the tank, heating the iron, and pressing a dedicated self-clean button or setting the steam control to a specific position while holding over a sink).
- **Anti-calc Shot:** A powerful burst of steam designed to dislodge scale particles.
- **Anti-calc Cartridge:** An internal filter that reduces mineral buildup. This cartridge is typically permanent and does not require replacement.

6. TROUBLESHOOTING

If you encounter issues with your Ufesa Core 3200W Steam Iron, consult the table below before contacting customer service.

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outage; faulty outlet.	Check power cord connection; check circuit breaker; try a different outlet.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to 'dry'.	Fill water tank; set temperature to steam range (** or ***); adjust steam control.
Water leaks from soleplate.	Temperature too low for steam; water tank overfilled; anti-drip system malfunction.	Increase temperature; do not overfill tank; if problem persists, contact support.
White flakes or brown stains on fabric.	Limescale buildup; dirty soleplate.	Perform self-clean cycle; clean soleplate (see 5.2). Use recommended water mixture.
Iron sticks to fabric.	Temperature too high for fabric; soleplate residue.	Reduce temperature; clean soleplate (see 5.2).

7. SPECIFICATIONS

Detailed technical specifications for the Ufesa Core 3200W Steam Iron.

Feature	Specification
Brand	Ufesa
Model Number	80106056

Feature	Specification
Power	3200W
Steam Shot	Up to 260g
Continuous Steam	50g/min
Soleplate Material	Prime Glide Ceramic
Water Tank Capacity	350ml
Cable Length	1.9m
Special Features	Anti-drip, Spray function, 3-in-1 Anti-calc system, Vertical ironing
Dimensions (Package)	31 x 16 x 12 cm
Product Weight	1.2 kg

8. WARRANTY AND SUPPORT

The Ufesa Core 3200W Steam Iron comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Ufesa customer support through their official website or the contact information provided in your product documentation.

Keep your proof of purchase (receipt or invoice) as it will be required for any warranty service.