

[Manuals.plus](#) /

› [TechniSat](#) /

› TechniSat DIGITRADIO 330 DAB+ FM Stereo Radio User Manual

TechniSat DIGITRADIO 330

TechniSat DIGITRADIO 330 DAB+ FM Stereo Radio User Manual

Model: DIGITRADIO 330 | Brand: TechniSat

1. INTRODUCTION

The TechniSat DIGITRADIO 330 is a versatile stereo radio offering DAB+ digital radio, FM reception, a built-in CD player, Bluetooth 5.3 connectivity, and USB MP3 playback with charging functionality. Designed for clear sound and ease of use, it features a 2.4-inch color display, alarm clock, sleep timer, and snooze function. This manual provides detailed instructions for setting up, operating, and maintaining your device.

Package Contents

- TechniSat DIGITRADIO 330 Unit
- Remote Control
- 2 x AAA Batteries (for remote control)
- User Manual

2. SETUP

2.1 Unpacking and Placement

Carefully remove all components from the packaging. Place the DIGITRADIO 330 on a stable, flat surface. Ensure adequate ventilation around the unit.

2.2 Connecting Power

Connect the power cable to the unit's power input and then to a standard wall outlet (230V, 60Hz). The unit features an internal power supply, so no external power brick is needed.

2.3 Antenna Connection

Extend the telescopic DAB/FM antenna for optimal radio reception. Adjust its position to improve signal strength if needed.



Image: Rear Connections. This image displays the rear panel of the DIGITRADIO 330, highlighting the DAB/FM telescopic antenna, the USB interface for charging and MP3 playback, the analog audio/AUX input, and the 3.5 mm headphone jack.

2.4 Initial Scan (DAB+/FM)

Upon first power-on, the device will automatically perform a station scan for DAB+ and FM radio. The clock and date will also be automatically updated via DAB+ signal.

3. OPERATING INSTRUCTIONS

3.1 Basic Controls

The DIGITRADIO 330 features intuitive controls, including two rotary knobs for volume and menu navigation, along with several buttons on the front panel and a remote control for convenient operation.

3.2 DAB+ and FM Radio

Switch to DAB+ or FM mode using the 'Mode' button. Use the navigation controls to browse available stations. The 2.4-inch TFT color display shows station information (RDS for FM, DLS for DAB+).



DAB+ i FM

Różnorodność programów radiowych o zasięgu ogólnokrajowym i regionalnym w jakości cyfrowej.

Image: DAB+ Radio. This image shows the DIGITRADIO 330 displaying DAB+ radio information on its color screen, with the DAB+ logo in the background, illustrating digital radio reception.

You can store up to 30 favorite stations for quick access.

3.3 CD Player

Insert a CD into the slot-in CD drive located below the display. The unit supports standard audio CDs and MP3 CDs. Playback will start automatically. Use the playback controls (Play/Pause, Skip, Stop) on the unit or remote control.



Wbudowany odtwarzacz CD

Odtwarza ulubione płyty CD w kółko.

Image: CD Player. This image depicts the DIGITRADIO 330 with its slot-in CD player tray open, ready to accept a CD, demonstrating its built-in CD playback capability.

3.4 Bluetooth 5.3 Connectivity

Activate Bluetooth mode on the DIGITRADIO 330. On your smartphone or tablet, search for available Bluetooth devices and select "DIGITRADIO 330" to pair. Once connected, you can stream audio wirelessly from your device.

3.5 USB Playback and Charging

Insert a USB stick containing MP3 files into the USB port on the rear of the unit. The radio will automatically switch to USB mode and begin playback. The USB port also functions as a charging port for external devices (5W output).

3.6 AUX Input

Connect an external audio source (e.g., an older MP3 player) to the 3.5 mm AUX input on the rear of the unit using an appropriate audio cable. Select AUX mode on the radio to listen to the connected device.

3.7 Alarm Clock, Sleep Timer, and Snooze

The DIGITRADIO 330 includes a radio alarm clock, a sleep timer to automatically turn off the unit after a set period, and a snooze function for temporary alarm suspension. Refer to the on-screen menu for setting these features.

Praktyczne funkcje ułatwiające zasypianie



Możliwość
ustawienia 2
godzin budzenia



Timer
wyłączający



Funkcja
drzemki

Image: Sleep Functions. This image shows the DIGITRADIO 330 on a bedside table, accompanied by graphic icons representing its practical sleep-related functions: the ability to set two alarm times, a sleep timer, and a snooze function.

3.8 Sound Adjustment

The unit features powerful stereo speakers (2 x 5 W RMS) and an equalizer. Access the equalizer settings through the menu to adjust bass, treble, and other sound profiles to your preference.

Mocny i zrównoważony dźwięk



2 x 5 W RMS z korektorem

Image: Powerful Sound. This image illustrates the DIGITRADIO 330 with blue sound waves radiating from it, emphasizing its powerful and balanced audio output of 2 x 5 W RMS with an equalizer.

4. MAINTENANCE

4.1 Cleaning

Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the surface. Ensure the unit is unplugged before cleaning.

4.2 CD Player Care

Handle CDs by their edges to avoid fingerprints and scratches. Clean dirty CDs with a soft, lint-free cloth, wiping from the center outwards. Do not insert damaged or irregularly shaped discs into the CD player.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; power outlet not active.	Check power cable connection; try a different outlet.
Poor radio reception (DAB+/FM)	Antenna not extended or poorly positioned; weak signal in area.	Fully extend and adjust the telescopic antenna. Try repositioning the unit.
CD not playing	CD inserted incorrectly; CD is dirty or damaged; unsupported disc format.	Ensure CD is inserted correctly (label side up). Clean the CD. Try a different CD. Ensure it's an audio CD or MP3 CD.
Bluetooth pairing issues	Bluetooth not enabled on radio or external device; device too far; already paired with another device.	Ensure Bluetooth is active on both devices. Bring devices closer. Disconnect from other Bluetooth devices.
USB playback not working	USB stick not inserted correctly; unsupported file format (only MP3); USB stick corrupted.	Reinsert USB stick. Ensure files are MP3 format. Try a different USB stick.

6. SPECIFICATIONS

Brand	TechniSat
Model Number	0000/2960
Color	Black
Connectivity Technology	Aux, Bluetooth 5.3, USB
Product Dimensions (W x H x D)	35.5 cm x 13.5 cm x 19.5 cm
Item Weight	3.31 kg
Tuner Technology	FM/DAB+
Supported Radio Bands	DAB+, FM
Power Source	Corded Electric (230 Volts, 60 Hz)
Max Speaker Output Power	10 Watts (2 x 5 W RMS)
Audio Output Mode	Stereo
Display Type	2.4-inch TFT Color Display
Compatible Devices	MP3 Player, Smartphone, Headphones, Tablet
Included Components	DIGITRADIO 330, Remote Control, 2 x AAA Batteries, User Manual



Image: Product Dimensions. This image provides a visual representation of the TechniSat DIGITRADIO 330 with its key dimensions labeled: 35.5 cm (width), 13.5 cm (height), and 19.5 cm (depth).

7. WARRANTY AND SUPPORT

7.1 Warranty Information

The TechniSat DIGITRADIO 330 comes with a **2-year warranty** (2 Jahre Gewährleistung) from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and material faults under normal use conditions.

7.2 Customer Support

For technical assistance, troubleshooting, or warranty service, please contact TechniSat customer support. Contact details can typically be found on the official TechniSat website or in the included warranty documentation.

Note: Always refer to the official TechniSat website for the most up-to-date support information and contact methods.

