

[manuals.plus](#) /› [XIAOMI](#) /› [XIAOMI Redmi Pad 2 Pro Instruction Manual - Model 25099RP13G](#)

## XIAOMI 25099RP13G

# XIAOMI Redmi Pad 2 Pro Instruction Manual

Model: 25099RP13G | Brand: XIAOMI

## 1. INTRODUCTION

The XIAOMI Redmi Pad 2 Pro is a high-performance tablet designed for entertainment and productivity. It features a 12.1-inch 2.5K crystal-clear display with a 120Hz adaptive refresh rate, quad speakers with Dolby Atmos, and a massive 12000mAh battery. Powered by the Snapdragon 7s Gen 4 Mobile Platform, it offers smooth performance for various applications.

## 2. WHAT'S IN THE Box

- XIAOMI Redmi Pad 2 Pro Tablet
- USB Cable
- Manuals
- Pin Ejector for Micro SD Slot

## 3. SETUP

1. **Unboxing:** Carefully remove all components from the packaging.
2. **Initial Charge:** Connect the tablet to the power adapter using the provided USB cable and charge it fully before first use.
3. **Power On:** Press and hold the power button until the XIAOMI logo appears.
4. **Initial Configuration:** Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.
5. **Micro SD Card Installation:** Use the pin ejector to open the Micro SD card slot. Insert a Micro SD card (up to 2TB, sold separately) for expanded storage.

## 4. OPERATING INSTRUCTIONS

### 4.1 Display and Visuals

The Redmi Pad 2 Pro features a 12.1-inch 2.5K crystal-clear display (2560 x 1600 resolution, 249 ppi) with support for over 1.07 billion colors. It offers a 120Hz adaptive refresh rate for smooth visuals and a touch sampling rate of up to 360Hz (240Hz with pen). Brightness reaches 500 nits (typical) and 600 nits (HBM). The display is TÜV Rheinland Low Blue Light (Hardware Solution) Certified, TÜV Rheinland Flicker Free Certified, and TÜV Rheinland Circadian

Friendly Certified, ensuring eye comfort. It also supports Dolby Vision and Reading mode.

## 4.2 Performance and Software

The tablet is powered by the Snapdragon 7s Gen 4 Mobile Platform, built on a 4nm manufacturing process. It runs on Android 15 with a Global ROM. The device offers smooth performance for entertainment, multitasking, and app usage. You can directly operate your Xiaomi smartphone from the Redmi Pad 2 Pro, use apps or files, and pin phone apps for seamless integration.

## 4.3 Connectivity

The Redmi Pad 2 Pro supports Wi-Fi 6 for fast and reliable wireless connectivity. It also includes Bluetooth 5.4 and IPv6. This is a WIFI-only version and does not support SIM cards for calls or text.

## 5. CAMERA USAGE

---

The tablet is equipped with an 8MP rear camera (1/4", f/2, 1.12µm) and an 8MP front camera (1/4", f/2.28, 1.12µm). Both cameras support 1080P video recording at 30fps and 720P video at 30fps. Camera features include Photo, Video, Document, Teleprompter, and HDR modes.

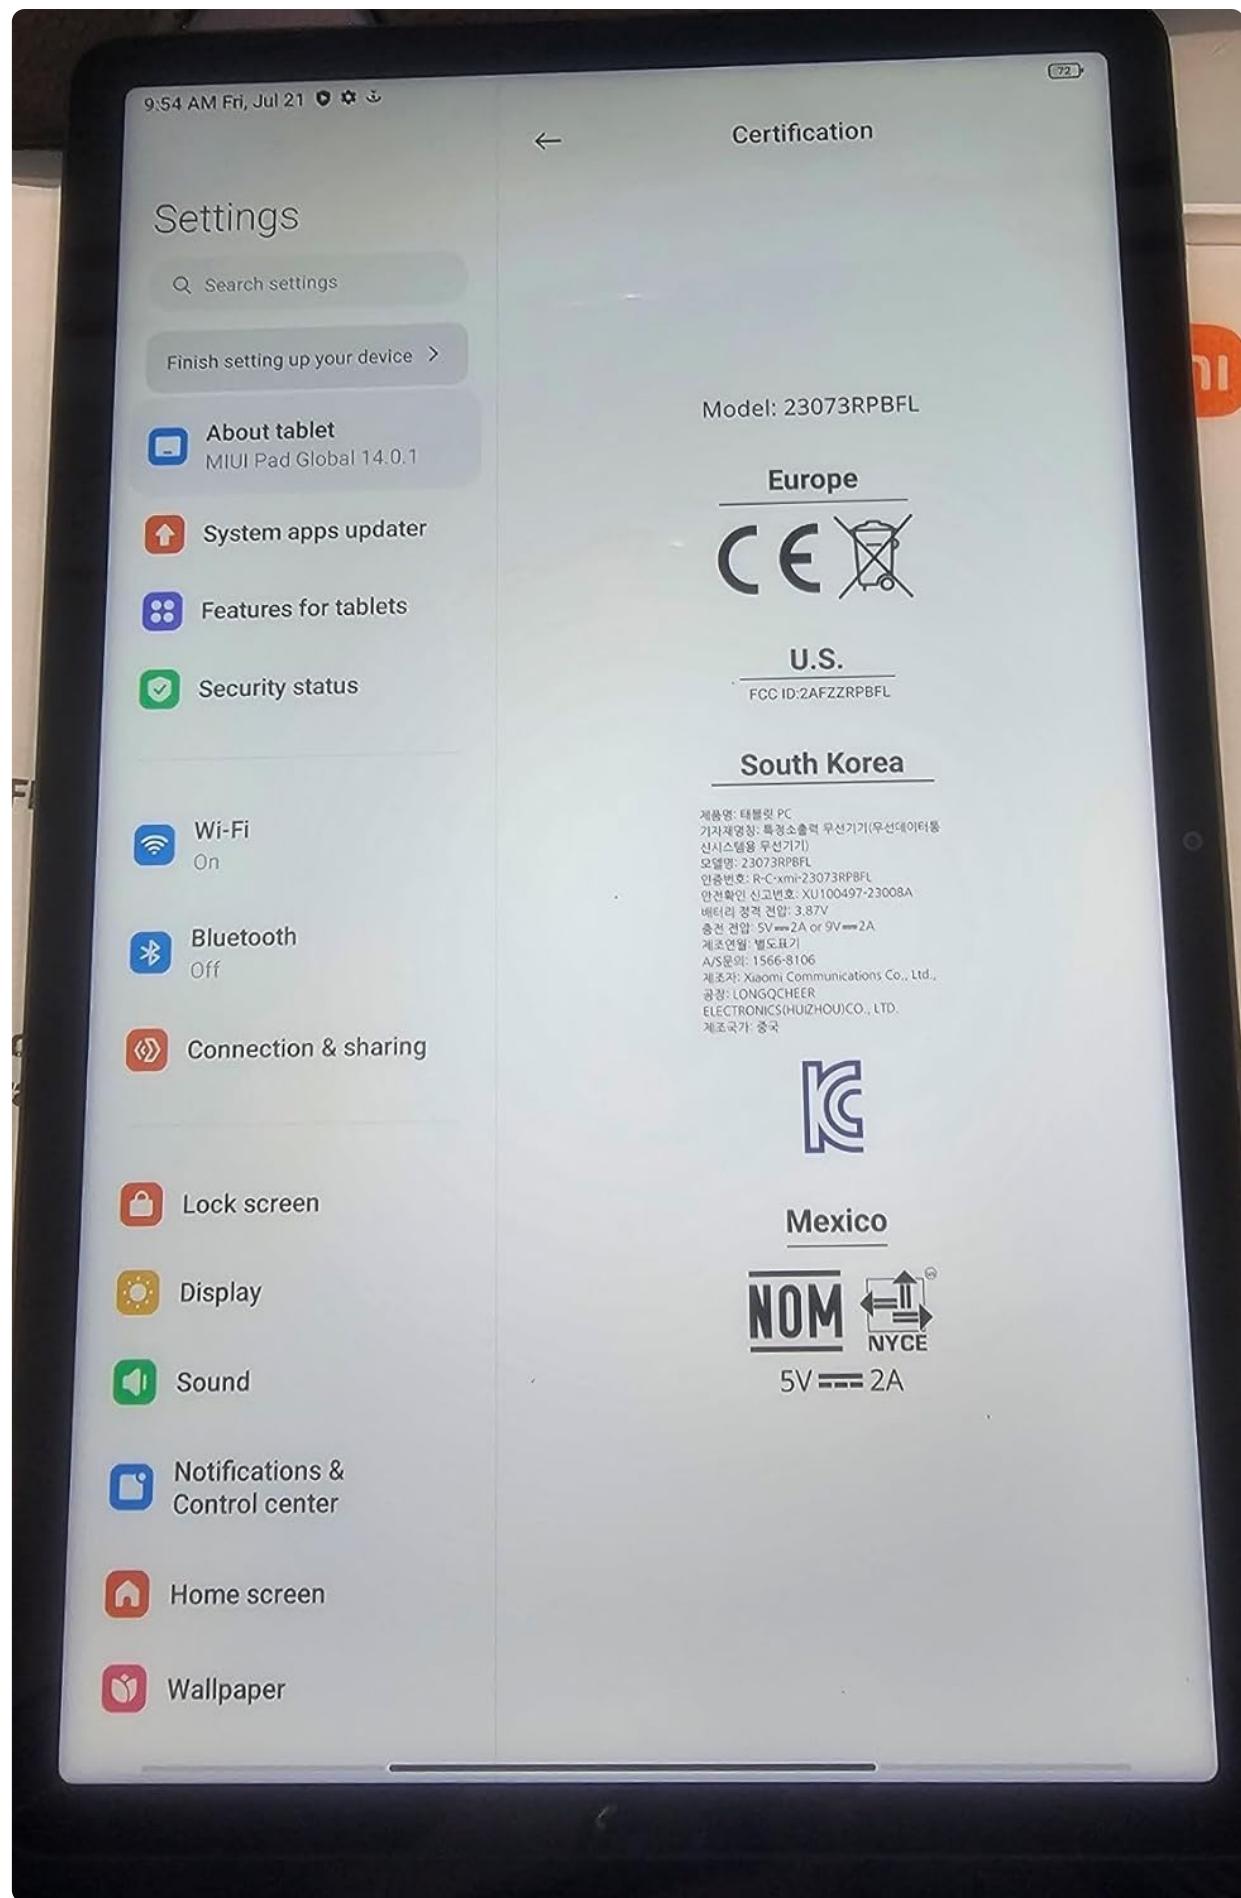


Image: Front view of the XIAOMI Redmi Pad 2 Pro displaying a vibrant, colorful wallpaper.



*Image: Rear view of the XIAOMI Redmi Pad 2 Pro in silver, highlighting the camera module.*

## 6. BATTERY AND CHARGING

The Redmi Pad 2 Pro features a massive 12000mAh (typical) battery, providing extended usage hours. It supports up to 27W wired reverse charging, allowing you to charge other compatible devices like smartphones or earbuds directly from your tablet.

## 7. AUDIO

Experience immersive audio with the tablet's quad speakers, which support Dolby Atmos. The speakers deliver powerful sound with a maximum volume boosted up to 300%.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	Redmi Pad 2 Pro
Item Model Number	25099RP13G
Display Size	12.1 Inches
Screen Resolution	2560 x 1600 pixels (2.5K)
Refresh Rate	Up to 120Hz
Processor	Snapdragon 7s Gen 4 Mobile Platform (2.7 GHz)
RAM	6GB (for this variant)
Storage	128GB (for this variant), expandable up to 2TB via Micro SD
Operating System	Android 15
Rear Camera	8MP
Front Camera	8MP
Battery Capacity	12000mAh (typical)
Charging	Up to 27W wired reverse charging
Wireless Connectivity	Wi-Fi 6 (802.11ax), Bluetooth 5.4
Audio	Quad speakers with Dolby Atmos
Dimensions (LxWxH)	12.01 x 0.3 x 7.15 inches
Item Weight	1.12 pounds

## 9. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and security.
- **Storage Management:** Periodically review and delete unnecessary files or apps to free up storage space. Utilize the Micro SD card for large media files.
- **Battery Care:** Avoid extreme temperatures. For long-term storage, charge the battery to around 50% and power off the device.

## 10. TROUBLESHOOTING

- **Device Not Powering On:** Ensure the battery is charged. Connect to the charger and try powering on again.
- **Screen Unresponsive:** Perform a forced restart by holding the power button for approximately 10-15 seconds.
- **Wi-Fi Connectivity Issues:** Restart the tablet and your Wi-Fi router. Check Wi-Fi settings to ensure correct network selection and password.
- **App Crashing:** Clear the app's cache and data in Settings > Apps. If the issue persists, uninstall and reinstall the app.
- **Slow Performance:** Close unnecessary background apps. Clear system cache. Consider a factory reset if performance remains poor.

performance issues continue after other troubleshooting steps (back up data first).

## **11. WARRANTY AND SUPPORT**

---

This product comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included in your product packaging or visit the official XIAOMI support website. For technical assistance, troubleshooting, or service requests, please contact XIAOMI customer support.