

Angrox Universal-SRP9232D

Angrox Universal TV Remote Control User Manual

Model: Universal-SRP9232D

INTRODUCTION

This manual provides comprehensive instructions for setting up and operating your Angrox Universal TV Remote Control (Model: Universal-SRP9232D). This remote is designed to replace multiple original remotes, offering control over various audio and video devices from major brands.



Compatible Devices

Multi Device Control that can operate Up To 3 Different Audio And Video Components Such As **Tvs**

Media Streaming Players **Sound Bar Audio** **Boxes And More**



Most Brands TVs



Media Streaming Players



DVD / Blu-ray Players



Sound Bar Audios

Image: The Angrox Universal Remote Control, showcasing its compatibility with various major TV brands like Samsung, LG, Hisense, Sony, TCL, Philips, Onn, Sharp, RCA, Element, Westinghouse, Sanyo, Emerson, JVC, Sceptre, Sansui, Panasonic, Magnavox, and Skyworth.

COMPATIBILITY

Compatible Devices and Brands:

This universal remote control is compatible with most major TV brands and various audio/video devices. It can control up to 3 different components.

- **TVs:** Samsung, Roku, LG, Hisense, Sony, TCL, Philips, Onn, Sharp, RCA, Element, Westinghouse, Sanyo, Emerson, JVC, Sceptre, Sansui, Panasonic, Magnavox, Skyworth, and more.
- **Audio and Video Devices:** Media Streaming Players, DVD/Blu-ray players, Sound Bar Audio, and other boxes.

Simple Setup

Step 1: Find the device type you need in the code list. Then find and circle all the codes for the brand.

Step 2: Press and hold down the (**SETUP**) button for 3 seconds until the red light on the remote turns on.

Step 3: Press and release the (**TV / STR / AUD**) button on the remote, the red light will blink once and remain on.

Step 4: Enter the first **4-digit** code from code list.

Step 5: Point the remote at the TV, and test the buttons on the remote to see if the TV responds as you would expect. **If the buttons don't control the TV, repeat steps 2-4 and enter different code to test.**

⚠ Note: If all the code in the program fails, please check the instructions on page 7 "Automatic Code Search". (Including code table and usage instructions)



Image: Visual representation of compatible devices including various TV brands, media streaming players, DVD/Blu-ray players, and sound bar audio systems.

Important: Not Compatible With:

This remote control is **not compatible** with the following devices:

- Roku Streaming Sticks
- Roku Sound Bar
- TCL Sound Bar
- Hisense Sound Bar
- Insignia Fire TV
- Anker Sound Bar
- Klipsch Sound Bar
- All TV Sticks (e.g., Fire TV Sticks, Amazon Fire Stick)
- All Fire TV devices (e.g., Insignia Fire TVs, Toshiba Fire TVs)
- All TV Cube devices

This product connects and pairs only via infrared (IR). If you are unsure about compatibility, please consult the manufacturer.

NOT COMPATIBLE WITH:

- Not for **Fire TV Sticks**
- Not for **Fire TV Cube**
- Not for **Amazon Fire Stick**
- Not for **TCL Fire TVs**
- Not for **Insignia Fire TVs**
- Not for **Toshiba Fire TVs**
- Not for **Roku Sound Bar**
- Not for **Roku Streaming Sticks**



Image: Visual representation of devices not compatible with the Angrox Universal Remote Control, including various streaming sticks and soundbars.

SETUP AND PAIRING INSTRUCTIONS

Before using the remote, you will need to install two AAA alkaline batteries (not included). Do not mix old and new batteries or different battery types.

Requires 2***AAA** alkaline batteries (Batteries are not included)



Image: The Angrox Universal Remote Control showing its dimensions and the battery compartment requiring two AAA alkaline batteries.

Direct Code Entry Pairing Steps:

1. **Step 1:** Locate the device type you wish to control in the provided code list. Identify and circle all codes for your brand.
2. **Step 2:** Press and hold the **SETUP** button for 3 seconds until the red indicator light on the remote turns on.
3. **Step 3:** Press and release the **TV/STR/AUD** button (corresponding to the device type) on the remote. The red light will blink once and then remain on.
4. **Step 4:** Enter the first 4-digit code from your code list.
5. **Step 5:** Point the remote at your TV or device and test the buttons to confirm functionality. If the buttons do not control the device as expected, repeat Steps 2-4, trying a different code from your list.

Note: If all codes in the program fail, refer to the "Automatic Code Search" instructions on page 7 of the included user manual for alternative pairing methods.

BUTTON FUNCTION

Power - Turns devices ON / OFF

Setup - Used to program the remote

Last channel - Returns to the previously selected channel

DVD / Blu-ray open/close - open/close a player, or List features on cable / satellite receivers

Menu - Displays the on-screen menu

OK - Selects menu items for the controlled device

Info / Options - Displays on-screen show / content information

Home / Guide - Easily access features on today's streaming devices, or Guide on cable / satellite receivers

Volume up / down

Numbers - Enter numbers for direct channel selection

Enter key (Some devices require enter to be pressed after channel selection)

Input - selects video inputs

TV / STR / AUD - selects the device to control

Record / stop / fast forward / pauseplay / rewind

ABCD - Access additional features for DVRs, cable and satellite receivers

App Hotkey - Access top apps like Netflix, Amazon Prime, Hulu and more

Up / Down / Left / Right menu navigation

Exit - Exit on-screen menus

Channel up / down

Mute - Mutes sound

(-) Dash - Use to select digital channels, e.g., 4.1



Image: Step-by-step visual guide for direct code entry pairing, showing which buttons to press on the remote.

OPERATING INSTRUCTIONS AND BUTTON FUNCTIONS

The Angrox Universal Remote Control features a standard layout for intuitive operation. Below is a guide to the main buttons and their functions:



Image: A diagram illustrating the functions of each button on the Angrox Universal Remote Control.

- Power** : Turns devices ON/OFF.
- SETUP** : Used to program the remote.
- INPUT** : Selects video inputs.
- TV / STR / AUD** : Selects the device to control (TV, Streaming Device, Audio).
- Last Channel** : Returns to the previously selected channel.
- DVD/Blu-ray Open/Close** : Opens or closes a player's disc tray.
- Record / Stop / Fast Forward / Pause / Rewind** : Media playback controls.
- ABCD Buttons** : Access additional features for DVRs, cable, and satellite receivers.
- MENU** : Displays the on-screen menu.
- OK** : Selects menu items for the controlled device.
- APP Hotkey** : Access top apps like Netflix, Amazon Prime, Hulu, and more.
- Up / Down / Left / Right** : Menu navigation.
- Info / Options** : Displays on-screen show/content information.
- Home / Guide** : Easily access features on today's streaming devices or TV guide.
- EXIT** : Exits on-screen menus.
- VOL +/-** : Volume up/down.
- CH +/-** : Channel up/down.
- Mute** : Mutes sound.
- Numbers (0-9)** : Enter numbers for direct channel selection.
- ENTER** : Confirms selections (some devices require Enter after channel selection).
- (-) Dash** : Used to select digital channels (e.g., 4.1).

MAINTENANCE

- **Battery Replacement:** When the remote's performance degrades, replace the two AAA alkaline batteries. Ensure correct polarity.
- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Solution
Remote does not control the device.	◦ Ensure fresh AAA batteries are installed correctly. ◦ Verify the remote is pointed directly at the device's IR sensor. ◦ Re-attempt the pairing process using a different 4-digit code from the code list. ◦ Try the "Automatic Code Search" method (refer to the included manual, page 7). ◦ Confirm the device is compatible (see "Compatibility" section).

Problem	Solution
Red indicator light does not turn on during setup.	◦ Check battery installation and replace if necessary. ◦ Ensure the SETUP button is held for the full 3 seconds.
Buttons respond intermittently or incorrectly.	◦ Ensure there are no obstructions between the remote and the device. ◦ Replace batteries. ◦ Re-pair the remote with the device.

SPECIFICATIONS

- **Model Name:** Universal-SRP9232D
- **Brand:** Angrox
- **Product Dimensions:** 21.49 x 4.6 x 1.75 cm
- **Weight:** 60 g
- **Connectivity Technology:** Infrared (IR)
- **Maximum Range:** 15 meters (49 feet)
- **Battery Type:** 2 x AAA Alkaline batteries (not included)
- **Button Quantity:** 45
- **Max Number of Supported Devices:** 18 (can control up to 3 simultaneously)
- **Special Features:** Responsive buttons, stable signal, universal compatibility.

WARRANTY AND SUPPORT

Angrox offers a **180-day warranty** for this product. If you have any questions or encounter issues with your universal remote control, please contact Angrox customer service for assistance. They are dedicated to helping you resolve any problems. For support, refer to the contact information provided with your purchase or visit the official Angrox website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question