

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Desobry](#) /

› Desobry 14.2-inch Portable TV Instruction Manual

Desobry 14.2"

Desobry 14.2-inch Portable TV Instruction Manual

Model: 14.2" Portable TV

1. IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using this product. Keep this manual for future reference.

- Do not expose the device to rain or moisture.
- Avoid extreme temperatures.
- Use only the provided power adapters.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Dispose of batteries and electronic components responsibly according to local regulations.

2. WHAT'S IN THE BOX

Verify that all items are present upon unboxing:

- 1 x Desobry 14.2" Portable TV
- 1 x User Manual
- 1 x Antenna
- 1 x Car Charger
- 1 x 12V AC Adapter
- 1 x RCA Cable
- 1 x Car Headrest Mount Holder
- 2 x AAA Batteries (for remote control)
- 1 x Remote Control



WHAT'S IN THE BOX?

MOUNTINGS



Antenna



Car Charger



12V AC Adapter



RCA Cable



Car Headrest Mount Holder



2*AAA Batteries



Remote Control



User Manual

PORTABLE TV

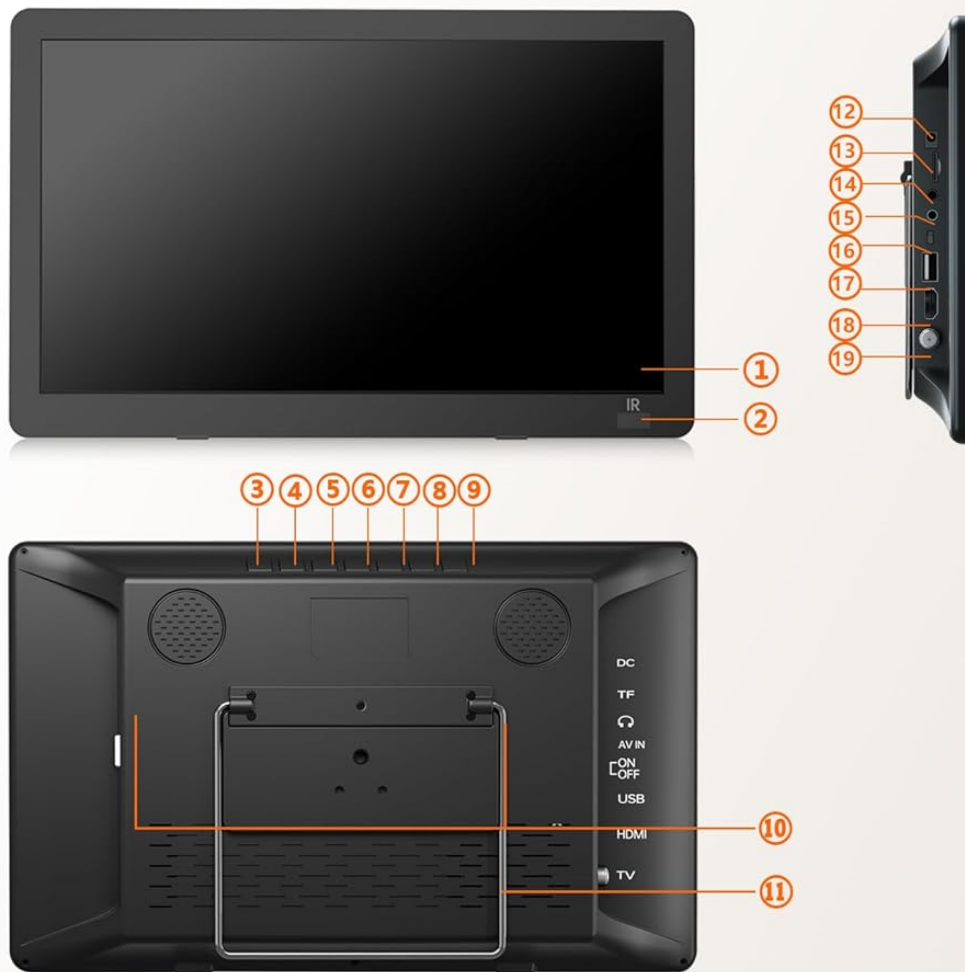


Image: All components included in the product packaging.

3. PRODUCT OVERVIEW

Front and Side Views

PORTABLE TV DETAILS



- | | | |
|-----------------------------------|--------------------|-------------------------------|
| ① LCD screen | ⑦ Next channel | ⑭ Headphone jack |
| ② Remote control reception window | ⑧ Previous channel | ⑮ AV signal input interface |
| ③ Mode switching function | ⑨ System menu | ⑯ Power switch |
| ④ (VOL+) Increase volume | ⑩ Stereo speakers | ⑰ USB interface |
| ⑤ (VOL-) Decrease volume | ⑪ Table stand | ⑱ HDMI signal input interface |
| ⑥ (OK) Confirm button | ⑫ Power interface | ⑲ TV Antenna Interface |
| | ⑬ TF card slot | |

Image: Front and side view of the portable TV with labeled components.

1. LCD screen
2. Remote control reception window
3. Mode switching function
4. Volume Up (VOL+)
5. Volume Down (VOL-)
6. OK / Confirm button
7. Next channel

8. Previous channel
9. System menu
10. Stereo speakers
11. Table stand
12. Power interface
13. TF card slot
14. Headphone jack
15. AV signal input interface
16. Power switch
17. USB interface
18. HDMI signal input interface
19. TV Antenna Interface

4. SETUP

4.1 Powering the TV

The TV can be powered in three ways:

- **AC Adapter:** Connect the 12V AC adapter to the power interface (12) and a wall outlet.
- **Car Charger:** Use the provided car charger to power the TV in a vehicle.
- **Built-in Battery:** The TV features a 4000mAh built-in rechargeable battery for portable use.

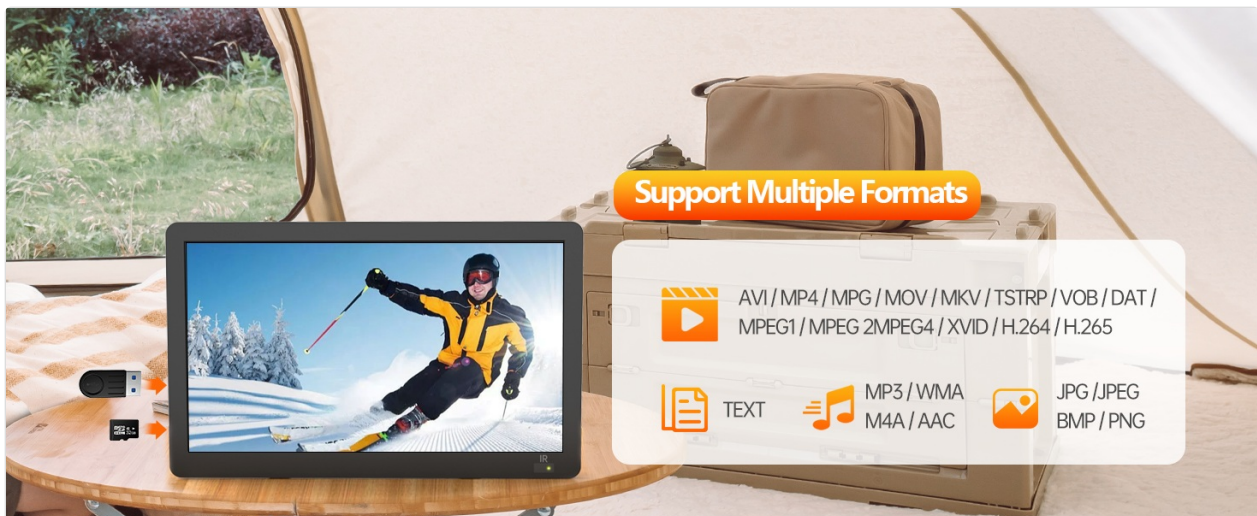


Image: Three charging systems for the portable TV.

4.2 Antenna Connection and Channel Scan

To receive free-to-air digital TV signals:

1. Connect the detachable antenna to the TV Antenna Interface (19). For optimal signal, place the antenna near a window or outdoors.
2. Ensure the TV is powered on.
3. Navigate to the system menu (9) and select ATSC mode.
4. Perform an auto-scan for channels. The TV will search and store available digital channels.



Image: Portable TV with antenna connected, displaying a baseball game.

Video: Demonstration of connecting the antenna and performing a channel scan on a portable TV.

Video: Step-by-step guide to connecting the antenna and initiating the channel setup wizard.

5. OPERATING

5.1 Selecting Input Sources

The TV supports multiple input sources:

- **ATSC:** For digital TV channels via antenna.
- **HDMI:** Connect external devices like laptops, gaming consoles, or streaming sticks (HDMI cable not included).
- **AV In:** Connect devices using the AV cable (AV cable included).
- **USB:** Play media files from a USB drive.



Image: HDMI input screen mirroring from a smartphone to the portable TV.

Upgraded 14.2' Full HD Display

Bring you a more realistic color experience



Image: Portable TV connected via AV cable, showing a child watching content.

5.2 Media Playback via USB

The USB port (17) supports various media formats:

- **Video:** MAVI, MPG, MOV, MKV, MP4, TS, VOB, DAT
- **Audio:** MP3, WMA, M4A, AAC
- **Images:** JPG, JPEG, BMP, PNG
- **Text:** TXT



Warm Tips: 1.It is necessary to confirm whether there is TV signal coverage in the local area.
2.If the local signal is weak, please try to connect an outdoor antenna and search again.

Image: Portable TV showing supported multiple formats for media playback.

5.3 Adjusting Volume and Channels

Use the VOL+ (4) and VOL- (5) buttons on the TV or the remote control to adjust the volume. Use the CH+ (7) and CH- (8) buttons on the TV or the remote control to change channels.

6. FEATURES

6.1 High-Definition Display

The 14.2-inch widescreen LCD display offers 1080P high-definition picture quality for clear viewing.



Image: Comparison of 720P and 1080P picture quality on the portable TV.

6.2 Adjustable Stand

The TV includes a desktop stand and a headrest stand for versatile placement. The built-in table stand (11) is adjustable up to 180 degrees.

6.3 Dual Speakers and Headphone Jack

Enjoy audio through the built-in dual stereo speakers (10) or connect headphones via the headphone jack (14) for private listening.



Image: Portable TV with built-in dual speakers highlighted.

Video: Overview of the portable TV's features, including 1080P display, flexible connectivity, adjustable kickstand, dual speakers, and sleep timer function.

7. MAINTENANCE

To ensure the longevity of your Desobry Portable TV:

- Clean the screen and exterior with a soft, dry cloth. Avoid abrasive cleaners.
- Keep the device away from water and high humidity.
- Store in a cool, dry place when not in use.
- Avoid blocking ventilation openings to prevent overheating.

8. TROUBLESHOOTING

8.1 Signal Reception Issues

- Ensure the antenna is securely connected to the TV Antenna Interface (19).
- Place the antenna near a window or outdoors for better signal reception.
- Confirm the TV is set to ATSC mode for digital channels.
- If the local signal is weak, try connecting an outdoor antenna and performing a channel scan again.

8.2 Remote Control Not Responding

- Ensure the AAA batteries in the remote control are correctly inserted and not depleted.
- Point the remote control directly at the remote control reception window (2) on the TV.
- Maintain a distance of no more than 3 meters (10 feet) and within a 30-degree angle from the TV's IR sensor.

9. SPECIFICATIONS

Screen Size	14.2 inches
Display Technology	LCD
Resolution	1080p
Refresh Rate	60 Hz
Connectivity Technology	HDMI, USB, AV
Special Features	Built-In Speaker, Portable
Battery Capacity	4000mAh (Built-in)
Item Weight	3.61 pounds
Product Dimensions	2"D x 2"W x 2"H

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official Desobry website. If you encounter any problems with your portable TV, please do not hesitate to contact customer support for assistance.