

- Manuals.plus /
- > YESHOMY /
- > YESHOMY Farmhouse LED TV Stand (Model YH-TS0955-KL1) Instruction Manual

YESHOMY YH-TS0955-KL1

YESHOMY Farmhouse LED TV Stand (Model YH-TS0955-KL1) Instruction Manual

Your guide to assembly, operation, and maintenance.

1. INTRODUCTION

Thank you for choosing the YESHOMY Farmhouse LED TV Stand, Model YH-TS0955-KL1. This entertainment center is designed to accommodate televisions up to 65 inches and features a robust wooden construction, integrated power outlets, and dynamic LED lighting. This manual provides essential information for safe assembly, proper operation, and effective maintenance of your new TV stand.



Image 1.1: The YESHOMY Farmhouse LED TV Stand, Model YH-TS0955-KL1, featuring its rustic brown finish, glass-paned doors, and illuminated interior shelves.

2. SAFETY INFORMATION

Please read and adhere to the following safety guidelines to prevent injury or damage to the product:

- Do not exceed the load limit of 200 lbs on the top surface.
- Follow assembly instructions carefully to ensure proper mounting and stability.
- Be cautious of pinch points during assembly and when operating doors.
- Handle glass components with care to avoid breakage or injury.
- Ensure all electrical connections for the power outlet and LED lighting are secure and conform to local electrical codes.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed in the included assembly manual are present and undamaged. If any

parts are missing or damaged, please contact customer support.

4. ASSEMBLY INSTRUCTIONS

This TV stand requires assembly. A detailed assembly instruction manual is included in the product packaging. Please follow the step-by-step diagrams and instructions carefully. It is recommended to have a second person assist with assembly due to the size and weight of some components.

- Lay out all parts and hardware on a soft, clean surface to prevent scratches.
- Use hand tools for assembly; power tools may overtighten screws and damage the wood.
- Ensure all connections are secure before placing any items on the stand.



Image 4.1: Front view of the assembled TV stand, showing the central glass doors and side compartments.

5. SETUP

5.1 Placement

Position the TV stand on a flat, stable surface. Ensure there is adequate space around the stand for ventilation and access to power outlets. The reinforced thickened structure and extra wooden support base provide superior stability, reliably holding up to 200 lbs, making it suitable for large 55"+ TVs.



Image 5.1: Detail of the reinforced thickened desktop and sturdy base, designed for enhanced stability.

5.2 Power Connection

Connect the power cord from the built-in charging hub to a standard wall outlet. The charging hub includes an 18W USB port and a 20W Type-C port for high-speed charging of your devices.

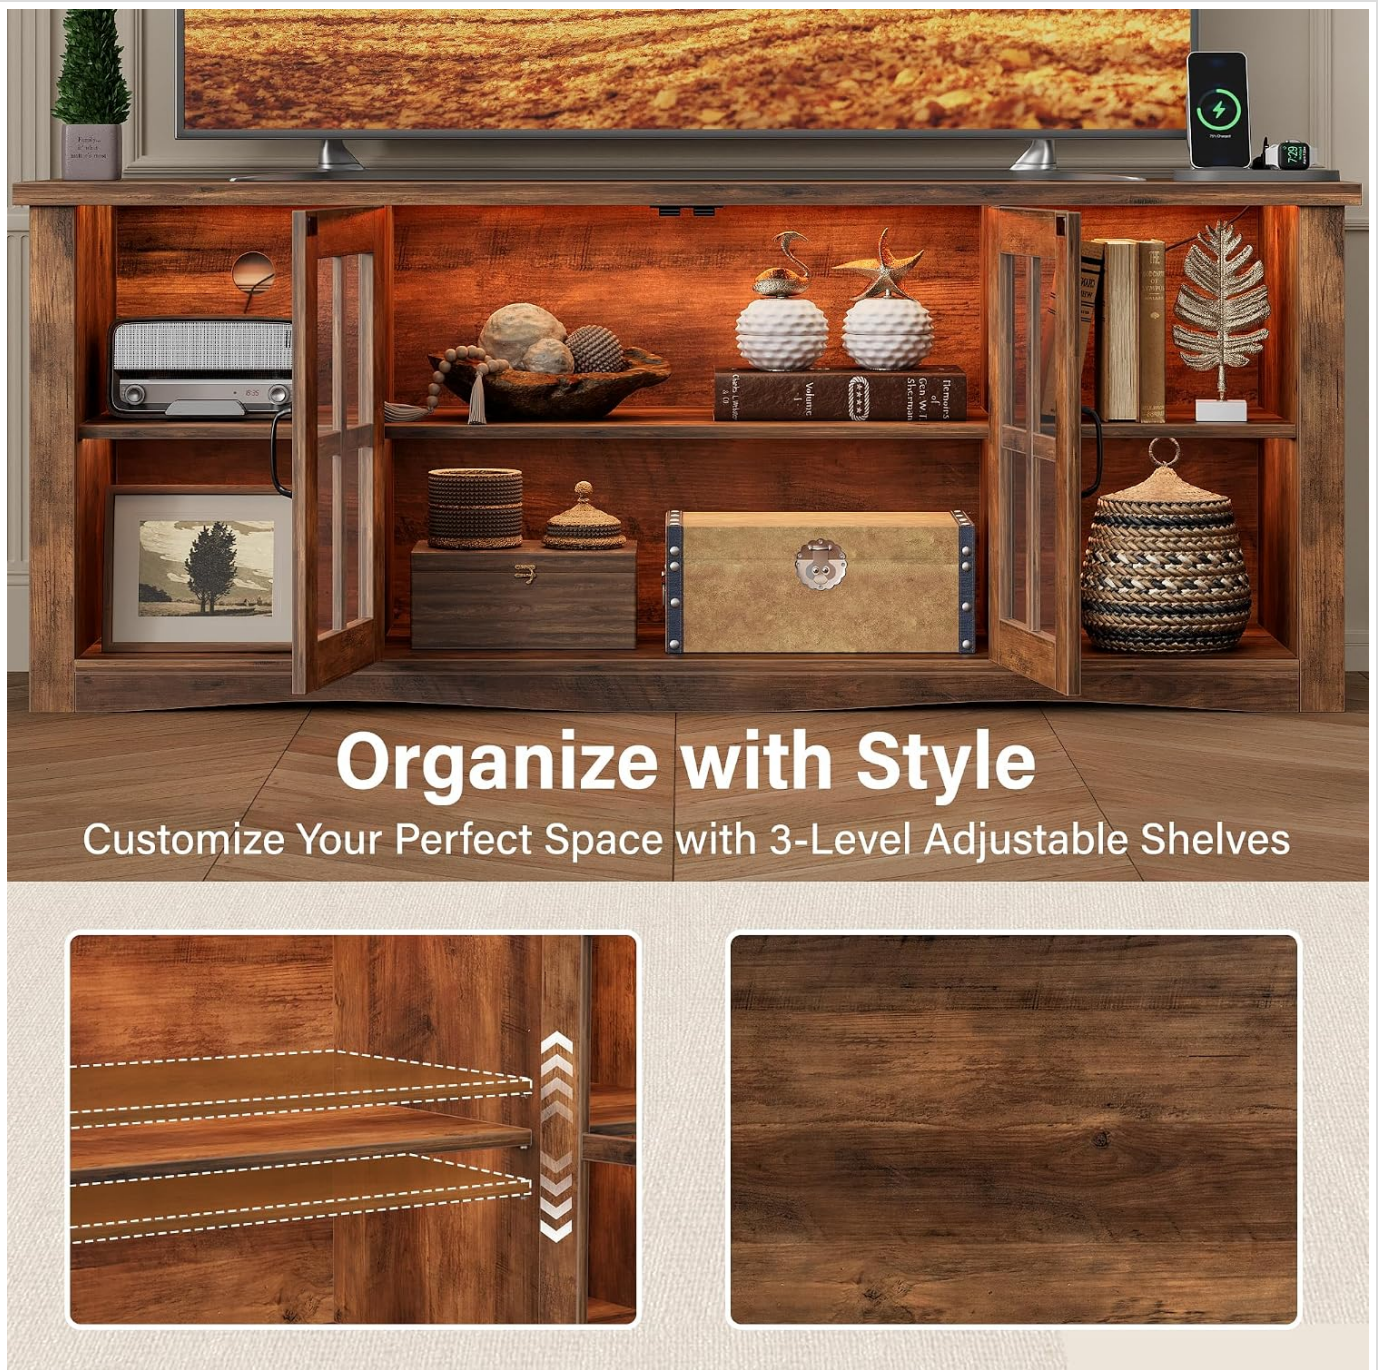


Image 5.2: The integrated charging station, providing convenient power access for various devices.

5.3 Cable Management

Utilize the dedicated cable management cutouts located on the back panel of the stand to route and conceal power cords and wires from your television and media devices. This helps maintain a clean and organized entertainment area.

Product Dimensions

58" L x 16" W x 24" H



Image 5.3: Cable management cutouts on the back of the unit for an organized setup.

6. OPERATING INSTRUCTIONS

6.1 LED Lighting Control

The TV stand features smart rhythm LED light strips. These can be controlled via a smartphone application or the included remote control. The LED lights can sync to the rhythm of your music, creating an immersive audio-visual atmosphere.



Image 6.1: Components for controlling the LED lighting, including the strip, controller, and app interface.

Video 6.1: Demonstration of the YESHOMY LED TV Stand's features, including adjustable shelves, glass doors, and LED lighting effects. This video illustrates the product's design and functionality.

6.2 Adjustable Storage

The side cabinets feature height-adjustable shelves. To adjust, simply remove the metal pins supporting the shelf, reposition the shelf to the desired height, and reinsert the pins into the corresponding holes. This allows for customized storage of media accessories and components.



Image 6.2: Illustration of the adjustable shelving system, allowing for flexible storage configurations.

7. MAINTENANCE

7.1 Cleaning

To clean the TV stand, wipe surfaces with a dry cloth. For more stubborn marks, a damp cloth can be used, followed immediately by a dry cloth to prevent moisture damage. Avoid abrasive cleaners or harsh chemicals that may damage the wood finish or glass.

7.2 General Care

- Periodically check all screws and fasteners to ensure they remain tight.
- Avoid exposing the stand to direct sunlight or extreme temperature changes to prevent warping or fading.
- Do not place hot items directly on the surface without protective padding.

8. TROUBLESHOOTING

8.1 LED Lights Not Working

- **Check Power Connection:** Ensure the LED light strip is securely connected to its power source and the power source is plugged into a functional outlet.
- **Remote/App Battery:** If using a remote, check its battery. If using the app, ensure your device is properly paired via Bluetooth.
- **Controller Functionality:** Verify the LED controller is not damaged.

8.2 Power Outlets Not Functioning

- **Check Main Power:** Ensure the TV stand's main power cord is securely plugged into a live wall outlet.
- **Circuit Breaker:** Check your home's circuit breaker to ensure it hasn't tripped.
- **Device Compatibility:** Ensure the device you are trying to charge is compatible with the USB/Type-C port specifications (18W USB, 20W Type-C).

8.3 Stand Instability

- **Level Surface:** Ensure the stand is placed on a completely level surface.
- **Tighten Fasteners:** Re-check and tighten all assembly screws and bolts.
- **Weight Distribution:** Ensure weight is evenly distributed and not exceeding the 200 lbs limit.

9. SPECIFICATIONS

Feature	Detail
Brand	YESHOMY
Model Number	YH-TS0955-KL1
Material	Wood
Color	Brown
Product Dimensions (L x W x H)	58 x 16 x 24 inches
Item Weight	73.6 pounds
Max TV Size Supported	Up to 65 inches
Weight Capacity (Top Surface)	200 lbs
Power Outlet	2 AC Outlets (125V/12A)
USB Port	1 x 18W USB Port (5V/3A, 9V/2A)
Type-C Port	1 x 20W Type-C Port (5V/3A, 9V/2.22A)
Special Features	Glass Barn Doors, Smart Rhythm LED Lighting, Adjustable Shelves, Cable Management
Product Care Instructions	Wipe With Dry, Wipe with Damp Cloth



Image 9.1: Front view of the assembled TV stand, showing the central glass doors and side compartments.

10. WARRANTY INFORMATION

For detailed warranty information, please refer to the warranty card included with your product or contact YESHOMY customer support. Keep your proof of purchase for any warranty claims.

11. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your YESHOMY Farmhouse LED TV Stand, please contact our customer support team. Refer to the contact information provided in your product packaging or visit the official YESHOMY website for support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FYDW83KQ>

More documents and user manuals: <https://manuals.plus/>