

OGHom GH02

OGHom GH02 Travel Steamer & Iron 2-in-1 User Manual

INTRODUCTION

Welcome to the OGHom GH02 Travel Steamer & Iron 2-in-1. This manual provides essential information for the safe and effective use of your appliance. Please read it thoroughly before operation and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

General Safety

- This steamer supports 110–240V AC, 50Hz/60Hz, with a rated power of 1000W, making it suitable for use in most countries and regions.
- For safe use while traveling or staying in hotels, ensure the power outlet or travel adapter is rated above 1000W and fits securely.
- Avoid using loose, damaged, or low-power adapters or outlets, as they may cause poor contact, overheating, smoke, or damage to the product.
- Always unplug the appliance when filling or emptying the water tank, and when not in use.
- Do not immerse the steamer in water or other liquids.
- Keep out of reach of children.
- Do not touch the hot soleplate or steam head during operation or immediately after use.
- Use only distilled water to prevent mineral buildup and ensure optimal performance.

PRODUCT OVERVIEW

Components

- **Steam Head/Soleplate:** A rotatable head designed for both steaming and dry ironing.
- **Water Tank:** A 120ml capacity tank with a one-button pop-out design for easy removal and refilling.

- **Control Buttons:** Buttons for power on/off and selecting between Dry, Low Steam, and High Steam modes.
- **Power Cord:** Integrated power cord for electrical connection.
- **Silicone Pad:** A heat-resistant pad for safely resting the hot appliance during use.



The OGHom GH02 Travel Steamer and Iron 2-in-1, showcasing its compact design.



Key features of the OGHom Steamer, highlighting its global voltage compatibility, leak-proof design, and dual steam/iron

SETUP

Filling the Water Tank

1. Ensure the steamer is unplugged from the power outlet before handling.
2. Press the button located at the bottom of the handle to release the 120ml water tank.
3. Remove the tank and fill it with distilled water. Do not exceed the maximum fill line to prevent leakage.
4. Reinsert the water tank firmly into the steamer until you hear a click, ensuring it is securely in place.



Illustration of the one-button pop-out water tank, demonstrating easy removal and refilling.



A visual guide showing the steps to fill the water tank and prepare the steamer for use.

OPERATING INSTRUCTIONS

Powering On and Heating Up

1. Plug the steamer into a suitable 110-240V AC, 50Hz/60Hz power outlet.
2. Switch the steamer to the "ON" position. The indicator light will begin to cycle, indicating it is heating.
3. Allow approximately 30 seconds for the steamer to heat up. The indicator light will stabilize when the appliance is ready for use.

Selecting a Mode

The steamer offers three professional modes to suit various fabric types:

- **Dry Mode:** For traditional dry ironing without steam.
- **Low Steam Mode:** Ideal for delicate fabrics such as silk, chiffon, and synthetics.
- **High Steam Mode:** Suitable for heavier and more resilient fabrics like cotton, linen, and denim.

Press the mode button to cycle through Dry, Low Steam, and High Steam settings until your desired mode is selected.

PERFECTLY SUITABLE FOR ALL FABRICS

3 Adjustable Smart Mode for Dry or Steam



The steamer displaying its three operational modes: Dry, Low Steam, and High Steam, for versatile fabric care.

Steaming Garments

1. Hang the garment on a hanger to allow for easy access to all areas.
2. Hold the steamer upright, ensuring the steam head is facing away from your body and hands.
3. Gently glide the steam head over the fabric, moving in a downward motion from top to bottom.
4. For more stubborn wrinkles, use your free hand to slightly stretch the fabric taut while steaming.

YOUR GLOBAL TRAVEL PARTNER

Universal Input Voltage 110-240V travel-ready everywhere



The steamer effectively removing wrinkles from different fabric types, demonstrating its versatility.

Dry Ironing

1. Ensure the steamer is set to Dry Mode.
2. Place the garment on a flat, heat-resistant surface, such as an ironing board or the provided silicone pad.
3. Press the soleplate firmly against the fabric and move it back and forth, similar to using a traditional iron.



A user demonstrating flat ironing with the handheld steamer on a garment laid on a flat surface.



A person using the portable steamer to refresh a suit jacket while it hangs, ideal for travel.

MAINTENANCE

Cleaning the Steamer

- 1. Always unplug the steamer from the power outlet and allow it to cool completely before cleaning.
- 2. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- 3. To prevent mineral buildup, regularly empty any remaining water from the tank after each use.
- 4. If mineral deposits accumulate on the soleplate, gently wipe it with a cloth dampened with a mild vinegar solution, then wipe with a clean, damp cloth to remove any residue.

Storage

Store the steamer in a cool, dry place, away from direct sunlight and moisture. Ensure the water tank is completely empty before storing the appliance for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No steam or weak steam	Low water level in the tank	Refill the water tank with distilled water.
No steam or weak steam	Steamer not heated sufficiently	Allow approximately 30 seconds for the steamer to heat up after plugging in and turning on.
Water leakage	Water tank not properly seated	Ensure the water tank is securely inserted until it clicks into place.
Water leakage	Overfilling the water tank	Do not fill the water tank beyond the maximum fill line.
Appliance not turning on	Not plugged in or power outlet issue	Ensure the steamer is securely plugged into a functional power outlet. Check the power switch.

SPECIFICATIONS

- **Model Number:** GH02
- **Rated Power:** 1000W
- **Voltage:** 110-240V AC
- **Frequency:** 50Hz/60Hz
- **Water Tank Capacity:** 120ml
- **Heat-Up Time:** Approximately 30 seconds
- **Product Dimensions:** 3.54"L x 3.86"W x 8.86"H
- **Item Weight:** 0.8 Kilograms (1.76 lbs)
- **Included Components:** Steamer, Silicone Pad, User Manual

ONE-BUTTON POP-OUT TANK

Easy to remove
and add water in seconds



The compact and lightweight design of the steamer, illustrating its dimensions for portability.

COMPACT & LIGHTWEIGHT

Space-saving & Durable on Global Adventures

Weight: 1.49lb/0.68kg



A visual representation of the steamer's global voltage compatibility (110-240V), making it suitable for international travel.

WARRANTY AND SUPPORT

For detailed warranty information or technical support, please refer to the contact details provided in the original product packaging or visit the official OGHom website. It is recommended to keep your purchase receipt as proof of purchase for any warranty claims.