Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Jdance /
- > Idance JugaToys Electronic Drum Kit Model 377-100SN User Manual

Idance 377-100SN

Idance JugaToys Electronic Drum Kit Model 377-100SN User Manual

This manual provides detailed instructions for the assembly, operation, and maintenance of your Idance JugaToys Electronic Drum Kit, Model 377-100SN.

1. Introduction

Thank you for choosing the Idance JugaToys Electronic Drum Kit. This instrument is designed to provide an engaging and educational musical experience for users. To ensure safe and optimal performance, please read this manual thoroughly before use and retain it for future reference.

Safety Information: Always supervise young children during use. Keep the device away from water and extreme temperatures. Use only the provided or recommended charging accessories.

2. PACKAGE CONTENTS

Please verify that all the following items are included in your package:

- Electronic Drum Kit (Bass Drum, Toms, Sound Module with Speaker)
- Foot Pedal
- Stool
- · Wireless Drumsticks
- Headphones
- USB-C Charging Cable



Image 2.1: All components included in the Idance JugaToys Electronic Drum Kit package. This includes the main drum unit, stool, headphones, drumsticks, and a remote control (not explicitly listed but visible in image).

3. SETUP INSTRUCTIONS

Follow these steps to assemble your electronic drum kit:

- 1. **Unpack Components:** Carefully remove all items from the packaging and place them on a flat, stable surface.
- 2. **Assemble Drum Unit:** Connect the toms and sound module to the bass drum unit as indicated by the design. Ensure all connections are secure.
- 3. Attach Foot Pedal: Connect the foot pedal to its designated port on the drum unit.
- 4. **Assemble Stool:** Follow the instructions provided with the stool to assemble it securely.
- 5. **Positioning:** Place the assembled drum kit on a stable surface and position the stool comfortably in front of it.



Image 3.1: The Idance JugaToys Electronic Drum Kit fully assembled and ready for use, showing the bass drum, toms, sound module, and stool.

4. OPERATING INSTRUCTIONS

4.1. Powering On/Off

Locate the power button on the sound module. Press and hold it for a few seconds to turn the drum kit on or off. A light indicator will confirm the power status.

4.2. Basic Drumming

Use the wireless drumsticks to strike the drum pads (toms and bass drum) and the foot pedal to activate the bass drum sound. Experiment with different striking techniques to produce varied sounds.

4.3. Sound Module Controls

The sound module provides access to various features:

- Volume Control: Use the '+' and '-' buttons to adjust the overall volume.
- Rhythm Selection: The drum kit offers 12 automatic rhythms. Use the 'PLAY' and 'VARIATION' buttons to browse and select different rhythm patterns.
- Sound Selection: Access 48 different drum sounds and effects. Buttons labeled 'A', 'B', 'C', 'D' may

correspond to categories like Rock, Electro, Congas, and Effects, allowing you to change the sound set.



Image 4.1: Detailed view of the sound module control panel, showing buttons for play, variation, volume adjustment, and sound category selection (A, B, C, D).



Image 4.2: The electronic drum kit in an active setting, visually representing the availability of 12 rhythms and 48 distinct sounds for musical exploration.

4.4. Quiet Mode with Headphones

For private practice or to avoid disturbing others, connect the included headphones to the designated headphone jack on the sound module. This will mute the built-in speaker, allowing sound to be heard only through the headphones.



Image 4.3: A child using the electronic drum kit with headphones, demonstrating the quiet mode feature for undisturbed practice.

4.5. Charging the Battery

The drum kit features a built-in rechargeable battery. Connect the provided USB-C charging cable to the charging port on the sound module and plug the other end into a compatible USB power adapter (not included). A full charge provides up to 8 hours of continuous play. The charging indicator light will show the charging status.

5. MAINTENANCE

- **Cleaning:** Wipe the drum kit surfaces with a soft, slightly damp cloth. Do not use abrasive cleaners or solvents. Ensure the device is powered off and unplugged before cleaning.
- **Storage:** When not in use, store the drum kit in a dry, cool place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the battery regularly, even if the kit is not used for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from speakers	Volume too low; Headphones connected; Power off	Increase volume; Disconnect headphones; Power on device
Drum pads not responding	Loose connections; Low battery	Check all physical connections; Recharge battery
Short battery life	Battery not fully charged; Old battery	Ensure full charge before use; Contact support if battery performance significantly degrades
Distorted sound	Volume too high; Interference	Reduce volume; Move away from other electronic devices

7. Specifications

• Model Number: 377-100SN

• **Dimensions (L x W x H):** 50 x 39 x 29 cm (19.7 x 15.4 x 11.4 inches)

• Item Weight: 2 kg (4.4 lbs)

• Material Type: Plastic

• Battery: USB-C Rechargeable, up to 8 hours runtime

Sounds: 48 different soundsRhythms: 12 automatic rhythms

• Included Components: Electronic Drum Kit (Bass drum, Toms, Sound Module), Foot Pedal, Stool, Wireless Drumsticks, Headphones, USB-C Charging Cable

8. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact your retailer or the manufacturer's customer service department.

Manufacturer: IDance

Related Documents - 377-100SN



iDance BC100 Bluetooth Karaoke System Instruction Manual

Comprehensive instruction manual for the iDance BC100 Bluetooth Karaoke System with Built-in Light Show, covering setup, operation, features, and troubleshooting.

