

Midea MET26C4AST

Midea Flexify Pro 10+4 Toaster Oven Air Fryer Combo

Model: MET26C4AST | Brand: Midea

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Midea customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure adequate ventilation around the appliance during operation. Maintain a minimum distance of 6 inches (15 cm) from walls and other appliances.
- The appliance generates heat during use. Do not block any ventilation openings.
- This appliance is for household use only.

2. PRODUCT OVERVIEW

The Midea Flexify Pro 10+4 Toaster Oven Air Fryer Combo is designed for versatile cooking with advanced

features. It combines the functions of a toaster oven and an air fryer, offering a wide range of cooking options.

Key Features:

- **Graphene Rapid Heat Technology:** Achieves 350°F in 3 minutes, providing instant and even heating for consistent results across a 100–450°F range.
- **10+4 Cooking Versatility:** Includes Air Fry, Roast, Bake, Broil, Toast, Pizza, Dehydrate, Slow Cook, Reheat, and Warm functions, plus four specialty modes for diverse culinary needs.
- **Artisan Pizza Mode:** Dedicated settings for classic, thin crust, rising crust, and deep dish pizzas, ensuring precise heat control and even browning.
- **Premium Enamel Interior:** Features an XpressClean enamel chamber and baking pan that is durable, grease-resistant, and easy to clean.
- **XpressFry Air Fry Mode:** Utilizes graphene heating and a top turbo fan for golden, crispy textures with up to 90% less oil compared to traditional frying.
- **French Door Design:** Double doors open simultaneously with a single pull for convenient access.
- **Generous Capacity:** 26.4-quart capacity accommodates a 12-inch pizza, 6 slices of toast, or a 5-lb whole chicken.

Included Components:

- 1 Toaster Oven
- 1 Food Tray
- 1 Wire Rack
- 1 Air Fry Basket
- 1 Crumb Tray

Midea Flexify™ Pro Air Fryer Oven

Perfect For Every Bite



Graphene
Rapid Heat



10+4
Functional



Pizza Style



Enamel
Cavity



French
Door Design



Figure 2.1: Midea Flexify Pro Toaster Oven Air Fryer Combo with accessories.

26.4 QT Large Capacity

Family-sized capacity with flexible cooking space



Figure 2.2: Large capacity interior for family meals.

3. SETUP

Unpacking and Placement:

1. Carefully remove all packaging materials, tape, and any promotional labels from the oven.
2. Place the oven on a stable, level, heat-resistant surface. Ensure there is at least 6 inches (15 cm) of clear space on all sides and above the oven for proper ventilation.
3. Do not place the oven directly against a wall or under cabinets that may be damaged by heat.

Initial Cleaning and First Use:

1. Before first use, wipe the interior of the oven and all accessories (food tray, wire rack, air fry basket, crumb tray) with a damp cloth and mild detergent. Rinse thoroughly and dry completely.
2. Insert the crumb tray at the bottom, and place the wire rack and other accessories as desired.
3. To eliminate any manufacturing odors, operate the oven empty for approximately 30 minutes. Set the function to **Bake** at **450°F (232°C)**. A slight burning smell is normal during this initial operation. Ensure the area is well-ventilated.

4. After the initial burn-off, allow the oven to cool completely before using it for cooking.

4. OPERATING INSTRUCTIONS

The Midea Flexify Pro features an intuitive control panel for easy operation. Refer to the control panel image below for button and dial locations.



Figure 4.1: Intuitive Control Panel Design.

Control Panel Functions:

- **Digital Display:** Shows temperature, time, and selected cooking mode.
- **Rotary Dial:** Used to select cooking functions, adjust temperature, and set time. Press to confirm selection or start/pause cooking.
- **Function Buttons:** Dedicated buttons for various cooking modes (e.g., Air Fry, Toast, Bake, Broil, Roast, Pizza, Reheat, Warm, Slow Cook, Dehydrate).
- **Light On/Off:** Toggles the interior oven light.

- **Temp/Slice:** Adjusts temperature or toast slice settings.
- **Time/Darkness:** Adjusts cooking time or toast darkness level.
- **Conv. On/Off:** Activates or deactivates the convection fan.
- **Cancel/Power:** Stops current operation or turns the oven off.
- **Pizza Style:** Selects specific pizza crust options (Thin Crust, Classic, Rising Crust, Deep Dish).

General Operation Steps:

1. **Power On:** Plug the appliance into a grounded electrical outlet. The display will illuminate.
2. **Select Function:** Turn the rotary dial to cycle through the available cooking functions (e.g., Air Fry, Bake, Roast). The selected function will be highlighted on the display.
3. **Adjust Temperature/Time:** Once a function is selected, the default temperature and time will appear. Use the Temp/Slice and Time/Darkness buttons, or turn the rotary dial, to adjust these settings.
4. **Preheat (if applicable):** For functions requiring preheating, the oven will display "PREHEAT" and the target temperature. Once the target temperature is reached, the oven will beep.
5. **Start Cooking:** After setting the desired parameters and preheating (if necessary), press the rotary dial to start the cooking cycle.
6. **Pause/Stop:** Press the rotary dial again to pause cooking. Press the Cancel/Power button to stop cooking and turn off the oven.

Specific Cooking Modes:

- **Air Fry:** Ideal for crispy foods with minimal oil. Place food in the air fry basket. Use the XpressFry Air Fry Mode for optimal results.
- **Pizza:** Select the Pizza function, then use the "Pizza Style" button to choose from Thin Crust, Classic, Rising Crust, or Deep Dish options.
- **Toast:** Select the Toast function. Use the Time/Darkness button to adjust the desired toast shade.

Your browser does not support the video tag.

Video 4.1: Official Midea Flexify Pro Air Fryer Toaster Oven Combo demonstration, showcasing various cooking functions and ease of use.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your Midea Flexify Pro oven.

Daily Cleaning:

- Always unplug the oven and allow it to cool completely before cleaning.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- The XpressClean enamel interior and baking pan can be wiped clean with a damp cloth and mild detergent. For stubborn stains, a non-abrasive sponge can be used.
- Remove and empty the crumb tray after each use to prevent grease buildup and potential fire hazards. Wash the crumb tray with warm, soapy water.

Deep Cleaning:

- For thorough cleaning, remove all accessories (wire rack, air fry basket, food tray, crumb tray). These can be washed in warm, soapy water or placed in the dishwasher if specified by the manufacturer (refer to accessory care instructions).

- Clean the interior walls with a damp cloth and a small amount of mild, non-abrasive cleaner. Avoid spraying cleaner directly onto heating elements.
- Ensure all parts are completely dry before reassembling and storing the oven.

Easy-to-Clean Enamel Cavity


XpressClean with one simple wipe



Figure 5.1: Easy-to-Clean Enamel Cavity.

Multipurpose Use


With Full Accessories

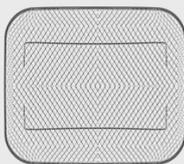

▲
Air Fry Basket



▲
Enamel Baking Pan

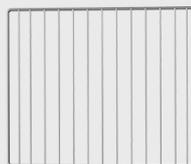

▲
Baking Rack



▲
Removable Crumb Tray

Figure 5.2: Included accessories for the Midea Flexify Pro.

6. TROUBLESHOOTING

If you encounter issues with your Midea Flexify Pro oven, refer to the common problems and solutions below. For persistent issues, contact customer support.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker.
Cooking cycle does not start after setting temperature/time.	Start button not pressed after preheat or settings adjustment.	After setting temperature and time, or after preheating, press the rotary dial (Start/Pause button) to initiate the cooking cycle.
Food is not cooking evenly.	Improper food placement; overcrowding; convection fan off.	Ensure food is spread evenly and not overcrowded. Activate the convection fan (Conv. On/Off button). Rotate food halfway through cooking if necessary.
Oven emits smoke or unusual odor during first use.	Residual manufacturing oils.	This is normal during initial use. Ensure good ventilation. If smoke persists after initial burn-off, contact support.
Sparking or tripping GFCI outlet.	Electrical short; internal component issue; improper placement.	Immediately unplug the oven. Ensure proper clearance from walls and other objects. Do not use if sparking occurs. Contact Midea customer support for inspection.
Control panel unresponsive.	Temporary electronic glitch.	Unplug the oven for 1-2 minutes, then plug it back in to reset the system.

7. SPECIFICATIONS

Feature	Detail
Brand	Midea
Model Name	Midea Flexify Air Fryer Oven
Item Model Number	MET26C4AST
Color	Stainless steel
Product Dimensions (DxWxH)	16.14"D x 16.93"W x 13.74"H
Capacity	26.4 Quarts (25L)

Feature	Detail
Item Weight	21.4 pounds
Power Source	Electric
Temperature Range	100-450 Degrees Fahrenheit
Control Type	Button Control
Special Features	LED Display, Programmable, Stain Resistant, Temperature Control, Timer
UPC	840296519240

8. WARRANTY AND SUPPORT

Midea products are designed for reliability and performance. For warranty information and customer support, please refer to the official Midea website or contact their customer service directly.

Customer Support:

- For assistance, visit the official Midea website for contact details, including phone numbers and online support options.
- When contacting support, please have your product model number (MET26C4AST) and purchase information ready.
- Many users have found telephone support to be highly effective for resolving operational questions and registering their products.