

Qaba 330-206V00VT

Qaba Baby Rocking Dragon Toy Instruction Manual

Model: 330-206V00VT

INTRODUCTION

Thank you for choosing the Qaba Baby Rocking Dragon Toy. This manual provides essential information for the safe assembly, operation, and maintenance of your new rocking toy. Please read all instructions carefully before use and retain this manual for future reference.

Important: Adult supervision is recommended at all times when the toy is in use.

SAFETY INFORMATION

- This product is designed for children aged 18-36 months.
- Maximum weight capacity: 55 lbs (25 kg).
- Always ensure the child is securely fastened with the three-point safety belt.
- Place the rocking toy on a flat, stable surface away from stairs, furniture, or other hazards.
- Regularly inspect the toy for any loose parts, damage, or wear. Discontinue use if any damage is found.
- Keep small parts away from children during assembly to prevent choking hazards.
- Do not allow children to stand on the rocking base.
- This toy is for indoor use only.

SECURE DESIGN

Safe to play and not easy to tip over



Pedals



Safety Belt



Wide Base



Image: Details of the secure design, including foot pedals, a wide wooden base for stability, and a three-point safety belt for child security.

WHAT'S IN THE BOX

Please check that all components are present before beginning assembly:

- 1 x Kids Rocking Horse (Dragon Plush Body)
- 1 x Rocking Base (Wooden)
- 1 x Manual (This document)
- Required assembly hardware (screws, tools if included)



Image: The Qaba rocking dragon toy packaging box, indicating one package.

SETUP AND ASSEMBLY

Follow these steps to assemble your Qaba Baby Rocking Dragon Toy. It is recommended to have two adults for easier assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, soft surface to prevent scratches.
2. **Attach Rocking Base:** Align the plush dragon body with the wooden rocking base. Ensure the pre-drilled holes on the dragon body match the holes on the rocking base.
3. **Secure with Screws:** Insert the provided screws through the aligned holes and tighten them securely. **Important:** Do not overtighten. If screws do not align easily, gently adjust the position of the plush body on the base. Do not force screws, as this may damage the product.
4. **Check Stability:** Once assembled, gently rock the toy to ensure it is stable and all connections are secure.
5. **Install Batteries for Sound (if applicable):** Locate the battery compartment (usually on the side or under the head/neck area, indicated by a "Press Here" button). Insert the required batteries (not included, typically AA or AAA) according to polarity markings. Close the compartment securely.



Image: Close-up view of the "Press Here" button, indicating the location for activating the dragon sound feature.

OPERATING INSTRUCTIONS

1. **Placement:** Place the rocking dragon on a flat, level surface.
2. **Child Placement:** Carefully place the child into the seat. Ensure they are seated comfortably and centrally.
3. **Fasten Safety Belt:** Securely fasten the three-point safety belt around the child. Adjust straps for a snug fit.
4. **Rocking Motion:** Encourage the child to gently rock the toy back and forth using their legs or by holding the handles/pedals.
5. **Activate Sound:** Press the "Press Here" button (typically located on the neck or side of the dragon) to activate the realistic dragon roar sound.



Image: A young child seated on the purple rocking dragon, demonstrating proper use with adult supervision.

ROCKING DRAGON

Realistic Dragon Roar for Interactive Fun

- ◆ Enhances balance
- ◆ Coordination
- ◆ Motor skills



Image: The rocking dragon toy in a rocking motion, highlighting its ability to enhance balance and motor skills.

MAINTENANCE

- **Cleaning:** Wipe the plush surface with a damp cloth and mild soap. Do not immerse in water. Allow to air dry completely.
- **Inspection:** Periodically check all screws and fasteners to ensure they are tight. Re-tighten if necessary.
- **Storage:** Store the toy in a clean, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery Replacement:** If the sound feature becomes weak or stops working, replace the batteries. Dispose of old batteries responsibly.

COMFORTABLE TOUCH



Image: A child hugging the rocking dragon, showcasing its soft plush fabric and resilient PP cotton filling for comfort.

TROUBLESHOOTING

- **Issue: Screws do not align during assembly.**
Solution: Ensure the plush body is correctly positioned on the wooden base. Sometimes, slight adjustments are needed to align the pre-drilled holes. Do not force screws; if alignment is consistently difficult, contact customer support.
- **Issue: Dragon sound is not working.**
Solution: Check if batteries are installed correctly and are not depleted. Replace with new batteries if necessary. Ensure the "Press Here" button is being pressed firmly.
- **Issue: Toy feels unstable.**
Solution: Verify that all assembly screws are securely tightened. Ensure the toy is placed on a completely flat and stable surface. Always supervise the child during use.

SPECIFICATIONS

Brand	Qaba
-------	------

Model Number	330-206V00VT
Recommended Age	18-36 months
Maximum Load Capacity	55 lbs (25 kg)
Material	Alloy Steel, Polyester, Wood
Item Dimensions (L x W x H)	28.7" x 15.4" x 26" (73 x 39 x 66 cm)
Item Weight	6 lbs (2.7 kg)
UPC	196393096628



Image: A diagram illustrating the length, width, and height measurements of the Qaba rocking dragon toy.

WARRANTY

No specific warranty information is provided in the product data. Please refer to your purchase receipt or contact the retailer for details regarding warranty coverage.

SUPPORT

For further assistance or inquiries, please contact the manufacturer, Aosom LLC, or your retailer. Contact information for direct support is not provided in the product data.

You can visit the [Qaba Store on Amazon](#) for more information about Qaba products.
