

[Manuals.plus](#) /

› [Endark](#) /

› Endark Propane Gas Grill 3-Burner Instruction Manual GH-GA5003

Endark GH-GA5003

Endark Propane Gas Grill 3-Burner Instruction Manual

Model: GH-GA5003 | Brand: Endark

INTRODUCTION

Thank you for choosing the Endark Propane Gas Grill 3-Burner. This manual provides essential information for the safe assembly, operation, and maintenance of your new grill. Please read all instructions carefully before use and retain this manual for future reference.



Figure 1: Endark 3-Burner Propane Gas Grill

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using this appliance to reduce the risk of fire, explosion, or injury.

- For outdoor use only. Do not operate indoors.
- Read all instructions before assembling and operating the grill.

- Keep children and pets away from the grill at all times.
- Never leave the grill unattended when in use.
- Ensure the grill is placed on a level, stable surface.
- Keep the area around the grill clear and free from combustible materials.
- Do not store a spare LP cylinder under or near the grill.
- Always check for gas leaks before each use.
- Wear protective gloves when handling hot components.

SETUP AND ASSEMBLY

Assembly of the Endark Propane Gas Grill is straightforward and typically takes about 30 minutes. Follow the steps below carefully.

Assembly Video Guide

Your browser does not support the video tag.

Video 1: Endark Propane Gas Grill Assembly Guide. This video demonstrates the step-by-step process of assembling the grill components.

Step-by-Step Assembly Instructions

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify all components are present against the parts list in your user manual.



Figure 2: All components laid out for assembly.

2. **Assemble the Base Frame:** Connect the frame pieces (labeled 13, 10, 20, 21) using the provided connectors and screws. Ensure all connections are secure.



Figure 3: Assembling the base frame.

3. **Attach Bottom Trays:** Secure the bottom trays to the assembled frame using the designated screws.



Figure 4: Securing a bottom tray.

4. **Install Wheels:** Attach the wheel axle and wheels to the base frame. Secure them with the provided pins.



Figure 5: Attaching the wheels.

5. **Mount Grill Head:** Carefully place the main grill head onto the assembled base frame. Secure it using the appropriate screws.



Figure 6: Securing the grill head.

6. **Attach Side Shelves:** Install the side shelves to the main grill body. These provide additional workspace.



Figure 7: Installing a side shelf.

7. **Install Grease Tray:** Slide the grease collection tray into its designated slot beneath the burners.



Figure 8: Inserting the grease tray.

8. **Place Heat Tents and Cooking Grates:** Position the heat tents over the burners, then place the cooking grates on top.



Figure 9: Installing heat tents and cooking grates.

9. **Connect LP Tank:** Connect your propane tank to the grill's regulator and hose. Ensure a tight seal and check for leaks before use.



Figure 10: Propane tank storage area.

OPERATING INSTRUCTIONS

Pre-Operation Checklist

- Ensure all connections are secure and there are no gas leaks.
- Check that the grease tray is clean and properly installed.
- Confirm the grill is on a stable, non-combustible surface.

- Open the grill lid before lighting.

Lighting the Grill

1. Open the grill lid.
2. Turn the gas supply ON at the LP cylinder.
3. Push and turn one burner control knob to the HIGH position. You should hear a clicking sound indicating ignition.
4. Verify the burner has lit by looking through the cooking grates.
5. If the burner does not light within 5 seconds, turn the knob to OFF, wait 5 minutes, and repeat the lighting procedure.
6. Once the first burner is lit, you can light the remaining burners by turning their control knobs to HIGH.

Temperature Control

The Endark grill features a built-in thermometer on the lid for accurate temperature monitoring. Each burner can be adjusted independently to achieve desired cooking temperatures, from low-temperature slow roasting to high-temperature searing.

- Use the control knobs to adjust the flame height for each burner.
- The integrated thermometer helps maintain consistent cooking temperatures without frequently opening the lid.



Figure 11: Control panel and lid thermometer for precise temperature management.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your grill.

Cleaning the Grill

- **Cooking Grates:** After each use, once the grill has cooled, brush off food residue from the cooking grates with a grill brush. For deeper cleaning, remove the grates and wash with warm, soapy water.
- **Grease Tray:** The removable grease collection tray should be emptied and cleaned regularly to prevent grease fires.



Figure 12: Removable grease tray for convenient cleaning.

- **Exterior Surfaces:** Wipe down stainless steel and painted surfaces with a damp cloth and mild detergent. Avoid abrasive cleaners.
- **Burners:** Periodically inspect burner ports for blockages (e.g., spider webs, food debris). Clean with a wire brush or pipe cleaner if necessary.

Storage

- When not in use, store the grill in a dry, protected area.
- Disconnect the LP cylinder and store it outdoors in a well-ventilated area, away from direct sunlight and heat sources.
- Consider using a grill cover to protect against weather elements.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Burner fails to light	No gas flow, clogged burner port, faulty igniter.	Check LP tank valve, ensure gas line is connected, clean burner ports, check igniter electrode.
Low flame or uneven heat	Low gas in tank, regulator bypass activated, clogged burner.	Replace LP tank, reset regulator by turning off all gas and slowly opening tank valve, clean burners.
Flare-ups	Excess grease buildup, high heat, fatty foods.	Clean grease tray and cooking grates, reduce heat, trim excess fat from food.

SPECIFICATIONS

Feature	Detail
Brand	Endark
Model Name	GH-GA5003
Product Dimensions	13.3"D x 40.9"W x 39.9"H
Fuel Type	Gas (Propane)

Feature	Detail
Main Burner Count	3
Total BTU	26,000 BTU
Cooking Surface Area	250 Square Inches
Material	Stainless Steel (control panel, handle), Lacquered (finish)
Item Weight	33 Pounds
Special Features	Built-in Thermometer, Side Shelf, Wheels, Porcelain-Enameled Cooking Grates
Assembly Required	Yes
Indoor/Outdoor Usage	Outdoor



Figure 13: Grill dimensions.

WARRANTY AND SUPPORT

This Endark Propane Gas Grill (Model GH-GA5003) comes with a **2-year warranty** from the date of purchase, covering manufacturing defects.

For warranty claims, technical support, or any questions regarding your grill, please contact Endark customer service. Refer to your purchase documentation for specific contact details.

© 2025 Endark. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question