

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [T4TREAM](#) /

› T4TREAM Farmhouse Fireplace TV Stand (Model: B0FYP1JSQN) User Manual

T4TREAM B0FYP1JSQN

T4TREAM Farmhouse Fireplace TV Stand (Model: B0FYP1JSQN) User Manual

Comprehensive instructions for assembly, operation, and maintenance.

INTRODUCTION

This manual provides instructions for the safe assembly, operation, and maintenance of your T4TREAM Farmhouse Fireplace TV Stand. Please read all instructions carefully before use and retain this manual for future reference.



Image: The T4TREAM Farmhouse Fireplace TV Stand, featuring a dark rustic oak finish, an electric fireplace insert, and sliding barn doors, positioned in a living room with a television mounted above it.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using this appliance.
- Do not operate any fireplace with a damaged cord or plug, or if the heater malfunctions.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings.
- To prevent a possible fire, do not block air intakes or exhaust in any manner.
- Always unplug the fireplace when not in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SETUP AND ASSEMBLY

The T4TREAM Farmhouse Fireplace TV Stand and its electric fireplace unit are shipped in two separate packages. Verify all components are present against the parts list before beginning assembly. Detailed assembly instructions are included with the product.


Package Contents:

- TV Stand components (wood panels, hardware)
- Electric Fireplace insert
- Remote control for fireplace
- Assembly instructions manual

Assembly Steps:

1. Unpack all components and verify against the parts list provided in the separate assembly instructions.
2. Assemble the main TV stand frame according to the detailed diagrams.
3. Install the sliding arched doors onto their tracks.
4. Carefully insert the electric fireplace unit into the designated opening in the TV stand.
5. Connect the fireplace power cord to a standard electrical outlet.
6. Ensure all connections are secure and the stand is stable before placing a television or other items on it.

Product Size

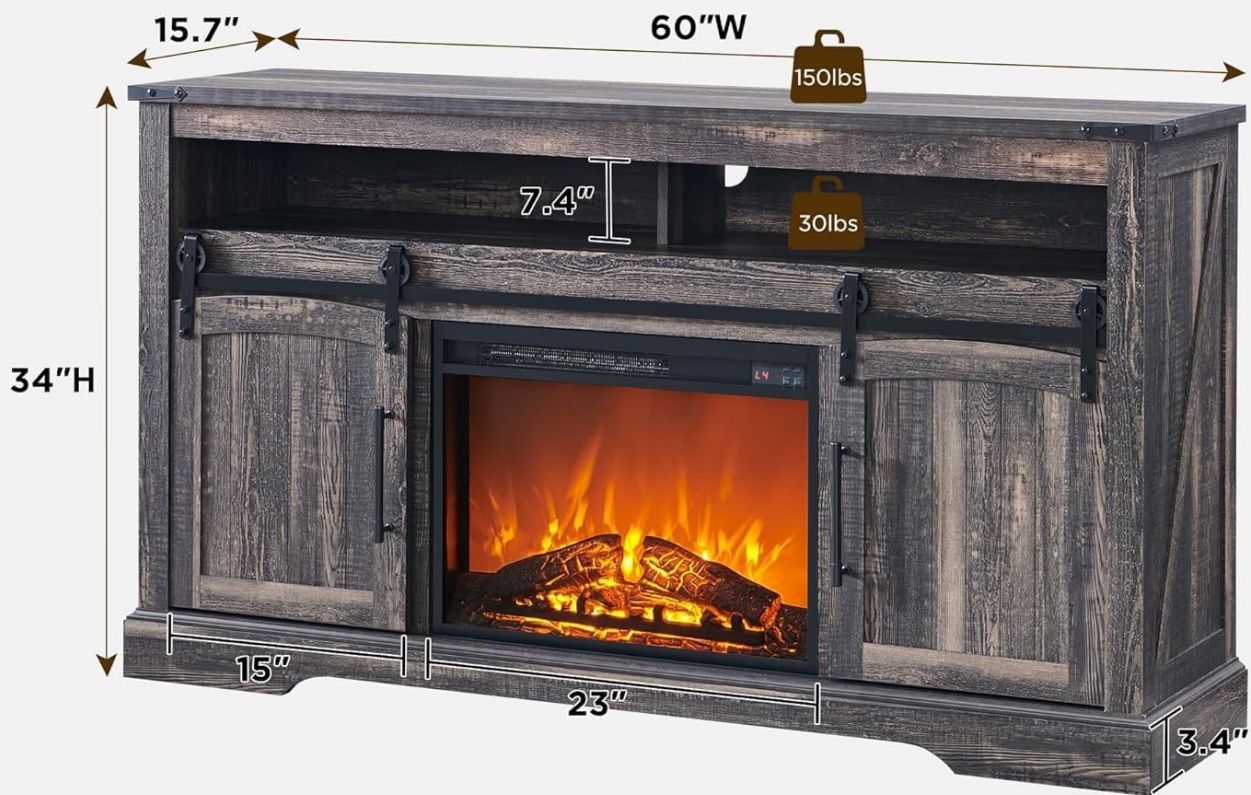

- ☐ Antique White
- ☒ Dark Rustic Oak
- ☐ Light Rustic Oak
- ☐ Reclaimed Barnwood



**TV stand and electric fireplace will be shipped
in 2 separate packages**
Heater can be turn Flame Effect on without heat

Image: Diagram illustrating the dimensions of the TV stand: 60 inches wide, 34 inches high, and 15.7 inches deep. It also shows the 23-inch fireplace opening and internal shelf dimensions.

OPERATING INSTRUCTIONS

Electric Fireplace Operation:

The 23-inch electric fireplace features independent flame and heating controls. It is designed to warm spaces up to 400 sq.ft. and operates quietly, typically under 45 dB.

- **Power On/Off:** Use the power button on the control panel or remote.
- **Flame Effect:** The 3D flame effect can be activated independently of the heating function. Brightness levels are adjustable.
- **Heating Control:**
 - **Temperature Adjustment:** Set the desired temperature between 62°F and 82°F (17°C - 28°C).
 - **Wattage:** The heater operates at 1500W.
- **Timer Function:** A timer allows for automatic shut-off.

- **Remote Control:** A remote control is included for convenient adjustment of all functions. Ensure batteries are correctly installed.



23 Inch Fireplace with Remote Control

1500W, Heat Up in Just 3s! Heating for up up 400 Square Feet

-  3D Flame Effect
-  Temperature Range: L1-14
-  Overheat Protection
-  Safety Certified

Remote control sold separately

Image: A detailed view of the 23-inch electric fireplace insert, highlighting the realistic 3D flame effect and the control panel with temperature and timer settings.

Sliding Door Operation:

The TV stand features sliding arched doors. These doors can be moved along their tracks to either cover the electric fireplace or reveal the internal storage shelves. This allows for flexible configuration of the unit.


Versatile Storage Options

4 shelves and 2 open lockers, you can put some commonly



Sliding Doors In The Middle

Glide to transform from storage mode to warm
ambiance

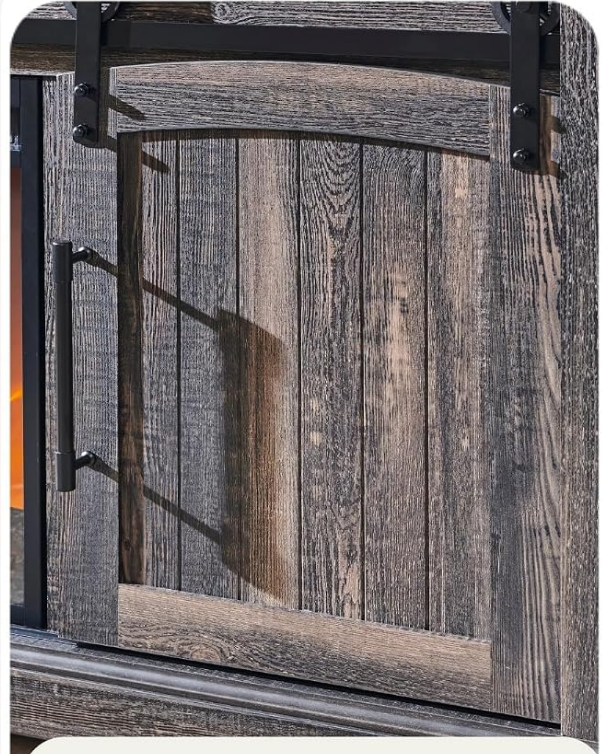

Sliding Doors On Both Sides

Slide panels to access
spacious hidden storage
compartments

Image: Two close-up views of the TV stand's sliding arched doors, demonstrating how they can be positioned in the middle to cover the fireplace or slid to the sides to reveal storage compartments.

MAINTENANCE AND CARE

Cleaning the TV Stand:

- Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- For the waterproof imitation woodgrain sticker on the desktop, a gentle wipe is sufficient.
- Regularly dust the unit to prevent buildup.

Cleaning the Electric Fireplace:

- Ensure the fireplace is unplugged and cool before cleaning.
- Use a soft, damp cloth to clean the exterior.
- Do not spray water directly onto the unit.
- Periodically check air intake and exhaust vents for dust or obstructions and clean as necessary.

Troubleshooting

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, loose connection, power switch off.	Check power cord connection, ensure outlet is functional, verify main power switch is on.
No heat, but flames are visible.	Heater function is off, temperature setting too low.	Activate heater function via control panel or remote. Increase desired temperature setting.
Remote control not working.	Dead batteries, obstruction, remote out of range.	Replace batteries. Ensure clear line of sight to fireplace sensor. Move closer to the unit.
Sliding doors are stiff or stuck.	Debris in tracks, misaligned door.	Clean tracks of any dust or debris. Gently re-align the door on its track.

Specifications

- **Model:** B0FYP1JSQN
- **Brand:** T4TREAM
- **Material:** Engineered Wood (MDF and Particleboard)
- **Color:** Dark Rustic Oak
- **Overall Dimensions:** 60" W x 15.7" D x 34" H
- **Fireplace Opening:** 23 inches
- **Soundbar Shelf Height:** 6.3 inches
- **Weight Capacity (Top Surface):** Up to 150 lbs
- **Fireplace Heating Area:** Up to 400 sq.ft.
- **Fireplace Wattage:** 1500W
- **Fireplace Temperature Range:** 62°F - 82°F (17°C - 28°C)
- **Noise Level (Fireplace):** Under 45 dB
- **Features:** 3D Flame Effect, Overheat Protection, Safety Certified

Warranty Information

T4TREAM products are manufactured with quality and durability in mind. For specific warranty details regarding your Farmhouse Fireplace TV Stand, please refer to the warranty card included in your packaging or contact customer support.

Customer Support

If you require assistance with assembly, operation, or have any questions about your T4TREAM Farmhouse Fireplace TV Stand, please contact our dedicated customer support team. Refer to the contact information provided in your product packaging or visit the official T4TREAM website for support resources.

Online Resources: [T4TREAM Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FYP42ZLR>

More documents and user manuals: <https://manuals.plus/>