

[manuals.plus](#) /› [OUKITEL](#) /› [OUKITEL C68 Plus SIM-Free Smartphone User Manual](#)

OUKITEL C68 Plus

OUKITEL C68 Plus SIM-Free Smartphone User Manual

Model: C68 Plus | Brand: OUKITEL

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your OUKITEL C68 Plus SIM-Free Smartphone. Please read it carefully before using the device and keep it for future reference. The OUKITEL C68 Plus is an Android 15 smartphone designed for a seamless user experience, featuring a large display, powerful performance, and advanced camera capabilities.

2. PACKAGE CONTENTS

Verify that all items are present in your product package:

- OUKITEL C68 Plus Smartphone
- Charging Cable
- SIM Ejector Pin
- Type-C Fast Charger (18W)
- User Manual (Japanese version)
- Protective Case
- After-sales Service Card



Image: Contents of the OUKITEL C68 Plus retail package.

3. DEVICE OVERVIEW

3.1 Physical Components

Familiarize yourself with the key physical features of your OUKITEL C68 Plus smartphone.

1.81"サブディスプレイ

メイン画面を起動せずに、天気、時刻、さらにはセルфиーのプレビューまで。この洗練された直感的なデザインが、優れた利便性を提供し、常に一步先を行く情報を届けします。

AIが最高の一枚を引き出します。笑顔を捉え、ジェスチャーで撮影。

Image: Rear view of the OUKITEL C68 Plus, highlighting the camera array and the 1.81-inch sub-display.

- **Main Display:** 7.2-inch HD+ screen with 120Hz refresh rate and 500nit brightness.
- **Sub-Display:** 1.81-inch rear display for quick access to time, notifications, and music.
- **Camera Module:** Includes a 64MP main camera and an 8MP front camera.
- **Side Fingerprint Sensor:** Integrated for convenient and secure unlocking.
- **USB Type-C Port:** For charging and data transfer.
- **SIM Card Slot:** Supports Dual SIM (Nano+Nano or Nano+TF card).



Image: The OUKITEL C68 Plus showcasing its slim 9.5mm body and various color options.

4. SETUP

4.1 Inserting SIM Card and MicroSD Card

1. Locate the SIM card tray on the side of the device.
2. Insert the SIM ejector pin into the small hole next to the tray to open it.
3. Place your Nano-SIM card(s) and/or microSD card into the tray according to the diagram. Ensure the gold contacts face downwards.
4. Carefully push the tray back into the slot until it is flush with the device.

1.81" サブディスプレイ

天気や時刻、さらにはセルфиーのプレビューまで、メイン画面を起動せずに一目で確認。洗練された直感的なデザインで、必要な情報をさりげなくお届けします。



Image: Illustration of the dual SIM and microSD card slot.

4.2 Initial Power On and Basic Settings

- Press and hold the Power button until the OUKITEL logo appears.
- Follow the on-screen prompts to select your language, connect to Wi-Fi, and set up your Google account.
- Configure security features such as fingerprint authentication and face recognition for enhanced device security.

5. OPERATING INSTRUCTIONS

5.1 Display Features

The OUKITEL C68 Plus features a 7.2-inch main display and a 1.81-inch sub-display.

- Main Display:** Enjoy immersive viewing with a 120Hz refresh rate and 500nit brightness, ideal for videos and games.
- Sub-Display:** Quickly check time, notifications, and music playback without activating the main screen. Customize its appearance through settings.



Image: The 7.2-inch main display of the OUKITEL C68 Plus in action.

5.2 Camera Usage

Capture high-quality photos and videos with the 64MP main camera and 8MP front camera.

- **Main Camera (64MP):** Ideal for detailed photos in various conditions.
- **Front Camera (8MP):** Perfect for selfies and video calls.
- **AI Photography Features:** Utilize AI beauty mode for natural skin texture correction, portrait mode to highlight subjects, and night mode for clear images in low light.
- **Modes:** Explore HDR, Manual, and Panorama modes for diverse shooting scenarios.

鮮やかに、克明に、人生の美しさを捉える

6400万画素メインカメラが、大切な瞬間や風景を、
息をのむようなシャープさで永遠の一枚に刻みます。



Image: Overview of the OUKITEL C68 Plus camera system and its capabilities.

5.3 Battery Management

The 6000mAh battery provides extended usage. Optimize battery life and utilize charging features.

- Charging:** Use the included 18W fast charger for efficient power replenishment.
- OTG Reverse Charging:** Your smartphone can act as a power bank to charge other devices in emergencies.
- Battery Optimization:** Access battery settings in Android 15 to monitor usage and enable power-saving modes.

6000mAh 大容量 バッテリー

一日中、あなたのペースで安心稼働



Image: The 6000mAh battery capacity of the OUKITEL C68 Plus.

5.4 Performance and Storage

The device is powered by an octa-core processor with 16GB RAM (including 12GB virtual memory) and 128GB internal storage, expandable up to 1TB via microSD.

- Multitasking:** The generous RAM ensures smooth app switching and background processes.
- Storage Expansion:** Use a microSD card to expand storage up to 1TB for photos, videos, and apps.

16GB RAM + 128GB ROM + 1TB拡張可能

洗練されたストレージと、ストレスフリーのマルチタスク: 16GB RAMと128GB ROMに加え、1TBまでのストレージ拡張が可能です。すべての動作が滑らかで遅延なく、容量不足の心配から解放されます。



Image: Visual representation of the OUKITEL C68 Plus's memory and storage capabilities.

5.5 Android 15 Features

Your OUKITEL C68 Plus runs on Android 15, offering enhanced features and security.

- Gemini AI Integration:** Benefit from AI-powered features for improved usability.
- Security:** Enhanced privacy controls and robust security measures are built into Android 15.
- Connectivity:** Supports Wi-Fi 2.4GHz/5GHz dual band and high-precision GPS.



Image: The OUKITEL C68 Plus running on the Android 15 operating system.

6. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your smartphone.

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals.
- **Software Updates:** Regularly check for and install system updates to ensure your device has the latest features and security patches.
- **Battery Care:** Avoid extreme temperatures. Do not fully discharge the battery frequently.
- **Storage Management:** Periodically clear unnecessary files and app caches to maintain performance.
- **Physical Protection:** Use the provided protective case to guard against drops and scratches.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your OUKITEL C68 Plus.

Issue	Possible Cause	Solution

Issue	Possible Cause	Solution
Device won't turn on	Low battery; System crash	Charge the device for at least 30 minutes. Press and hold the Power button for 10-15 seconds to force restart.
Apps are slow or freezing	Too many apps running; Low storage; Software glitch	Close background apps. Clear app cache. Restart the device. Check for system updates.
Cannot connect to Wi-Fi	Wi-Fi is off; Incorrect password; Router issue	Ensure Wi-Fi is enabled. Re-enter password. Restart your router.
SIM card not detected	SIM card improperly inserted; Damaged SIM card	Re-insert the SIM card correctly. Try another SIM card to check if the issue is with the card.
Battery drains quickly	High screen brightness; Background apps; Old battery	Reduce screen brightness. Close unnecessary background apps. Check battery usage in settings.

8. SPECIFICATIONS

Detailed technical specifications for the OUKITEL C68 Plus smartphone.

- **Model:** C68 Plus
- **Operating System:** Android 15
- **Main Display:** 7.2 inches HD+ (720*1560 resolution), 120Hz refresh rate, 500nit brightness
- **Sub-Display:** 1.81 inches
- **Processor:** Octa-core
- **RAM:** 16GB (including 12GB virtual memory)
- **Internal Storage:** 128GB
- **Expandable Storage:** Up to 1TB via microSD card
- **Main Camera:** 64MP
- **Front Camera:** 8MP
- **Battery Capacity:** 6000mAh
- **Charging:** 18W Fast Charging
- **Connectivity:** 4G, Wi-Fi 2.4GHz/5GHz Dual Band, Bluetooth, GPS (GPS, GLONASS, BeiDou, Galileo)
- **Security:** Side Fingerprint Sensor, Face Recognition
- **Dimensions:** 0.9 x 8.5 x 17 cm
- **Weight:** 450 g
- **Compatible Carriers (Japan):** Docomo, Au, SoftBank, Rakuten Mobile, etc.

9. WARRANTY AND SUPPORT

OUKITEL provides a quality assurance warranty for this product. For any inquiries or support, please refer

to the following methods:

9.1 Contacting Support

- **Via Amazon Account:** Go to your Amazon account → Order History → Select the relevant order → Contact Seller.
- **Via Product Page:** Click on the store name located below the "Add to Cart" button on the product page. Then, click "Ask a question" in the upper right corner to send an email to the store.

Support Hours: Weekdays 10:00 AM - 6:30 PM (excluding weekends and manufacturer holidays).

We aim to respond as quickly as possible: within 24 hours on weekdays, and within 48-72 hours on holidays.

9.2 Compliance

This product has obtained technical compliance certification for wireless equipment radio wave laws, PSE, and GMS certification.