

## NARVI EDIMBURGO 1854 WH

# NARVI EDIMBURGO 1854 WH Ceiling Fan

## User Manual

Model: EDIMBURGO 1854 WH | Brand: NARVI

### 1. INTRODUCTION

Thank you for choosing the NARVI EDIMBURGO 1854 WH Ceiling Fan. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling fan. Please read these instructions carefully before installation and keep them for future reference.

The NARVI EDIMBURGO 1854 WH is a modern ceiling fan featuring a remote control, adjustable LED lighting (3000K-6500K), three transparent retractable blades, and a winter/summer function for year-round comfort. Its minimalist design integrates seamlessly into various indoor spaces.

### 2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when installing and operating electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Read all instructions:** Before beginning installation, read all instructions and safety information.
- **Electrical Safety:** Ensure the power supply is disconnected at the main circuit breaker before installation or maintenance. All wiring must be performed by a qualified electrician and comply with local electrical codes.
- **Mounting:** The mounting structure must be capable of supporting the weight of the fan (5.9 kg) and the dynamic load during operation. Ensure the fan is securely mounted to a ceiling joist or a suitable support system.
- **Blade Clearance:** Maintain a minimum clearance of 2.3 meters (7.5 feet) from the floor to the fan blades and at least 0.5 meters (1.6 feet) from walls or other obstructions.
- **Indoor Use Only:** This fan is designed for indoor use only (IP20 protection rating). Do not expose it to water or high humidity.
- **Remote Control:** Keep the remote control out of reach of children.
- **Maintenance:** Do not attempt to repair or modify the fan yourself. Contact qualified service personnel for repairs.

### 3. PACKAGE CONTENTS

Carefully unpack your ceiling fan and ensure all items are present. If any parts are missing or damaged, contact your retailer immediately.

- Ceiling Fan Unit (Motor housing with integrated LED light)
- Retractable Fan Blades (3 units)
- Mounting Bracket
- Downrods (10 cm and 20 cm for adjustable height)
- Remote Control
- Mounting Hardware (screws, anchors, washers)
- Instruction Manual
- Electrical Cable

#### 4. SPECIFICATIONS

<b>Brand</b>	NARVI
<b>Model Number</b>	EDIMBURGO 1854 WH
<b>Color</b>	White
<b>Design</b>	Ceiling Fan with Retractable Blades
<b>Material</b>	Polycarbonate (Blades), Metal (Frame), Acrylic (Diffuser)
<b>Dimensions (Diameter x Height)</b>	107 cm (expanded diameter) x 27-37 cm (adjustable height)
<b>Weight</b>	5.9 kg
<b>Motor Power</b>	30W DC Motor
<b>LED Light Power</b>	10W (Adjustable)
<b>Total Power Consumption</b>	75W (Fan + Light)
<b>Color Temperature</b>	3000K (Warm White) - 6500K (Cool White)
<b>Number of Blades</b>	3 (Transparent, Retractable)
<b>Fan Speeds</b>	6
<b>Control Method</b>	Remote Control
<b>Special Features</b>	Adjustable Head, Winter/Summer Function, Timer (2H/4H/8H), Memory Function
<b>Protection Rating</b>	IP20 (Indoor Use Only)
<b>Recommended Room Size</b>	Up to 20 m <sup>2</sup>



Figure 1: Technical dimensions of the fan. The total expanded diameter is 107 cm. The main body diameter is 50 cm. The height from ceiling to bottom of light is adjustable between 27 cm and 37 cm, depending on the chosen downrod (10 cm or 20 cm).



Figure 2: Power specifications. The LED light consumes 10W, and the DC motor consumes 30W, resulting in a total power consumption of 75W when both are active.

## 5. SETUP AND INSTALLATION

---

Installation should be performed by a qualified electrician. Ensure power is OFF at the circuit breaker before starting.

### 1. Prepare the Mounting Location:

- Turn off power at the main circuit breaker.
- Ensure the ceiling structure can support the fan's weight (5.9 kg).
- For sloped ceilings, ensure the mounting bracket is compatible and installed correctly.

### 2. Install the Mounting Bracket:

- Secure the mounting bracket to the ceiling junction box or support structure using the provided hardware.

### 3. Assemble the Downrod:

- Choose between the 10 cm or 20 cm downrod based on your desired fan height.
- Feed the electrical wires from the fan motor through the chosen downrod.
- Attach the downrod to the fan motor housing.



Figure 3: Key installation considerations including IP20 rating for indoor use, compatibility with sloped ceilings, suitability for rooms up to 20 m<sup>2</sup>, and the inclusion of 10 cm and 20 cm downrods for height adjustment.

### 4. Hang the Fan Unit:

- Carefully lift the fan assembly and hang it onto the mounting bracket.

### 5. Electrical Wiring:

- Connect the fan's electrical wires to the household wiring according to the wiring diagram provided in the separate wiring instructions (if applicable) and local electrical codes. Ensure all connections are secure.

### 6. Secure the Canopy:

- Slide the canopy up to the ceiling and secure it to the mounting bracket, covering the wiring connections.

### 7. Install Blades:

- The three transparent blades are retractable and typically pre-assembled or easily attachable to the motor housing. Follow specific instructions for blade attachment if not pre-assembled.

### 8. Restore Power:

- Once installation is complete, restore power at the main circuit breaker.

## 6. OPERATING INSTRUCTIONS

---

Your NARVI EDIMBURGO 1854 WH ceiling fan is operated via the included remote control.

Figure 4: Overview of fan features including the remote control, 6 fan speeds, memory function for settings, 3 retractable blades, and a timer with 2, 4, or 8-hour options.



Figure 5: The included remote control for operating the fan and light functions.

## 6.1 Remote Control Functions

- **Power ON/OFF:** Press the power button to turn the fan and light on or off.
- **Fan Speed:** Use the speed buttons (1-6) to adjust the fan's rotation speed. There are 6 available speeds.
- **Light ON/OFF:** Press the light button to turn the LED light on or off independently.
- **Light Color Temperature (CCT) Adjustment:** Press the CCT button to cycle through color temperatures (3000K Warm White, 4000K Neutral White, 6500K Cool White).
- **Light Dimming:** Use the dimming buttons to increase or decrease the brightness of the LED light.
- **Winter/Summer Mode:** Press the dedicated button to switch between modes.
  - **Summer Mode (Counter-clockwise rotation):** Creates a downward airflow, producing a cooling effect.
  - **Winter Mode (Clockwise rotation):** Creates an upward airflow, circulating warm air trapped near the ceiling.

Figure 6: Visual representation of Summer Mode (downward airflow for cooling) and Winter Mode (upward airflow for heat circulation).

- **Timer Function:** Press the timer button to set the fan to turn off automatically after 2, 4, or 8 hours.
- **Memory Function:** The fan will remember the last used light and fan settings when turned off and on again.
- **Adjustable Head:** The fan head can be manually adjusted to direct airflow as desired.

## 7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your ceiling fan. Always disconnect power before performing any maintenance.

- **Cleaning:**
  - Wipe the fan housing and blades with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
  - Ensure the blades are clean to prevent dust buildup from affecting balance and performance.
- **Tightness Check:**

- Periodically check all screws and connections on the mounting bracket and fan assembly to ensure they are secure.

- **Blade Balance:**

- If the fan wobbles, check that all blades are securely attached and that the blade holders are not bent.

## 8. TROUBLESHOOTING

Before contacting customer service, please refer to the following troubleshooting guide for common issues.

Problem	Possible Cause	Solution
Fan does not start.	No power supply; Loose wiring; Remote control battery low.	Check circuit breaker; Verify wiring connections; Replace remote control batteries.
Light does not turn on.	No power supply; Loose wiring; LED module fault.	Check circuit breaker; Verify wiring connections; Contact customer support if LED module is faulty.
Fan wobbles.	Loose mounting screws; Unbalanced blades; Bent blade holders.	Ensure all mounting screws are tight; Check blade balance and attachment; Inspect blade holders for damage.
Remote control not working.	Low batteries; Obstruction; Remote not paired.	Replace batteries; Ensure clear line of sight to fan; Refer to remote pairing instructions (if applicable).
Noise from fan.	Loose screws; Motor noise; Blades hitting an obstruction.	Tighten all screws; Ensure no obstructions are near blades; If motor noise persists, contact support.

## 9. WARRANTY AND SUPPORT

NARVI products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your purchase or contact your retailer.

If you encounter any issues not covered in this manual or require further assistance, please contact NARVI customer support or your authorized dealer. Please have your model number (EDIMBURGO 1854 WH) and purchase date ready when contacting support.

**Manufacturer:** NARVI

**Country of Origin:** Spain