

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [DOGLinsen](#) /

› [DOGLinsen No Shock Vibrating Dog Collar Instruction Manual](#)

DOGLinsen B0FYVT6ZXR

DOGLinsen No Shock Vibrating Dog Collar

MODEL: B0FYVT6ZXR

1. IMPORTANT SAFETY INFORMATION

- This product is designed for humane training using tone and vibration only. It does not deliver static shock.
- Ensure the collar fits properly. It should be snug but not too tight, allowing two fingers to fit comfortably under the strap.
- Do not leave the receiver collar on your dog for more than 12 hours per day to prevent skin irritation.
- Regularly check your dog's neck for any signs of irritation or sores. If irritation occurs, discontinue use until the skin heals.
- This training collar is not a toy. Keep it out of reach of children.
- Always supervise your dog during training sessions.

2. PACKAGE CONTENTS

- Remote Transmitter
- Receiver Collar
- Adjustable Nylon Collar Strap
- USB Charging Cable
- User Manual

3. PRODUCT OVERVIEW

Remote Transmitter

- **Antenna:** For signal transmission.
- **LCD Display:** Shows mode, level, and battery status.
- **Tone Button:** Activates tone mode.
- **Vibration Button:** Activates vibration mode.
- **Tone & Vibration Button:** Activates combined tone and vibration mode.
- **Level Adjustment Buttons (+/-):** Adjusts intensity levels (1-9).
- **Channel Button:** Switches between receiver channels (if multiple collars are used).
- **Power/Lock Button:** Turns on/off or locks the remote.

Receiver Collar

- **Power Button:** Turns on/off the receiver.
- **Charging Port:** For USB charging.
- **Indicator Light:** Shows power, charging, and operation status.
- **Vibration Motor:** Delivers humane vibration.

4. CHARGING THE DEVICES

Before first use, fully charge both the remote transmitter and the receiver collar.

- Connect the USB charging cable to the charging port on both devices.
- Plug the other end of the cable into a standard USB power adapter (not included).
- The indicator light on the receiver will be red during charging and turn green when fully charged. The remote's LCD display will show a charging icon and full battery when complete.
- Charging typically takes 2-3 hours.

5. PAIRING THE REMOTE AND RECEIVER

The remote and receiver are usually pre-paired from the factory. If they are not communicating, follow these steps:

1. Ensure both devices are fully charged and turned off.
2. Turn on the remote transmitter by pressing and holding the Power button.
3. Press and hold the Power button on the receiver collar until the indicator light flashes rapidly.
4. Within 10 seconds, press any mode button (Tone, Vibration, or Tone & Vibration) on the remote.
5. If pairing is successful, the receiver's indicator light will stop flashing and remain solid, and the receiver will respond to commands from the remote.
6. If pairing fails, repeat the steps.

6. FITTING THE COLLAR

Proper fit is crucial for effective and humane training.

- Place the receiver collar on your dog's neck, ensuring the vibration motor is positioned centrally on the underside of the neck.
- Adjust the strap so it is snug but not constricting. You should be able to fit two fingers comfortably between the collar strap and your dog's neck.
- The collar should not be so loose that it slides around or so tight that it causes discomfort or restricts breathing.
- Trim any excess strap length if necessary, and use the buckle to secure it.

7. OPERATING MODES

This collar offers three safe, no-shock training modes with adjustable intensity.

Tone Mode

Press the **Tone Button** to activate an audible sound. Use the **+/- buttons** to select from 9 different tone

styles. This mode is ideal for attracting your dog's attention or as a warning signal.

Vibration Mode

Press the **Vibration Button** to activate a gentle vibration. Use the **+/- buttons** to adjust the vibration intensity from level 1 (mild) to 9 (strong). This mode is effective for interrupting unwanted behaviors or reinforcing commands.

Tone & Vibration Mode

Press the **Tone & Vibration Button** to activate both an audible tone and vibration simultaneously. Use the **+/- buttons** to adjust the vibration intensity (1-9) and tone style (1-9). This combined mode can be useful for dogs that require a stronger cue.

8. TRAINING TIPS

- **Start with Low Levels:** Always begin with the lowest effective vibration level and gradually increase if needed.
- **Consistency is Key:** Use the collar consistently for specific behaviors or commands.
- **Positive Reinforcement:** Pair the collar's cues with positive reinforcement (treats, praise) when your dog performs the desired action.
- **Short Sessions:** Keep training sessions short and positive to maintain your dog's engagement.
- **Avoid Overuse:** Do not use the collar excessively or as a punishment tool. It is a communication aid.
- **Introduce Gradually:** Allow your dog to wear the collar for short periods without activation before beginning training.

9. MAINTENANCE

- **Cleaning:** Wipe the receiver collar and remote with a damp cloth. Do not use harsh chemicals.
- **Collar Strap:** The nylon strap can be hand-washed with mild soap and water. Ensure it is completely dry before reattaching the receiver.
- **Storage:** Store the device in a cool, dry place when not in use.
- **Battery Care:** Recharge the batteries regularly, even if not in frequent use, to maintain battery health. Avoid fully depleting the battery for extended periods.
- **Waterproof Rating:** The receiver is IPX7 waterproof, meaning it can withstand immersion in up to 1 meter of water for 30 minutes. However, it is not recommended for prolonged swimming or diving. Ensure the charging port cover is securely closed.

10. TROUBLESHOOTING

Problem	Possible Solution
Receiver not responding to remote.	Check if both devices are turned on and charged. Re-pair the remote and receiver (refer to Section 5). Ensure you are within the 3300FT range.
Receiver not vibrating.	Check battery level. Ensure vibration level is set above 0. Re-pair the devices.
Remote display is blank.	Charge the remote. Press the Power button to turn it on.

Problem	Possible Solution
Short remote range.	Ensure the remote's antenna is not obstructed. Avoid using in areas with heavy radio interference. Charge both devices.
Collar causes skin irritation.	Remove the collar immediately. Clean your dog's neck and the collar. Allow skin to heal before reintroducing. Ensure proper fit and do not leave on for extended periods.

11. SPECIFICATIONS

Feature	Detail
Model	B0FYVT6ZXR
Training Modes	Tone (9 styles), Vibration (9 levels), Tone & Vibration (9 levels/styles)
Remote Range	Up to 3300 feet (1000 meters)
Waterproof Rating (Receiver)	IPX7 (submersible up to 1 meter for 30 minutes)
Adjustable Collar Size	8 to 27 inches neck circumference
Suitable Dog Weight	10 to 100 pounds
Battery Type	Rechargeable Lithium-ion (for both remote and receiver)

12. WARRANTY AND SUPPORT

DOGLinsen products are designed for reliability and performance. For warranty information, technical support, or any questions regarding your product, please refer to the contact information provided with your purchase or visit the official DOGLinsen website.

Please retain your proof of purchase for warranty claims.