



Manuals.plus /

› HP /

› HP 2026 22" FHD All-in-One Desktop Computer User Manual

HP DG0034

HP 2026 22" FHD All-in-One Desktop Computer User Manual

Model: DG0034

INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your HP 2026 22" FHD All-in-One Desktop Computer. Please read these instructions carefully before using your device to ensure optimal performance and longevity.



Figure 1: HP 2026 22" FHD All-in-One Desktop Computer

WHAT'S IN THE BOX

Verify that all components are present in the packaging:

- HP 2026 22" FHD All-in-One Desktop Computer
- Wired USB Keyboard
- Wired USB Mouse
- Power Adapter
- 500GB WOWPC 3-in-1 External Hard Drive Bundle, including:
 - 2.5 inch SATA External Case
 - 2-in-1 USB 3.0 Data Cable
 - Cleaning Cloth
 - Windows Shortcut Sticker
 - Leather Bag



Figure 2: External Hard Drive Bundle Components

SETUP

1. **Unpacking:** Carefully remove the computer and all accessories from the packaging. Place the computer on a stable, flat surface.
2. **Connect Keyboard and Mouse:** Plug the wired USB keyboard and mouse into the available USB Type-A ports on the back of the All-in-One computer.
3. **Connect Power:** Connect the power adapter to the power input port on the computer, then plug the power cord into a wall outlet.
4. **Initial Boot-up:** Press the power button, usually located on the side or back of the display. The computer will power on and guide you through the Windows 11 initial setup process. Follow the on-screen instructions to configure your operating system, network, and user accounts.
5. **Connect External Storage:** Connect the 500GB WOWPC external hard drive to an available USB port on the computer using the provided USB 3.0 data cable. The system will automatically detect and prepare the drive for

use.

6. **Optional: Connect to Network:** For a wired connection, connect an Ethernet cable from your router or modem to the RJ-45 Ethernet port on the computer. For wireless, follow the Windows 11 setup prompts to connect to a Wi-Fi network.
7. **Optional: Connect External Display:** If desired, connect an external monitor to the HDMI-out port using an HDMI cable.

Ports

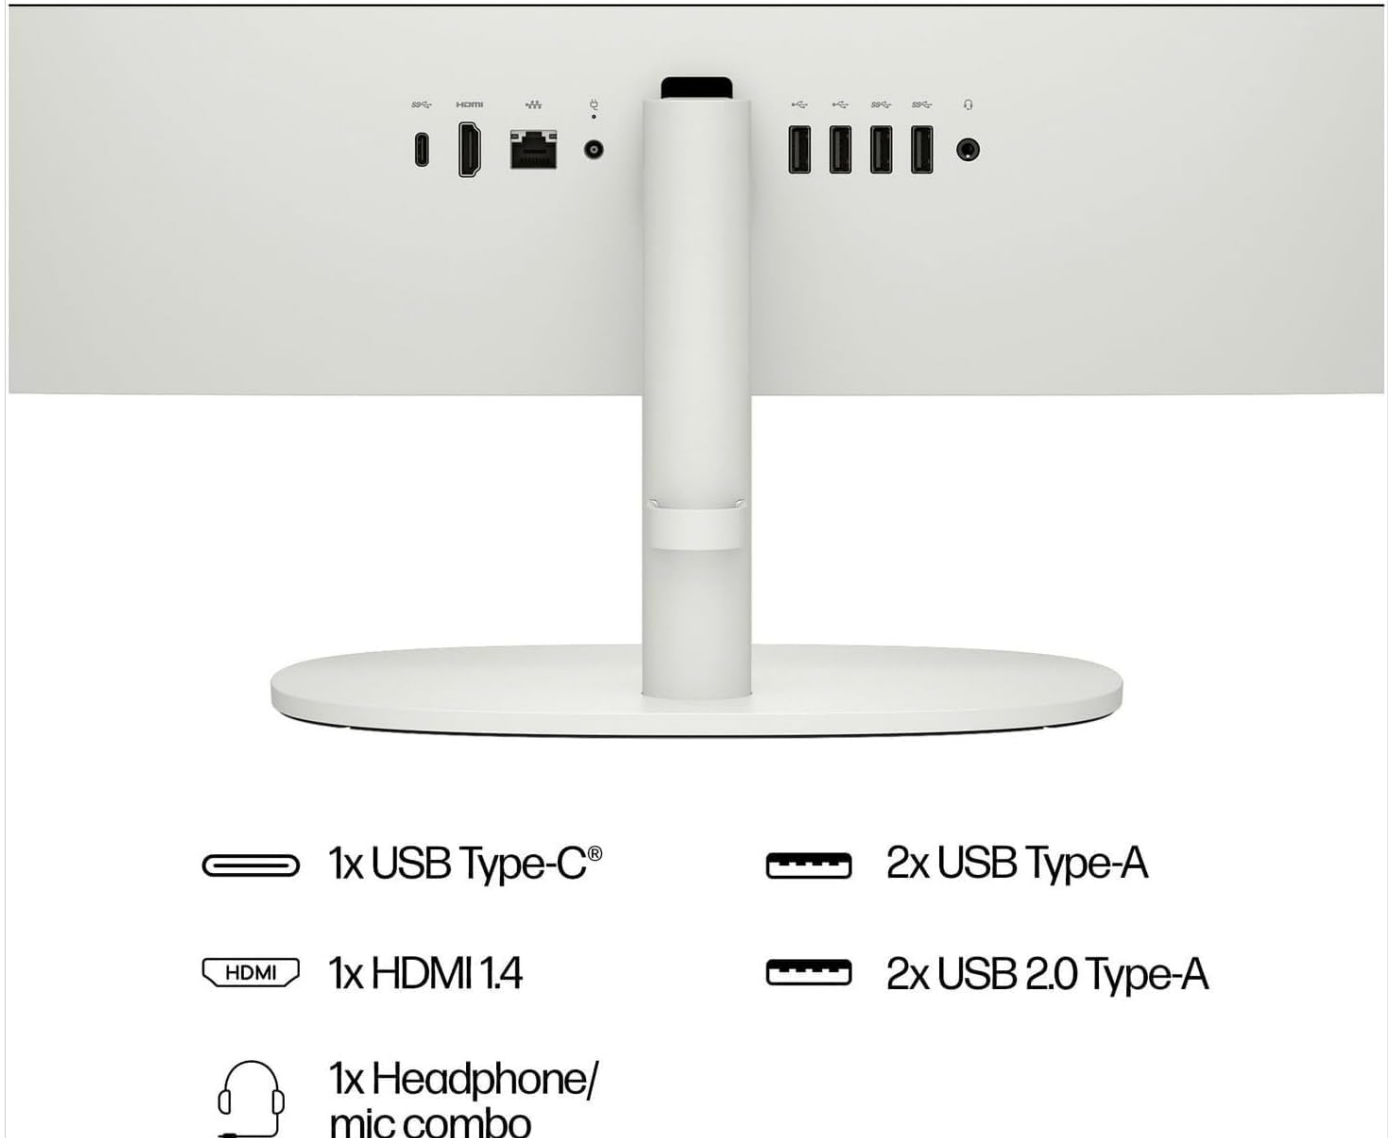


Figure 3: Rear Ports of the All-in-One Computer

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press the power button.
- **Shut Down:** Click the Start button in Windows, then select Power > Shut down.
- **Restart:** Click the Start button, then select Power > Restart.
- **Sleep:** Click the Start button, then select Power > Sleep.


Using Ports

- **USB Type-C (5Gbps):** For data transfer only. Connect compatible devices such as external drives or smartphones.
- **USB Type-A (Hi-Speed / 5Gbps):** Connect peripherals like keyboards, mice, printers, or USB flash drives.
- **HDMI-out:** Connect to an external display or projector.
- **3.5mm Headphone/Microphone Combo Jack:** Connect headphones, earbuds, or a headset with a built-in microphone.
- **RJ-45 Ethernet Port:** For a stable wired internet connection.

Webcam and Audio

- The integrated HD webcam features a privacy shutter. Slide the shutter to cover the camera lens when not in use for enhanced privacy.
- The built-in dual microphones and high-definition stereo speakers provide clear audio for video calls and multimedia.

Next-level video calls

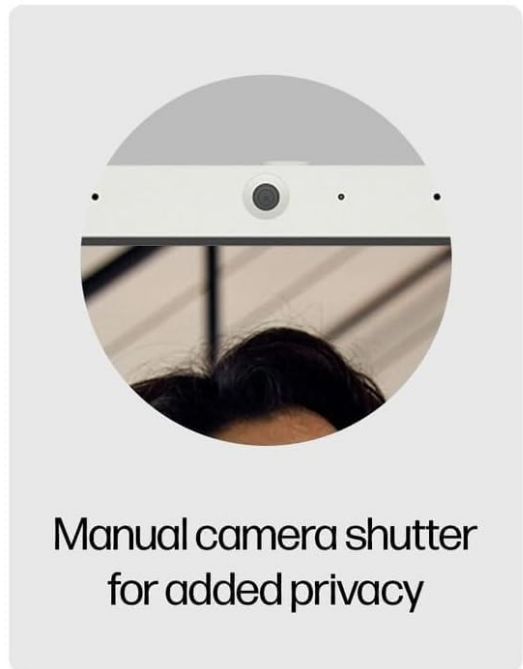

Manual camera shutter for added privacy



HD camera with TNR support for smoother video



AI Noise Reduction

Figure 4: Video Call Features

Wireless Connectivity

- **Wi-Fi 6:** Connect to wireless networks for internet access. Manage Wi-Fi connections through Windows settings.
- **Bluetooth 5.3:** Pair with Bluetooth-enabled devices such as wireless headphones, speakers, or mobile phones.

Tailored for the essential needs of your household



FHD display with 3000:1 contrast for vivid viewing



W-Fi 6 (2x2) and Bluetooth 5.3 Wireless Card



Faster data transfers with USB Type-C port



Storage for family photos and videos

Figure 5: Connectivity and Display Features

Display and Multimedia

- The 21.5" Full HD IPS display offers sharp visuals with an anti-glare coating.
- Experience enhanced entertainment with a 3000:1 contrast ratio and speakers tuned by DTS Audio.

Elevate your entertainment experience



Figure 6: Display and Audio Enhancements

MAINTENANCE

Cleaning

- **Display:** Use a soft, lint-free cloth, slightly dampened with water or a screen-cleaning solution, to gently wipe the display. Avoid harsh chemicals.
- **Chassis:** Wipe the exterior surfaces with a soft, dry cloth.
- **Ports:** Keep ports free of dust and debris. Use compressed air if necessary, but avoid inserting objects into the ports.

Software Updates

- Regularly check for and install Windows updates to ensure system security and performance. Go to **Settings > Windows Update**.
- Ensure drivers for hardware components are up-to-date. HP Support Assistant or Windows Device Manager can help manage this.

Data Backup

- Regularly back up important files to the included 500GB external hard drive or a cloud storage service to prevent data loss.

TROUBLESHOOTING

If you encounter issues with your HP All-in-One computer, refer to the following common solutions:

Problem	Possible Solution
Computer does not power on.	Ensure the power adapter is securely connected to both the computer and a working electrical outlet. Test the outlet with another device.
No display on screen.	Check if the computer is powered on. Adjust screen brightness. If an external monitor is connected, ensure it is powered on and correctly configured.
Keyboard or mouse not responding.	Ensure USB cables are firmly connected to the correct ports. Try connecting them to different USB ports. Restart the computer.
No internet connection.	For Wi-Fi, check network settings and ensure you are connected to the correct network. For wired, ensure the Ethernet cable is properly connected and your router/modem is working. Restart your router/modem.
External hard drive not detected.	Ensure the USB 3.0 data cable is securely connected to both the drive and the computer. Try a different USB port. Check Disk Management in Windows to see if the drive is listed.

For more detailed troubleshooting or persistent issues, please refer to the HP support website or contact customer service.

SPECIFICATIONS

Feature	Detail
Brand	HP
Model Number	DG0034
Operating System	Windows 11 Home (64-bit)
Processor	13th Gen Intel N100 (4 cores, up to 3.4GHz, 6MB cache)
Graphics	Integrated Intel UHD Graphics
RAM	16GB DDR5 (expandable up to 32GB)
Internal Storage	128GB UFS
External Storage	500GB WOWPC 3-in-1 External Hard Drive Bundle
Display	21.5" Full HD (1920x1080) IPS Anti-glare Display, 16:9 Aspect Ratio, 60Hz Refresh Rate
Audio	High-Definition stereo speakers
Webcam	HD webcam with privacy shutter, Built-in Dual Microphone
Ports	1x USB Type-C (5Gbps, data only), 2x USB Type-A (Hi-Speed), 1x USB Type-A (5Gbps), 1x 3.5mm combo jack, 1x RJ-45 Ethernet, 1x HDMI-out
Wireless Connectivity	WiFi 6, Bluetooth 5.3
Dimensions (H x W x D)	Approx. 15.8 x 19.3 x 6.5 inches
Weight	Around 10.5 lbs
Power Supply	65-Watt AC adapter

WARRANTY AND SUPPORT

Your HP 2026 22" FHD All-in-One Desktop Computer comes with a **1-Year Seller Warranty**.

For technical assistance, warranty claims, or further inquiries, please contact the seller or visit the official HP support website. Ensure you have your product model number (DG0034) and proof of purchase available when seeking support.

HP Official Support: <https://www.hp.com/support>