

AGLUCKY AL-87689HTB0-WHITE

AGLUCKY 20L Towel Warmer Bucket Instruction Manual

Model: AL-87689HTB0-WHITE

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the AGLUCKY Towel Warmer Bucket. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Do not use to dry wet towels or other damp items.** This appliance is designed for warming dry items only.
- Ensure the unit is placed on a stable, flat surface to prevent tipping.
- The unit features an automatic power cut-off if tipped over.
- An auto shut-off function activates when the towel is removed from the warmer.
- **Caution:** The interior surfaces of the bucket can reach high temperatures. Do not touch the interior when the hot surface indicator light is on.
- Keep out of reach of children and pets.
- Do not immerse the unit in water or other liquids.
- Unplug the unit when not in use and before cleaning.

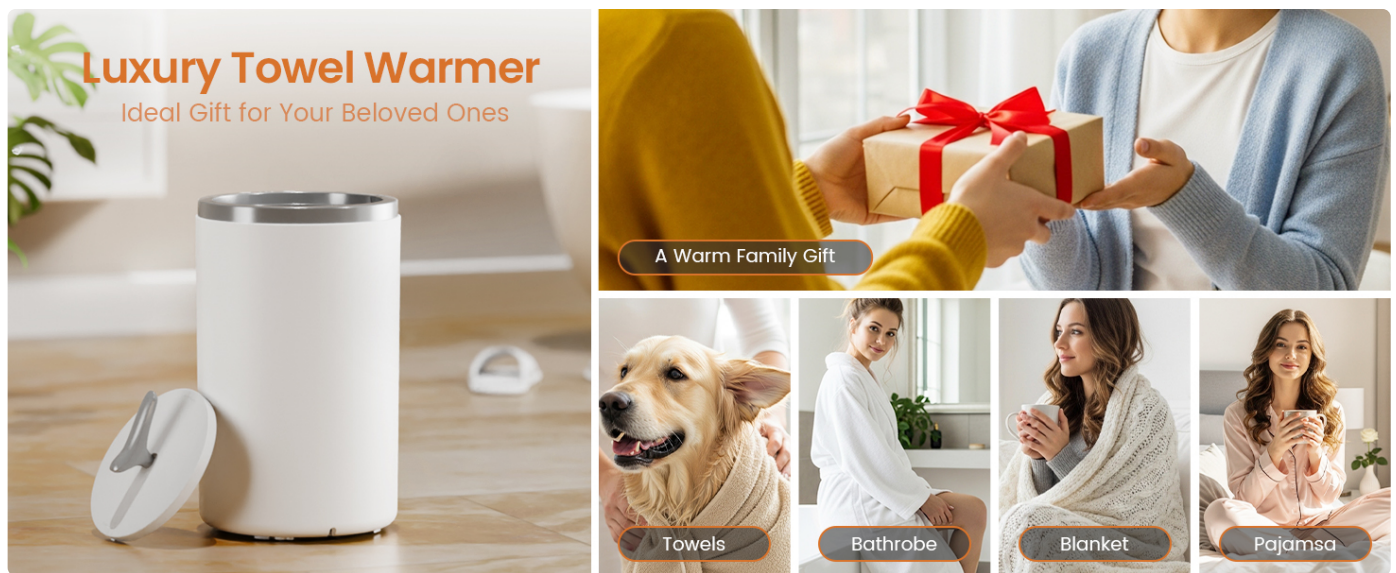


Figure 1: Enhanced Safety Features

2. PRODUCT OVERVIEW

The AGLUCKY 20L Towel Warmer Bucket is designed to provide warm, comfortable towels, bathrobes, or blankets. It features rapid heating, two temperature modes, and a timer function for convenience.

Key Features:

- **20L Large Capacity:** Accommodates up to two 40"x70" oversized bath towels, bathrobes, or blankets.
- **Rapid Heating:** Heats up in 1 minute, reaching high temperature in approximately 6 minutes.
- **Even Heating:** Equipped with heating wires on both the base and inner walls to ensure consistent warmth without cold spots.
- **Two Heating Modes:** Low and High temperature settings.
- **Timer Function:** Automatic shut-off options for 30, 60, or 90 minutes.
- **Aroma Tray:** Built-in tray for adding scent tablets for a spa-like experience.
- **Safety Features:** Auto shut-off when items are removed and automatic power cut-off if the unit is tipped.

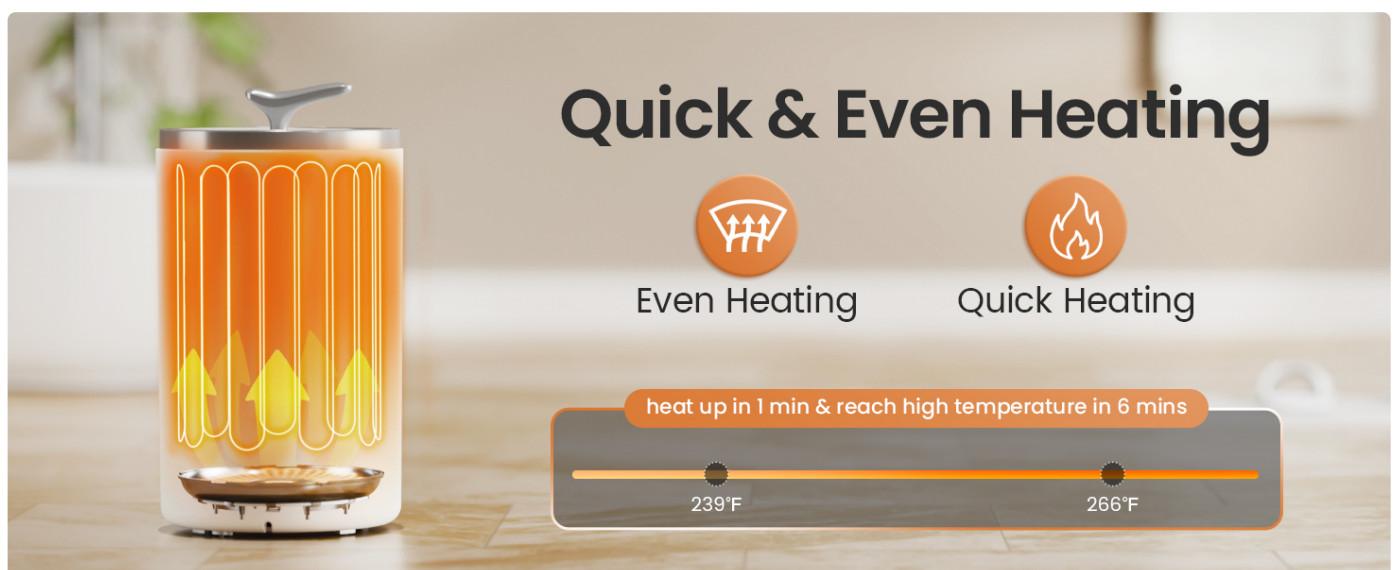


Figure 2: 20L Large Capacity



Figure 3: Specialized Fragrance Space

3. SETUP

The AGLUCKY Towel Warmer Bucket requires minimal setup.

1. Unpack the towel warmer and all its components from the packaging.
2. Place the unit on a firm, level, and heat-resistant surface in your desired location. Ensure there is adequate space around the unit for ventilation.
3. Plug the power cord into a standard electrical outlet.
4. The unit is now ready for use.

Your browser does not support the video tag.

Video 1: Unboxing and Initial Setup of the AGLUCKY Towel Warmer Bucket. This video demonstrates unpacking the unit, placing it, and preparing it for first use, including adding an aroma tablet.

4. OPERATING INSTRUCTIONS

Follow these steps to warm your towels, bathrobes, or blankets.

1. **Prepare Items:** Ensure the items you wish to warm are completely dry. Fold or roll them neatly and place them inside the towel warmer bucket. Do not overfill.
2. **Add Aroma (Optional):** If desired, place a few drops of essential oil or an aromatherapy tablet into the built-in aroma tray located on the underside of the lid.
3. **Close Lid:** Securely place the lid on the bucket.
4. **Power On:** Press the power button (usually indicated by a power symbol) to turn on the unit.
5. **Select Temperature:** Use the temperature selection button (often labeled 'L' for Low and 'H' for High) to choose your desired heat level. The corresponding indicator light will illuminate.
6. **Set Timer:** Press the timer button to cycle through the available settings: 30, 60, or 90 minutes. The indicator light for the selected time will illuminate. The unit will automatically shut off after the set time.
7. **Warming Process:** The unit will begin heating. Rapid heating allows the unit to warm up in 1 minute, with the interior reaching high temperature in about 6 minutes.
8. **Retrieve Item:** Once warming is complete or you are ready to use the item, carefully open the lid and remove the

warmed towel, bathrobe, or blanket. The heating function will automatically pause when the lid is opened or an item is removed.

9. **Power Off:** If not using the timer, press the power button again to turn off the unit. Unplug when not in use.



Figure 4: Easy to Operate Power and Settings



Figure 5: Fast & Even Heating

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your towel warmer.

1. **Cleaning Exterior:** Before cleaning, ensure the unit is unplugged and completely cool. Wipe the exterior surface with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
2. **Cleaning Interior:** The interior is made of stainless steel. Wipe the interior with a soft, damp cloth. For stubborn spots, a mild soap solution can be used, followed by wiping with a clean, damp cloth and then drying thoroughly.
3. **Aroma Tray:** Remove and clean the aroma tray as needed with mild soap and water. Ensure it is completely dry before reinserting.
4. **Storage:** When not in use for extended periods, unplug the unit and store it in a cool, dry place.



Figure 6: Easy to Clean, Built to Last Design

6. TROUBLESHOOTING

If you encounter any issues with your AGLUCKY Towel Warmer, please refer to the following common problems and solutions:

- **Unit does not turn on:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check if the power button has been pressed.
 - Verify that the unit has not been tipped over, triggering the safety shut-off.
- **Items are not warming sufficiently:**
 - Ensure the lid is properly closed.
 - Check that the desired temperature setting (Low or High) is selected.
 - Allow sufficient time for the unit to reach its full temperature (approx. 6 minutes for high heat).
 - Avoid overfilling the bucket, as this can hinder even heat distribution.
- **Unit shuts off unexpectedly:**
 - This may be due to the automatic timer reaching its set duration.
 - The unit may have been tipped, activating the safety shut-off.
 - The auto shut-off feature may have activated if an item was removed from the warmer.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	AGLUCKY
Model Number	AL-87689HTB0-WHITE
Capacity	20 Liters

Feature	Detail
Heating Modes	Low, High
Timer Settings	30, 60, 90 minutes (Auto Shut-Off)
Materials	Plastic, Stainless Steel
Item Weight	9.92 pounds
Package Dimensions	21.26 x 12.99 x 12.99 inches
Batteries Required	No

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official AGLUCKY website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2026 AGLUCKY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

