

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SUPERLEX](#) /

› [SUPERLEX Electric 5-in-1 Vegetable Cutter and Slicer \(Model SEG001\) Instruction Manual](#)

## SUPERLEX SEG001

# SUPERLEX Electric 5-in-1 Vegetable Cutter and Slicer

Model: SEG001

## INTRODUCTION

---

Thank you for purchasing the SUPERLEX Electric 5-in-1 Vegetable Cutter and Slicer. This appliance is designed to simplify your food preparation tasks by efficiently slicing, grating, and chopping various fruits, vegetables, and cheeses. Please read this instruction manual carefully before using the appliance to ensure safe operation and optimal performance. Keep this manual for future reference.

# 5 in 1

Haushalt

## Elektrisch Gemüseschneider

**150W**  
LEISTUNG

### Multifunktion



**LANGLEBIG & LEICHT ZU REINIGEN**

Verarbeitet mühelos Obst, Gemüse & Käse und bewahrt deren frischen Geschmack.

Image: The SUPERLEX Electric 5-in-1 Vegetable Cutter in operation, showcasing its multifunctionality with different types of processed foods like shredded carrots, sliced vegetables, and grated cheese.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not immerse the motor base in water or other liquids.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Always unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Avoid contact with moving parts.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.

- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## PACKAGE CONTENTS

---

Please check the package contents upon unpacking. Ensure all parts are present and in good condition.

- Motor Base Unit
- Food Chute/Feeder Tube
- Food Pusher
- 5 Interchangeable Drum Blades (Coarse Grater, Fine Grater, Thick Slicer, Thin Slicer, Grinding Cone)
- Blade Storage Container
- Instruction Manual

## SETUP AND ASSEMBLY

---

Follow these steps to assemble your SUPERLEX Electric 5-in-1 Vegetable Cutter before first use.

1. Place the motor base unit on a stable, flat, and dry surface.
2. Insert the desired drum blade into the food chute. Ensure it is securely seated.
3. Attach the food chute assembly to the motor base unit. Twist or click into place until it is firmly locked.
4. Ensure the food pusher is ready for use.

# EINFACH ZU MONTIEREN UND BEDIENEN



Image: A visual guide demonstrating the simple steps to assemble the electric vegetable cutter, including inserting the blade and attaching the food chute to the motor base.

## OPERATING INSTRUCTIONS

### Preparing Ingredients

For optimal results and to prevent jamming, ensure ingredients are appropriately sized to fit into the feeding chute. Large items like cabbage or potatoes should be cut into smaller pieces before processing.

## Große Lebensmittel einfüllen

Lebensmittel, die zu groß sind, müssen zuerst geschnitten werden, z.B. Kohl



## Ein-Klick-Bedienung

Nach dem Einlegen der Lebensmittel einfach den Startknopf drücken, und die Salatschleuder beginnt sofort zu arbeiten.



Image: Illustration showing that large food items, such as carrots, should be cut into smaller, manageable pieces to fit into the feeding chute for efficient processing.

## One-Click Operation

The appliance features a simple one-button operation for ease of use.

1. Ensure the appliance is properly assembled and plugged into a power outlet.
2. Place a bowl or container under the outlet to collect processed food.
3. Place the prepared ingredients into the large filling opening (9 x 7.5 cm).
4. Press the power button to start the motor.
5. Use the food pusher to gently guide the ingredients towards the rotating blade. Do not force the food.
6. Once processing is complete, release the power button and unplug the appliance.

## Interchangeable Drum Blades

The SUPERLEX Electric 5-in-1 Vegetable Cutter comes with five unique drum blades, each designed for specific tasks:

- **Fine Grater:** Ideal for finely grating hard cheeses, carrots, and other firm vegetables.
- **Coarse Grater:** Suitable for coarser grating of vegetables like potatoes, cheese, and nuts.

- **Grinding Cone:** For grinding nuts, breadcrumbs, or chocolate.
- **Thin Slicer:** Creates thin slices of cucumbers, potatoes, or other vegetables.
- **Thick Slicer:** Produces thicker slices for various dishes.

# REIBEN FÜR DIE KÜCHE



Image: A visual representation of the five different drum blades (Fine Grater, Coarse Grater, Grinding Cone, Thin Slicer, Thick Slicer) and examples of the food textures they produce, such as shredded carrots, grated cheese, breadcrumbs, thin cucumber slices, and thick potato slices.

## Suitable Ingredients

This appliance is versatile and can process a wide range of ingredients, including but not limited to:

- Vegetables: Carrots, potatoes, cucumbers, onions, radishes, garlic.
- Fruits: Apples (firm varieties).
- Cheeses: Hard and semi-hard cheeses.
- Nuts: Almonds, walnuts, cashews.
- Other: Crackers, bread for breadcrumbs.



## Multifunktional

Nicht nur für Salate – zerkleinert und mahlt Zutaten für vielseitige Anwendungen.

Image: A selection of ingredients such as onions, nuts, radishes, potatoes, cheese, carrots, cucumbers, garlic, and crackers, demonstrating the wide range of foods that can be processed by the electric cutter.

## MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your appliance.

1. Always unplug the appliance before cleaning.
2. The motor base unit should be wiped clean with a damp cloth. Do not immerse it in water.
3. The drum container, rotating grater, and drum blades are detachable and can be easily cleaned under running water with a brush or sponge.
4. These detachable parts are also dishwasher safe for convenient cleaning.
5. Ensure all parts are completely dry before reassembling or storing.



### Spülmaschinenfest

Abnehmbare Teile können in der Spülmaschine gereinigt werden



### Leicht zu Reinigen

Abnehmbare Teile lassen sich einfach von Hand waschen

Image: Demonstrates that the detachable parts of the vegetable cutter are dishwasher safe for easy cleaning and can also be quickly rinsed by hand under running water.

## TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions:

| Problem                             | Possible Cause   | Solution  |
|-------------------------------------|--|---|
| Appliance does not turn on.         | Not plugged in; power outlet faulty; appliance not assembled correctly.                            | Check power connection; try a different outlet; ensure all parts are securely locked.   |
| Food gets stuck or motor struggles. | Ingredients are too large or too hard; chute is overfilled; blade is dull or incorrectly inserted. | Cut ingredients into smaller pieces; do not overfill; ensure blade is clean and correctly inserted. If blade is dull, consider replacement. |
| Uneven slicing/grating.             | Ingredients not fed evenly; blade not suitable for ingredient type.                                | Feed ingredients slowly and evenly; ensure the correct blade is selected for the desired result.  |

If the problem persists after attempting these solutions, please contact customer support.

## SPECIFICATIONS

- **Brand:** SUPERLEX
- **Model Number:** SEG001
- **Special Features:** Compact, Interchangeable Blade, One-button operation
- **Material:** Plastic, Stainless Steel
- **Recommended Uses:** Vegetables, Fruits, Cheese, Nuts
- **Package Dimensions:** 11.42 x 8.46 x 5.71 inches
- **Item Weight:** 3.61 pounds

# 5 in 1 Gemüseschneider



150W  
Motor



5  
Schneide  
einsätze



Edelstahl  
Klinge



Großer  
Einfüllschacht



Leicht zu  
reinigen



Image: An illustration detailing the dimensions of the SUPERLEX Electric 5-in-1 Vegetable Cutter, highlighting its 150W motor, 5 cutting inserts, stainless steel blades, large filling shaft, and ease of cleaning.

## WARRANTY AND SUPPORT

SUPERLEX products are manufactured to high-quality standards. For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official SUPERLEX website. Please have your model number (SEG001) and purchase date available when contacting support.