

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KAER](#) /

› [KAER Biometric Gun Safe Rifle 14-15 GUN Instruction Manual](#)

KAER 2412C-1447

KAER Biometric Gun Safe Rifle (Model 2412C-1447) Instruction Manual

Your guide to safe and secure firearm storage.

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your KAER Biometric Gun Safe Rifle. Please read all instructions carefully before assembly and operation to ensure proper functionality and security.

PRODUCT OVERVIEW

The KAER Biometric Gun Safe Rifle is designed for secure storage of firearms and valuables. It features a robust alloy steel construction, multiple access methods, and adjustable interior configurations.



Image: Front view of the KAER Biometric Gun Safe Rifle, showcasing its sleek black design and biometric keypad.

PACKAGE CONTENTS

Verify that all components are present and undamaged upon unpacking.

- User Manual
- Screwdriver
- External Power Box
- Expansion bolts (for mounting)
- Backup keys (2)
- Gun Racks (3)
- Gun Stock (1)
- Folding Lockers (1)
- Back Gun Bracket (1)
- Gun Bracket-R (1)

- Gun Bracket-L (1)
- Self-Tapping Screws (46)
- Bolts (4)
- Partition Buckle (various)

Your browser does not support the video tag.

Video: Product assembly video demonstrating the unpacking and initial setup of the gun safe components.

SETUP AND INSTALLATION

Assembly

The gun safe features a user-friendly, easy-to-assemble structure. Follow the included instructions and use the provided screwdriver and self-tapping screws for assembly. Ensure all panels are securely fastened.

Mounting

To prevent tipping, especially when the door is open and the safe is empty, it is highly recommended to anchor the safe to a wall or floor. Use the provided expansion bolts for secure mounting. The safe has four anchor points: two at the top rear and two at the bottom rear.

IT CAN BE USED IN MANY DIFFERENT SCENARIOS



Garage



Living Room



Bedroom

Image: The KAER gun safe shown installed in different environments such as a garage, living room, and bedroom, highlighting its versatile placement options.


OPERATING INSTRUCTIONS

Access Methods

Your KAER gun safe offers multiple secure access methods:

- **Emergency Key:** Use the provided backup keys for manual access.
- **Digital Keypad:** Enter your programmed digital password (3-12 digits).
- **Biometric Fingerprint:** Utilize advanced fingerprint scanning technology (stores up to 30 fingerprints).
- **Emergency Power Box:** In case of battery depletion, connect the external power box to temporarily power the keypad for access.

4 WAYS TO QUICK UNLOCKING

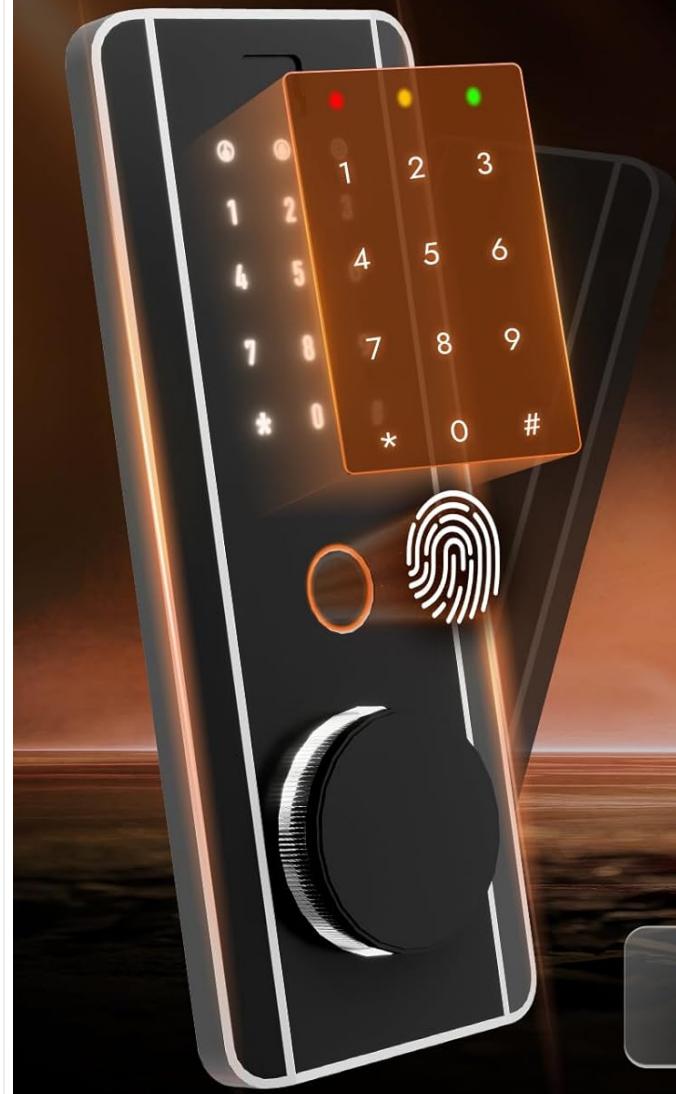

● Emergency Key (2 Keys)



● Digital Password (3-12 digits)



● Biometric Fingerprints (30 fingerprints)



● Emergency Power Box + Password (Fingerprint)



When the internal battery is low, you can use the external battery compartment to access the gun cabinet.

Image: Visual guide illustrating the four quick unlocking methods: Emergency Key, Digital Password, Biometric Fingerprints, and Emergency Power Box with Password/Fingerprint.

Setting Passwords and Fingerprints

To set or change your digital password or register fingerprints, locate the "SETTING BUTTON" inside the safe, usually near the battery compartment. Follow the specific instructions in the user manual for detailed steps.

Your browser does not support the video tag.

Video: Guide on how to set the password and register fingerprints for the gun safe's electronic lock.

FEATURES AND CAPACITY

The safe is designed to accommodate 13-15 firearms, including rifles, shotguns, and other long guns up to 45.5 inches in height. It also provides storage for compact handguns and accessories.

- **Adjustable Racks:** Removable racks allow for flexible configuration based on firearm height.
- **Pistol Storage:** An overhead storage compartment is included for handguns and accessories.

- **Internal Organization:** Door interior hooks and ammo storage boxes help keep contents organized.


THIS GUN SAFE HOLDS 13-15 LONG GUNS AND 5 HAND GUNS



! Features removable dividers and hanging compartments to accommodate firearms of varying lengths.

Image: An open view of the gun safe's interior, demonstrating its capacity for multiple long guns and handguns, with dimensions indicated.

MODULAR GUN RACKS AND MULTIFUNCTIONAL FOLDING LOCKER

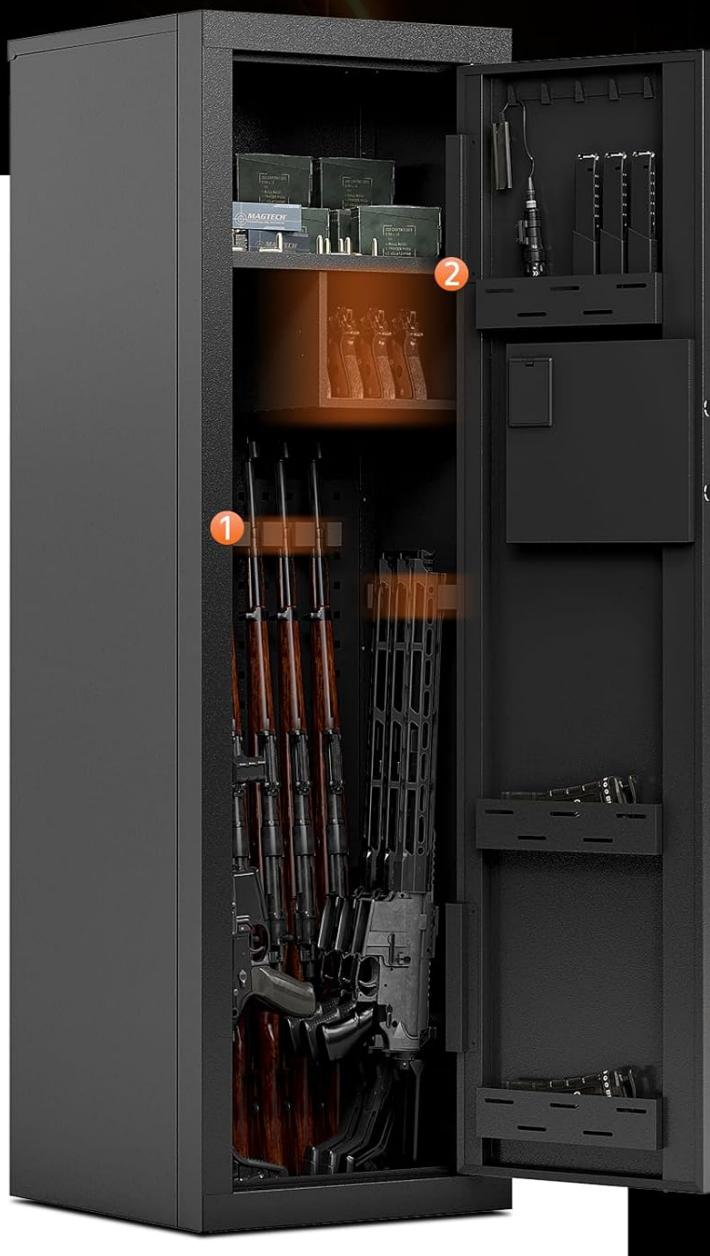

① Modular Gun Racks



② Folding Locker

Image: Close-up view of the modular gun racks and a folding locker within the safe, illustrating internal storage flexibility.

SECURITY FEATURES

Constructed from heavy-duty 15-gauge cold-rolled steel, the safe provides robust protection against unauthorized access. Its rugged design ensures long-term reliability.

Alarm System

The safe includes a built-in alarm system. The alarm will activate if the fingerprint or password is incorrectly entered continuously, or if the gun cabinet is shaken violently. A silent mode can be activated to disable audible alerts.

SILENT MODE AND BUILT-IN ALARM SYSTEM



Image: Depiction of the safe's alarm mode, triggered by incorrect entries or violent shaking, and the silent mode option.

RELIABLE MILITARY PROTECTION THICKENED

Thicker door panel for better prying and burglary prevention (15 guage)



Image: Illustration of the safe's thickened door panel and lock bolts, emphasizing its robust anti-pry and anti-burglary features.

SPECIFICATIONS

Feature	Detail
Brand	KAER
Product Dimensions	15.8"D x 18.5"W x 57"H
Lock Type	Biometric, Electronic Combination Lock, Key
Color	Black
Capacity	13-15 Firearms (up to 45.5" height), 13 Cubic Yards
Material	Alloy Steel, Carbon Steel (15-gauge cold-rolled steel)

Special Features	Adjustable Shelf, Anti-Tipping, Biometric Fingerprint, Heavy Duty
Mounting Type	Floor Mount, Under Counter Mount, Wall Mount
Item Weight	78 Pounds
Model Number	2412C-1447
UPC	749614638291

MAINTENANCE

Battery Replacement

The electronic lock requires 4 AA alkaline batteries. Ensure to replace all batteries simultaneously and avoid mixing different brands or types of batteries. If the internal battery is low, use the external power box for temporary access.

General Care

Regularly inspect the safe for any signs of wear or damage. Keep the exterior clean with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

TROUBLESHOOTING

Alarm Activation

If the alarm activates due to incorrect password/fingerprint entries or violent shaking, ensure correct access attempts. The alarm will sound for 30 seconds after multiple incorrect attempts.

Lost Access / Dead Batteries

If the batteries die and you cannot access the safe via digital means, use the provided backup keys. Alternatively, connect the external power box to the designated port on the keypad to temporarily restore power and use your digital password or fingerprint.

WARRANTY AND SUPPORT

KAER offers a 365-day warranty service for this product. We also provide 30 days money-back and replacement, along with lifelong after-sales service. For any questions or concerns regarding your product, please contact us via email. Our customer support team aims to respond quickly within 8 hours.

