

[Manuals.plus](#) /

› [World Tech Toys](#) /

› World Tech Toys Transformers Bumblebee LED Dancing Robot Instruction Manual

World Tech Toys Bumblebee LED Dancing Robot

World Tech Toys Transformers Bumblebee LED Dancing Robot Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and effective operation of your World Tech Toys Transformers Bumblebee LED Dancing Robot. Please read these instructions carefully before use and retain them for future reference. This interactive toy features LED lights, sound effects, music, and gesture control, designed for users aged 6 and above.



WAVE & GO FUN WITH GESTURE-ACTIVATED CONTROL

Hands-free, screen-free fun with your favorite Transformers characters: Optimus Prime, BumbleBee or Megatron

A front view of the World Tech Toys Bumblebee LED Dancing Robot, showcasing its yellow and black design, ready for interactive play.

SETUP

Battery Installation

The Bumblebee LED Dancing Robot requires 3 AA batteries (included) for operation. Follow these steps to install or replace batteries:

1. Locate the battery compartment on the back of the robot.
2. Using a small Phillips head screwdriver, carefully unscrew the battery compartment cover.
3. Insert 3 new AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.
5. Remove the plastic battery tab if present before first use.



Includes 3 AA Batteries

Instant out-of-the-box play



No Remote Required

Simple gesture controls for intuitive play



Immersize Play Experience

Built-in lights, music, and movement



Dance Mode & Light Mode

Choose between interactive or relaxed fun

This image displays the rear of the Bumblebee robot, highlighting the battery compartment cover. The compartment requires three AA batteries for operation.

Power On/Off

To turn the robot on, locate the power switch, usually on the back or base of the unit, and slide it to the 'ON' position. To turn it off, slide the switch to the 'OFF' position.

OPERATING INSTRUCTIONS

The Bumblebee LED Dancing Robot offers interactive play through gesture control and various modes.

Gesture Control

The robot is equipped with gesture-activated sensors. Wave your hand in front of the robot to initiate its dance moves and activate its features. No remote control is required for this function.



An icon of a hand waving, illustrating the robot's gesture-activated control system.



**For Ages 6+ (and Big Kids too!)
& Transformers Fan Approved**



**Batteries Included and
No Assembly Required**



**Durable Materials,
Built for Interactive Play**



**The Perfect Gift Idea for
Kids & Collectors Alike**



This image shows a child interacting with the Bumblebee robot using a hand wave, illustrating the gesture control feature.

Dance Mode

In Dance Mode, the robot performs animated movements accompanied by built-in music and sound effects. Activate this mode through gesture control or by pressing the designated button (if available, refer to packaging for exact button location).



An icon depicting musical notes, symbolizing the robot's integrated sound effects and music playback capabilities.

Light Mode

The robot features flashing LED lights, particularly in its eyes. In Light Mode, these LEDs illuminate, often synchronized with classic Transformers theme songs. This mode can be activated alongside or independently of Dance Mode, depending on the specific model's functionality.



An icon showing an LED light, indicating the robot's ability to light up during operation.

OFFICIALLY LICENSED BY **HASBRO.**

BUMBLEBEE



OPTIMUS PRIME



MEGATRON



Crafted with **authentic** Transformers branding, these officially licensed interactive figures deliver **excitement** for kids and **nostalgia** for fans.

A detailed view of the Bumblebee robot's head, featuring its bright blue LED eyes, indicating the light-up function.

Official Product Video

Your browser does not support the video tag.

This video demonstrates the World Tech Toys Transformers Bumblebee LED Dancing Robot in action, showcasing its dance moves, LED lights, and integrated sound and music features.

MAINTENANCE

Cleaning

To clean the robot, gently wipe its surface with a soft, dry cloth. Do not use harsh chemicals, abrasive cleaners, or immerse the robot in water, as this can damage electronic components.

Storage

When not in use for extended periods, store the robot in a cool, dry place away from direct sunlight. Remove the batteries

to prevent leakage and potential damage to the toy.

TROUBLESHOOTING

- **Robot Not Turning On:** Ensure the power switch is in the 'ON' position. Check that the batteries are correctly installed with the proper polarity and are not depleted. Replace batteries if necessary.
- **Robot Not Responding to Gestures:** Ensure there are no obstructions between your hand and the robot's sensors. Try waving your hand closer or with a clearer motion. Check battery levels.
- **Sound or Lights Not Working:** Verify that the robot is powered on and batteries are fresh. If only one feature is not working, contact customer support.
- **Unexpected Behavior:** Turn the robot off and then on again to reset it. If issues persist, replace batteries.

SPECIFICATIONS

Feature	Detail
Brand Name	World Tech Toys
Model Name	Bumblebee LED Dancing Robot
Model Number	36575
Character	Bumblebee
Toy Figure Type	Action Figure
Material Type	Plastic
Color	Yellow/Black
Item Dimensions (L x W x H)	3.5" x 6.5" x 8"
Item Weight	0.23 Pounds
Manufacturer Minimum Age	72 Months (6 Years)
Assembly Required	No
Batteries Required	Yes
Number of Batteries	3 AA batteries
Operation Mode	Gesture-Activated with Manual/Automatic Modes
Additional Features	Gesture Control, LED Lights, Sound Effects, Music

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact World Tech Toys customer service directly. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FZF7PQ74>

More documents and user manuals: <https://manuals.plus/>