

## Roku 24R2D5

# Roku Select Series 24-Inch 720p HD Smart TV User Manual

MODEL: 24R2D5

## 1. Setup

This section guides you through the initial setup of your Roku Select Series 24-Inch 720p HD Smart TV.

### 1.1 Unboxing and Package Contents

Carefully remove all components from the packaging. Ensure all items listed below are present:

- Roku Select Series 24-Inch 720p HD Smart TV
- Roku Voice Remote (with 2 AAA batteries included)
- TV Stand (2 pieces) and Screws
- Power Cable
- User Manual (this document)

### 1.2 Attaching the TV Stand

Place the TV screen-down on a soft, clean surface to prevent scratches. Align the stand pieces with the designated slots on the bottom of the TV. Secure the stand using the provided screws. Ensure the stand is firmly attached for stability.

# America's #1 TV streaming platform

Based on hours streamed—Hypothesis Group

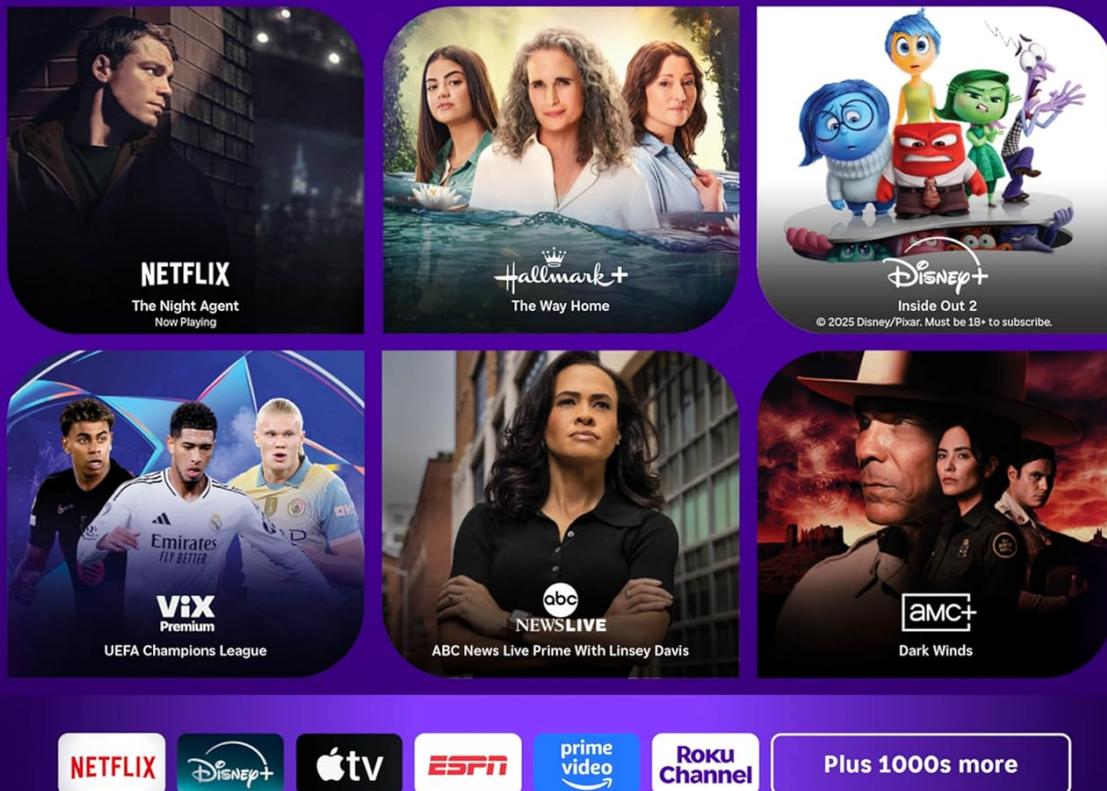


Image: Roku Select Series 24-Inch TV with its remote and stand components laid out for assembly.

## 1.3 Powering On and Initial Setup

Connect the power cable to the TV and a power outlet. Insert the AAA batteries into the Roku Voice Remote. Press the power button on the remote to turn on the TV. Follow the on-screen instructions to select your language, connect to your Wi-Fi network, and activate your Roku account. A Roku account is required to access streaming features.

## 1.4 Connecting External Devices

Your TV includes multiple HDMI ports for connecting external devices such as gaming consoles, Blu-ray players, or cable boxes. Refer to the image below for port locations.

# A perfect fit for any smart home

Sports

Search

Streaming Store

Settings

*"Alexa, show me comedies on living room Roku."*



Roku, the Roku logo, Roku Smart Home, and the Roku Smart Home logo are the trademarks or registered trademarks of Roku, Inc. Only supports English language. Apple, Apple Home, AirPlay, and Siri are trademarks of Apple Inc., registered in the U.S. and other countries and regions. The Works with Apple Home badge is a trademark of Apple Inc. Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates. Alexa enabled device is required to work with Alexa. Google and Google Home are trademarks of Google LLC. Third party features and services may be subject to change or removal without notice.

Image: Rear view of the Roku Select Series TV, highlighting the HDMI, USB, and optical audio ports for connecting various devices.

## 2. Operating

Learn how to navigate your Roku Smart TV and access its features.

### 2.1 Roku Home Screen Navigation

The Roku Home Screen provides easy access to all your streaming channels, inputs, and settings. Use the directional pad on your remote to navigate through the menu options on the left and the app tiles on the right.

# A smart TV that makes sense

Powered by the delightfully simple Roku experience



  
Clear HD picture

  
Bluetooth® Headphone Mode

  
Dolby Audio®

Image: The Roku TV home screen, showing a selection of streaming applications and the main navigation menu.

## 2.2 Using the Voice Remote

The Roku Voice Remote allows for convenient control of your TV. Press the voice button and speak commands to search for content, launch apps, or control playback. Dedicated shortcut buttons provide instant access to popular streaming services.

# No-nonsense voice remote



Voice search  
& control



TV controls



Simple setup



App  
shortcuts

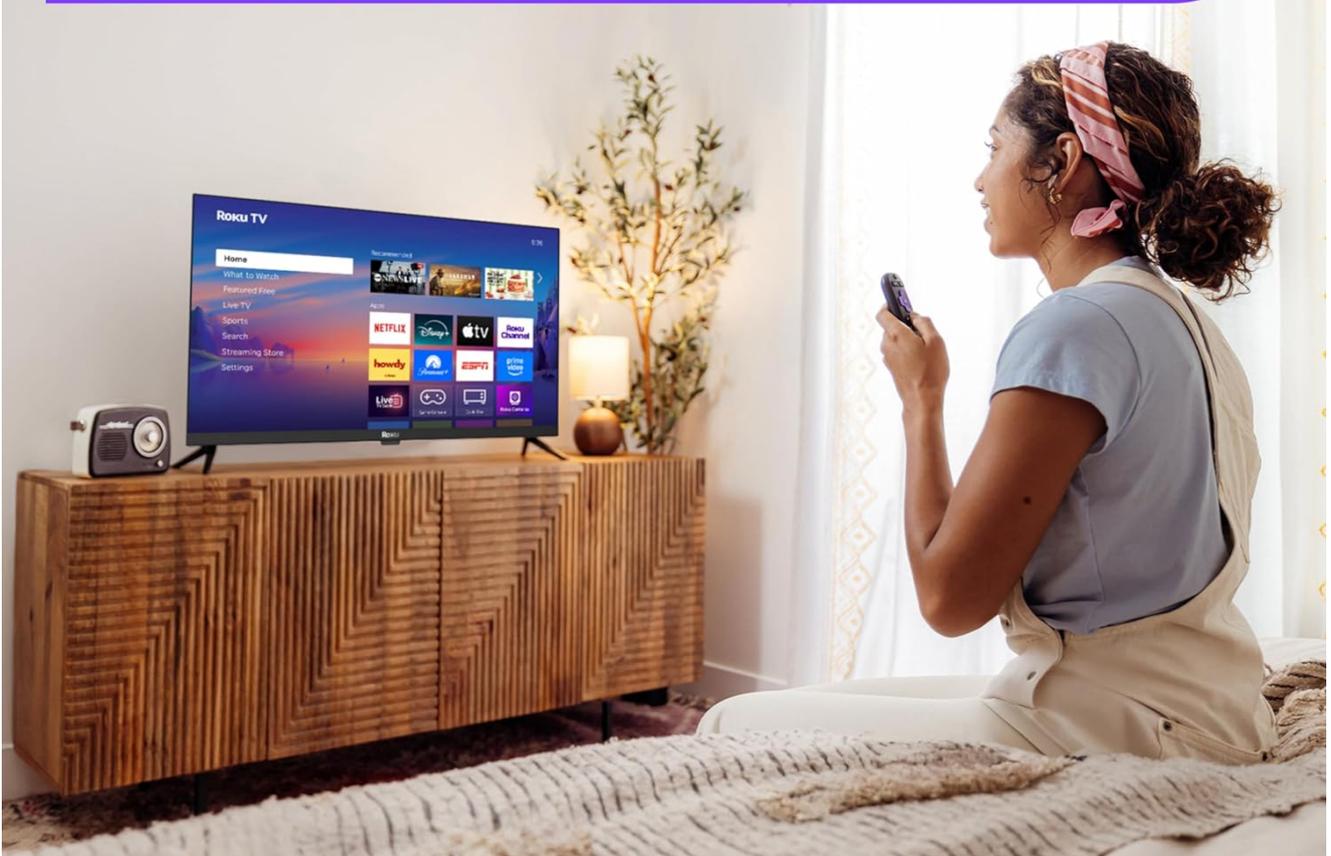


Image: The Roku Voice Remote, featuring a voice search button, standard TV controls, and quick access buttons for popular streaming apps.

## 2.3 Streaming Apps and Live TV

Access thousands of streaming apps, including Netflix, Hulu, Disney+, and more, directly from your home screen. The Roku TV also offers access to free live television channels through the Live TV menu option.

## 2.4 Bluetooth Headphone Mode

Connect your favorite wireless headphones via Bluetooth for private listening. This feature allows you to enjoy your entertainment without disturbing others.

# Home sweet home screen

Jump right in with a home screen that easily gets you to what you want to watch fast.

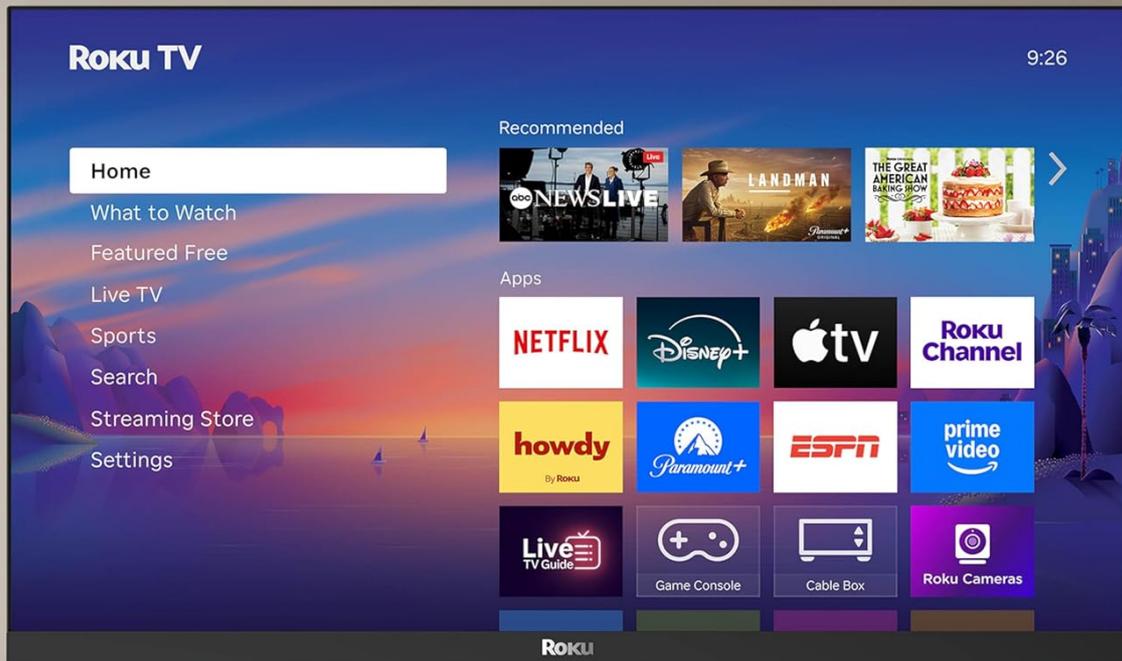


Image: A child wearing wireless headphones, demonstrating the Bluetooth Headphone Mode feature of the Roku TV.

## 2.5 Official Product Overview Video

Your browser does not support the video tag.

Video: An official product video from Roku, Inc. providing an overview of the Roku Select Series TV features and user experience.

## 3. Maintenance

Proper maintenance ensures the longevity and optimal performance of your TV.

### 3.1 Cleaning the TV

To clean the screen, gently wipe it with a soft, dry, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a screen cleaner specifically designed for TVs. Avoid using harsh chemicals or abrasive materials. Clean the TV's exterior with a soft, dry cloth.

## 3.2 Software Updates

Your Roku TV receives automatic software updates to ensure you have the latest features and improvements. Ensure your TV is connected to the internet for these updates to download and install seamlessly.

## 4. Troubleshooting

This section addresses common issues you might encounter with your Roku TV.

### 4.1 No Power or Display

- Ensure the power cable is securely connected to both the TV and a working power outlet.
- Check if the power outlet is functional by plugging in another device.
- Verify that the remote control batteries are fresh and correctly inserted.

### 4.2 Wi-Fi Connectivity Issues

- Restart your Wi-Fi router and modem.
- Go to **Settings > Network > Set up connection** on your TV to re-establish the Wi-Fi connection.
- Ensure the TV is within range of your Wi-Fi router.

### 4.3 Picture Quality Adjustments

The Roku Smart Picture feature automatically optimizes incoming TV signals. You can also manually adjust picture settings:

- Navigate to **Settings > Picture settings**
- Choose from preset picture modes like Standard, Vivid, Sports, or Movie.
- For advanced adjustments, select 'Customize picture' to modify backlight, brightness, contrast, sharpness, color, and tint.

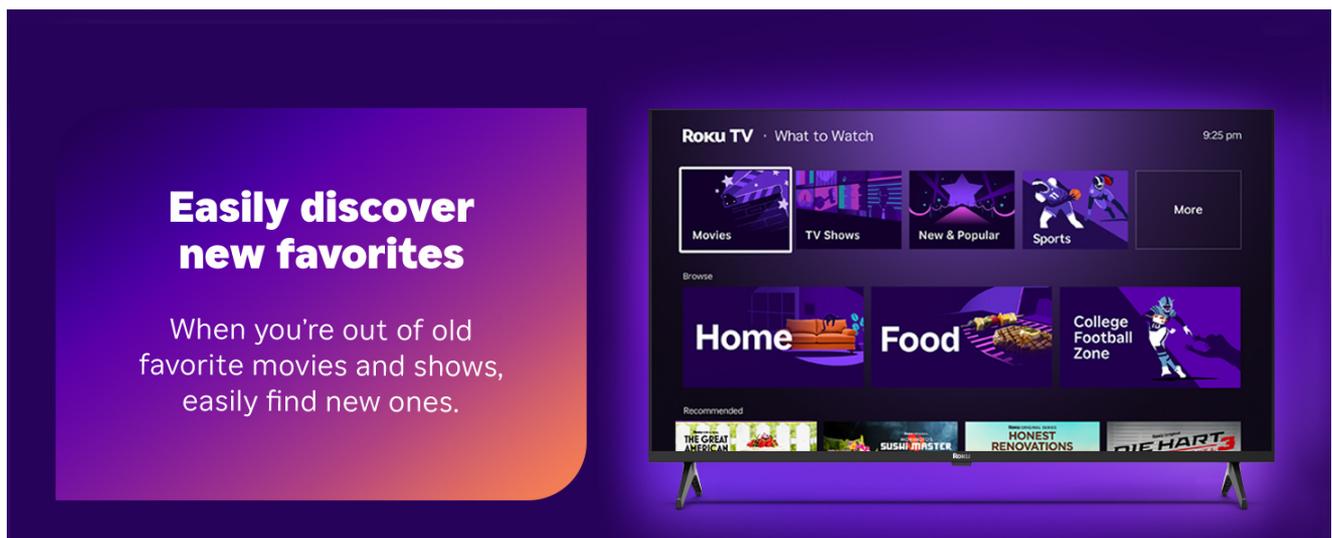


Image: The Roku TV screen showing the Picture Mode settings menu, with options like Roku Smart Picture, Low power, Standard, Vivid, Sports, and Movie.

### 4.4 Sound Quality Adjustments

Your TV features Dolby Audio for clear speech and louder sound. Adjust sound settings via **Settings > Audio**. Options include:

- **Sound Mode:** Select from Standard, Dialogue, Movie, Music, or Night.
- **Speech Clarity:** Enhances dialogue for easier listening.
- **Volume Mode:** Options like Leveling to maintain consistent volume across content.

## 5. Specifications

Feature	Specification
Product Dimensions (D x W x H)	7" x 21.1" x 14.3"
Item Weight	5.7 pounds
Screen Size	24 Inches
Display Technology	LED
Resolution	720p
Refresh Rate	60 Hz
Connectivity Technology	Bluetooth, Wi-Fi
Special Features	Bluetooth Headphone Mode, Dolby Audio, Voice Remote
Included Components	Power Cable, Remote Control, Stand, User Manual
Model Number	24R2D5

# Unbelievably free live TV

Enjoy 500+ channels with live news and weather, sports coverage, and more—totally free.



**24/7 streaming channels**

Image: The Roku Select Series TV with its key dimensions (width, height, depth) clearly indicated.

## 6. Warranty and Support

For warranty information and technical support, please refer to the official Roku website or contact Roku customer service. Keep your purchase receipt for warranty claims.