

PRETZI B0FZTG7DYG

PRETZI 60 inch Modern TV Stand with 18 inch Electric Fireplace

Model: B0FZTG7DYG

INTRODUCTION

Thank you for choosing the PRETZI 60 inch Modern TV Stand with 18 inch Electric Fireplace. This manual provides essential information for the safe assembly, operation, and maintenance of your new entertainment center. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

SAFETY GUIDELINES

To ensure safe use and prevent damage, please observe the following:

- Exercise caution around sharp edges during assembly and handling.
- Handle all components with care to avoid damage.
- Keep the electric fireplace and surrounding area clear of flammable materials.
- Always follow the assembly instructions precisely.
- Never leave the electric fireplace unattended while it is in operation.
- Ensure the TV stand is placed on a stable, level surface.


PACKAGE CONTENTS

Your PRETZI TV Stand with Electric Fireplace is shipped in two separate packages due to its size. You should receive:

- One (1) TV Stand package
- One (1) Fireplace Insert package

These packages may be delivered on different days. Please wait for both packages to arrive before beginning assembly.

Oak

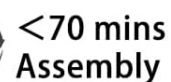

- **Fluted Panel Design:** The cabinet features a modern fluted panel design.
- **Smooth Curved Edges:** Rounded corners are incorporated for safety and aesthetic appeal.
- **Flexible Sliding Doors:** The doors are designed to slide smoothly to conceal or reveal storage compartments.
- **Adjustable Shelves:** The internal shelves offer 5-position adjustability to customize storage space.



Image: Design Features Overview. This image points out the fluted panel design, spacious desktop, smooth curved edges, chic metal handles, the 18-inch fireplace insert, and the flexible sliding doors.

Softly Curved Ends

Featuring rounded corners for safety, the design helps prevent injuries from accidental impacts.



Round Corners

Image: Softly Curved Ends. A detailed view of the TV stand's rounded corners, designed to prevent injuries from accidental impacts.

5-Position Adjustable Shelves



Image: 5-Position Adjustable Shelves. This image illustrates the flexibility of the internal shelves, which can be adjusted to five different height positions to accommodate various items.

OPERATING THE ELECTRIC FIREPLACE

The built-in 18-inch electric fireplace provides realistic flame and log effects, along with heating functionality. It can be operated with or without heat, allowing for year-round use.

 
Controls:

The fireplace can be controlled via the integrated touch screen panel on the unit or with the included remote control.

- **Flame Speed/Brightness:** Choose from 5 levels of flame speed and brightness (L1-L5) to set your desired ambiance.
- **Heater Function:** Activate or deactivate the heating element.
- **Timer:** Set an 8-hour timer for automatic shut-off.



18" Fireplace with 5 Level Brightness and Speed

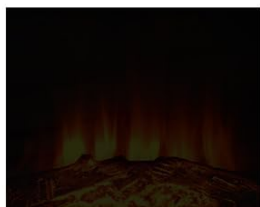

L1



L2



L3



L4



L5

Image: Fireplace Flame Brightness and Speed. This image demonstrates the five adjustable levels (L1-L5) for the flame's brightness and speed, allowing users to customize the visual effect.

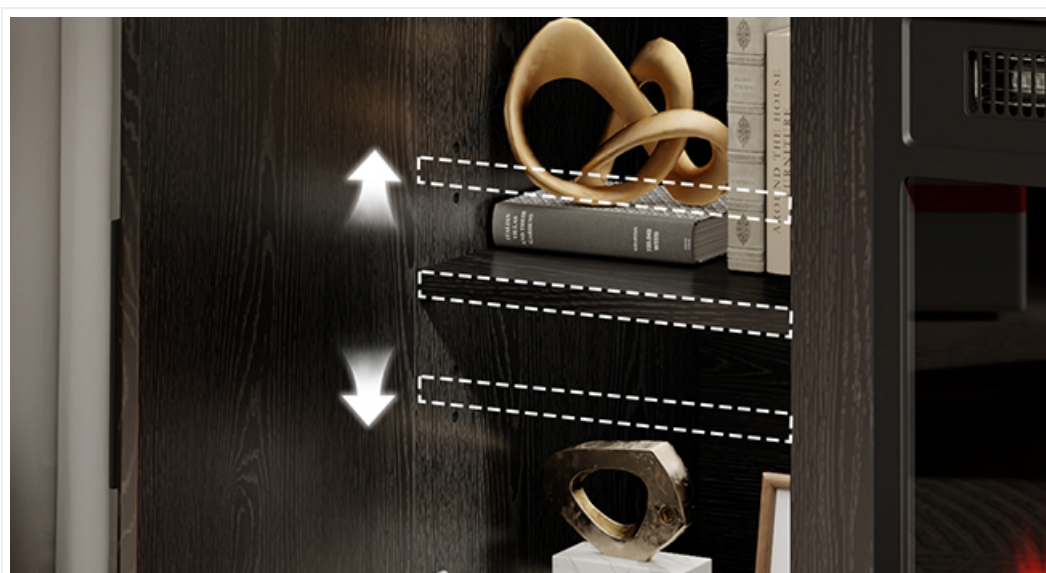 


Image: Fireplace Control Panel. This close-up shows the touch screen panel on the fireplace insert, detailing the buttons for various functions like power, heater, flame speed, dimmer, and timer.

CARE AND MAINTENANCE

Proper care and maintenance will extend the life and appearance of your TV stand and fireplace.

- **Cleaning the Stand:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the engineered wood finish.
- **Cleaning the Fireplace:** Ensure the fireplace is turned off and unplugged before cleaning. Use a soft, dry cloth to clean the exterior. Do not spray liquids directly onto the unit.
- **General Care:** Periodically check all connections and fasteners to ensure they remain tight. Avoid placing excessively hot or wet items directly on the surface without protection.

TROUBLESHOOTING

If you encounter any issues with your PRETZI TV Stand or Electric Fireplace, please refer to the following common solutions:

- **Fireplace Not Turning On:** Ensure the power cord is securely plugged into a functional outlet. Check if the main power switch on the fireplace unit is in the 'ON' position.
- **No Heat Output:** Verify that the heater function is activated on the control panel or remote. Ensure the air intake and exhaust vents are not blocked.
- **Sliding Doors Sticking:** Check the tracks for any obstructions or debris. Ensure the doors are properly aligned within their grooves. Avoid forcing the doors, as this may cause them to come off track.
- **Unstable Stand:** Confirm that all assembly screws and fasteners are tightened. Ensure the stand is placed on a flat, even surface.

For issues not covered here, please contact customer support.

PRODUCT SPECIFICATIONS

Brand	PRETZI
Model Number	B0FZTG7DYG
Color	Black
Size	60 inch
Item Dimensions (L x W x H)	60 x 15.75 x 23.3 inches
Item Weight	76.28 Pounds
Material Type	Engineered Wood
Style	Modern
Required Assembly	Yes
Included Components	Fireplace, TV Stand

WARRANTY INFORMATION

Specific warranty details for this product are not provided in this manual. For information regarding product warranty, please contact PRETZI customer support directly or refer to the documentation included with your purchase.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need further support, please contact the PRETZI customer service team. They are available to help you with any inquiries regarding your product.

Manufacturer: PRETZI

Please refer to your purchase documentation or the PRETZI official website for the most current contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question