

[Manuals.plus](#) /

› [Gemini Sound](#) /

› Gemini GEBX-100 True Wireless Earbuds Instruction Manual

Gemini Sound GEBX-100

Gemini GEBX-100 True Wireless Earbuds Instruction Manual

Model: GEBX-100 | Brand: Gemini Sound

INTRODUCTION

Thank you for choosing the Gemini GEBX-100 True Wireless Earbuds. These earbuds are designed to provide a seamless audio experience with advanced features for everyday use. Enjoy clear sound, stable connectivity, and convenient controls for music, calls, and more.

WHAT'S IN THE BOX

- GEBX-100 True Wireless Earbuds (Left and Right)
- Compact Charging Case
- USB-C Charging Cable
- User Manual

PRODUCT OVERVIEW

The Gemini GEBX-100 earbuds feature a modern stemmed design for a secure and comfortable fit. The compact charging case ensures your earbuds are always ready for use.



**TRUE WIRELESS.
REAL SOUND.
DESIGNED FOR YOU.**

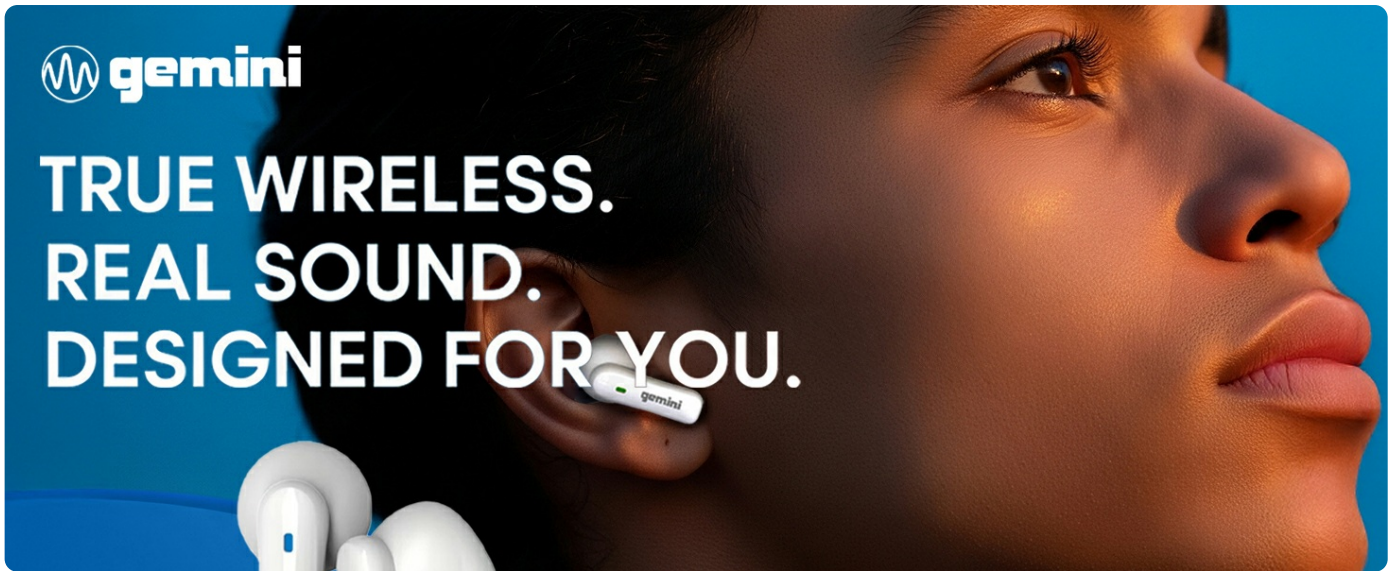


Image: Woman wearing Gemini GEBX-100 earbuds, highlighting the comfortable and secure stemmed design.

**All-Day Comfort | Secure
Stemmed Design**

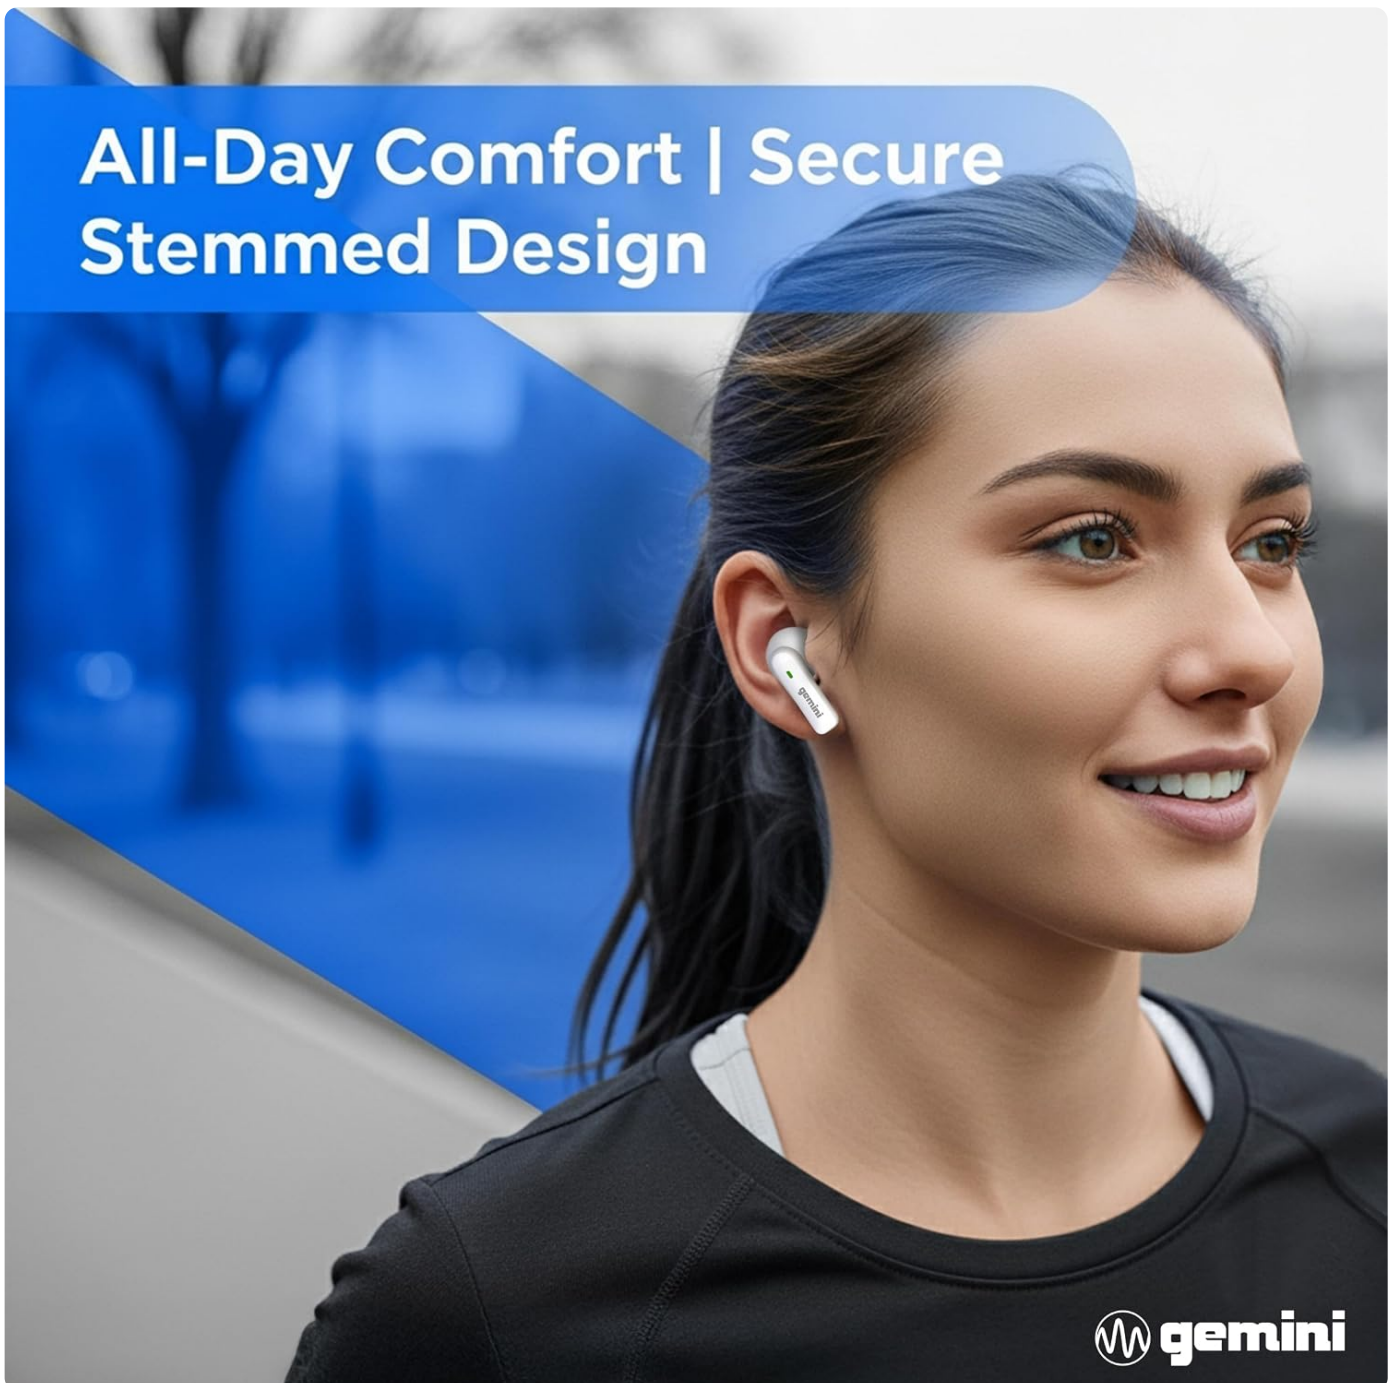


Image: The Gemini GEBX-100 True Wireless Earbuds resting inside their compact charging case.



Image: The Gemini GEBX-100 True Wireless Earbuds displayed outside their charging case.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case. Connect the provided USB-C cable to the charging port on the case and a compatible USB power source. The indicator light on the case will show charging status.



EASY USB-C CHARGING STAY POWERED UP EVERYWHERE



Image: The USB-C charging port on the Gemini GEBX-100 charging case with the cable connected.

2. Pairing with Your Device

1. Ensure the earbuds are in the charging case and the case is open.
2. On your device (smartphone, tablet, laptop), go to Bluetooth settings and turn Bluetooth on.
3. Select "GEMINI GEBX-100" from the list of available devices.
4. Once connected, the earbuds will indicate successful pairing (e.g., a steady blue light or voice prompt).



Image: Gemini GEBX-100 earbuds demonstrating fast and stable Bluetooth 5.4 pairing with various devices.

Video: Gemini GEBX-100 Overview

Video: An overview of the Gemini GEBX-100 earbuds, demonstrating their features and ease of use.

OPERATING INSTRUCTIONS

Touch Controls

The GEBX-100 earbuds feature intuitive touch controls on each earbud for easy management of your audio and calls.

- **Single Tap:** Play/Pause music, Answer/End call.
- **Double Tap (Left Earbud):** Decrease volume.
- **Double Tap (Right Earbud):** Increase volume.
- **Triple Tap (Left Earbud):** Previous track.
- **Triple Tap (Right Earbud):** Next track.
- **Long Press (2 seconds):** Activate voice assistant (Siri, Google Assistant).



Image: Visual guide to the touch controls for music, calls, and voice assistant on the earbuds.

Calls and Microphone

The built-in microphone with integrated noise reduction ensures clear voice transmission during calls, even in noisy environments.



Image: A man using the Gemini GEBX-100 earbuds for a phone call, highlighting the clear call quality with noise reduction.

Audio Quality

Equipped with dual 13mm NdFeB dynamic drivers, these earbuds deliver full-range stereo sound with deep bass, clear mids, and detailed highs, suitable for various audio content.



Image: An exploded view of the Gemini GEBX-100 earbud, showcasing its dual 13mm drivers for rich stereo audio.

MAINTENANCE

- **Cleaning:** Regularly wipe the earbuds and charging case with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and ensure they remain charged.
- **Water Resistance:** The earbuds are water-resistant. Avoid submerging them in water or exposing them to excessive moisture.

TROUBLESHOOTING

Issue	Solution
Earbuds not pairing	Ensure earbuds are charged and in pairing mode. Turn off and on your device's Bluetooth. Forget the device in Bluetooth settings and re-pair.
No sound	Check device volume and earbud volume. Ensure earbuds are properly seated in your ears. Reconnect Bluetooth.
Intermittent connection	Ensure no obstructions between earbuds and device. Keep device within 10 meters range. Avoid strong electromagnetic interference.
Earbuds not charging	Ensure charging cable is securely connected. Check if the charging case has power. Clean charging contacts on earbuds and case.

SPECIFICATIONS

Feature	Detail
Brand	Gemini Sound
Model Number	GEBX-100
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.4
Bluetooth Range	Up to 10 Meters (33 feet)
Audio Driver Type	Dynamic Driver
Driver Size	13mm
Frequency Range	20 Hz - 20 KHz
Battery Average Life (Earbuds)	Up to 3.5 Hours
Carrying Case Battery Average Life	Up to 4 Hours (additional charges)
Charging Port	USB-C
Control Method	Touch
Water Resistance Level	Water Resistant
Material	Plastic
Color	White

WARRANTY & SUPPORT

The Gemini GEBX-100 True Wireless Earbuds come with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your product performs as expected under normal use.

For technical support, warranty claims, or any questions regarding your product, please visit the official Gemini Sound website or contact their customer service directly. Please retain your proof of purchase for warranty service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question